


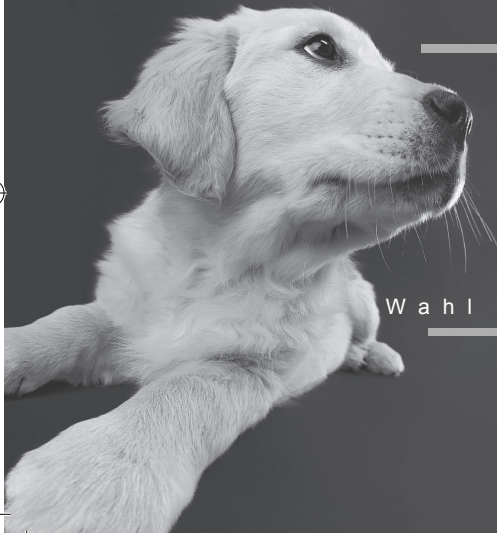

Wahl Hairdryer Instruction Booklet:
9951-817



PET PAW TRIMMER

Wahl pet home grooming



**WAHL®**

Where the world goes to look good.

Wahl pet home grooming

When using your trimmer, basic precautions should always be followed, including the following:
Read all instructions and safeguards before using this trimmer.

WARNING

1. Close supervision is necessary when this appliance is used on or near pets or animals.
2. Use this appliance only for its intended use, as described in these instructions. Do not use attachments not recommended by the manufacturer.
3. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
4. Do not use this appliance with a damaged or broken blade as injury may occur.
5. When discarding old batteries, do not throw them into a fire where heat could cause them to rupture. Also, do not attempt to recharge alkaline, heavy-duty or regular batteries in a nickel-cadmium battery recharger.

6. The blades on your trimmer have fine teeth for precise cutting. Handle carefully when against the skin in order to avoid scratching.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
8. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.





Where the world goes to look good.

WAHL®

Wahl pet home grooming

OPERATING INSTRUCTIONS

BATTERY INSTALLATION / REPLACEMENT

1. Remove the battery compartment cover from the back of the trimmer by sliding it down in the direction of the arrow.
2. Insert one AA alkaline battery with the positive (+) end pointing up. Wahl recommends an ENERGIZER brand battery.
3. Replace the battery cover to its original position.
4. To maximize battery life, trimmer should be shut "off" immediately after each use.

BEFORE TRIMMING

1. Remove the protective blade cover.
2. Apply a small drip of oil onto the blades and switch the trimmer on to aid dispersal of the oil.
3. Switch the trimmer off and wipe away any excess oil.
4. The trimmer is now ready to begin working for you.

USES

This product can be used to trim hair from any small areas on your pet. It is ideally suited to trimming hair around ears, paws and between the pads. The hair should be clean and dry to ensure maximum efficiency from your trimmer.

1. Switch the trimmer "on".
2. Hold the trimmer as you would a pencil with the on/off switch facing upwards.
3. Guide the blades to the area to be trimmed and slowly pass the blades through the hair to be trimmed.
4. Always keep the flat side of the blade face down to avoid injury.



Where the world goes to look good.

Wahl pet home grooming

EXTREME care must be taken at all times to ensure no injury is caused to the animal. The cutting edge of the blade should never be pushed into the skin. This product may tickle your pet when used on the underside of feet or between the pads.

Clean your trimmer after each use. Turn the trimmer "off" and slide the cleaning brush down and out of its groove in the trimmer body. Brush hairs from the cutting blade and oil the blade before storage. This will prevent rust and deterioration of the cutting blade.

DO NOT wash or rinse any part of the trimmer with water.

Before storing this trimmer apply a drop of oil to the blade and turn the trimmer "on" for one or two seconds to evenly distribute the oil. This will prevent your blade from rusting whilst not in use. Always replace the protective blade cover before storing the trimmer.

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at www.wahl.co.uk



WAHL®

Where the world goes to look good.

Wahl pet home grooming

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of twenty four months from the date of original purchase or receipt as a gift.


The guarantee becomes invalid in the case of misuse or repair by unauthorised persons.

Should this product become defective during the warranty period, return it to the store of purchase.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)

At the end of this products life it should not be disposed of with general household waste.

Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.

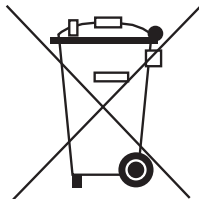

**WAHL®**

Wahl pet home grooming

Part of the Wahl Range of Electrical Appliances

Everyone knows Wahl is the No.1 clipper manufacturer, we also have the following product ranges:

The Wahl Clipper Corporation

Wahl was founded in Sterling, USA, when in 1919 Mr Leo J Wahl invented the worlds first hand held electromagnetic hair clipper



and sold it to local barbers. Since then the Wahl group have expanded globally into Europe, South America, Asia and Australia, with 6 manufacturing/distribution plants and 6 dedicated distribution centres, distributing quality Wahl products to over 160 countries globally. **Wahl - where the world goes to look good!**



WAHL®


Wahl pet home grooming

Wahl (UK) Ltd.

Founded in 1987 Wahl (UK) have successfully introduced innovative technology to the pet care market for 20 years.

Wahl - No.1 for Pet Care Clipper and Trimmers.

Throughout our ranges the Wahl brand ensures quality products and outstanding customer care.

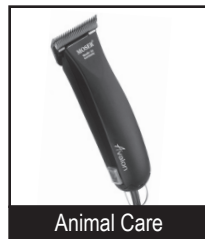

See our website for further details;
www.wahl.co.uk



WAHL (UK) LIMITED
 HERNE BAY TRADE PARK, SEA STREET
 HERNE BAY, KENT, CT6 8JZ.
 TECHNICAL SUPPORT TEL: 01227 744331
 CUSTOMER CARE TEL: 01227 740066
 www.wahl.co.uk

Form No. 58913
 Rev0-02/09

PET PAW TRIMMER

Wahl pet home grooming

