

WAHL®

MINI PRO TRIMMER



Please read this instruction manual carefully and familiarise yourself with your new WAHL Mini Pro before using for the first time.

READ ALL INSTRUCTIONS BEFORE USING.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:-

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should always be supervised to ensure they do not play with the appliance.
2. Use this trimmer only for its intended use, as

described in this manual. Do not use attachments not recommended by the manufacturer.

3. Do not use this trimmer with a damaged or broken blade as injury may occur.
4. When discarding an old battery, do not throw it into fire where heat could cause it to rupture or explode. Also do not attempt to recharge alkaline, heavy duty or regular batteries in a battery charger.

OPERATING INSTRUCTIONS

BATTERY INSTALLATION

1. Remove battery cover from trimmer by pushing in and back on the battery cover in the direction of the arrow.
2. Important: Be sure to insert the negative (-) end of each battery first, so that it depresses the spring at the top of the battery compartment. Then slide the positive (+) end into position. Do not allow the negative terminal clips to bend and cut the casing of the batteries.

Use alkaline batteries with your Wahl product. Alkaline batteries will provide the longest operating time before battery replacement is needed.

3. Replace the battery cover to its original position.
4. Move switch to 'ON' position.
5. To maximize battery life, trimmer should be shut off immediately after using.

TROUBLESHOOTING

If your product fails to operate when switched 'ON' check your batteries to see if they are properly installed. Positive end should be located as shown in battery housing. Make sure switch is in the 'ON' position and check to be sure blades are free to move. If blades become clogged, manually pushing the blades back and forth a few times while unit is turned 'OFF' may help free the blades and allow the trimmer to operate. If it still does not operate, your batteries have probably exceeded their useful life.

BEFORE CUTTING HAIR

1. Your product should be clean, oiled and in perfect working condition.
2. Position the person whose hair is to be cut on a stool or chair so that the top of the head is about even with your eyes.
3. After combing the hair to remove all tangles, hold the product in relaxed, comfortable grip, with the nameplate under the palm near your index finger. This grip will help you maintain comfortable, accurate cutting control.

ATTACHING GUIDE COMBS

Align comb onto to blade then press tab until it clicks into position.

CUTTING HAIR

For Medium to Long Cuts

The first time you cut the hair, cut only a small amount until you become accustomed to how long each guide comb leaves the hair. Always start by placing the largest guide comb on the clipper, then use shorter combs if a shorter length is desired.

Remember between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that neat, well groomed look.

1. Start by combing the hair so it falls into its natural direction.
2. Place the largest comb onto your product and start by trimming the sides from the bottom upwards. Hold the product lightly against the hair, with the teeth of the guide comb pointing up but flat against the head. Slowly lift the trimmer up and outward through the hair, cutting only a small amount at a

time.

Repeat around sides and back of head.

If you desire shorter hair, either change to a shorter guide comb, or apply more pressure and less lift away from head with the present attachment.

The entire procedure requires practice, and it is always better to leave too much hair the first few haircuts.

For the top of the head, you will give a fairly short cut if you use the No.1 guide comb. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

For Longer Hair on Top:

By not using a guide comb, a longer cut can be achieved. Use either a barber comb or a regular comb and lift the hair on top of the head, cutting over the comb, or grasp the hair between the fingers and cut to desired length.

Continue this procedure from the front to the back of the head, gradually cutting the hair shorter by reducing space between the comb or fingers and the head. Comb frequently to remove trimmed hair and check for uneven strands.

Tapering Around Ears:

Using left and Right Ear Guide Combs:

The left and right ear guide combs have a built in taper ranging from 1/8" to 1/2". By following the outline of the ear with the appropriate comb you achieve a gradual taper and blending without having to use multiple combs.

To Taper the Area Bordering the Left Ear:

Attach the left ear taper comb to your trimmer and stand facing the left ear. While holding the clipper at a slight angle against the head, position the guide comb just back of the left ear at the hairline. Then move the trimmer in a small half circle pattern around the left ear

toward the front of the head. Depending on the length of the hair you are working with you may need to take several small strokes as you proceed around the ear. When doing so, slowly move the product upward and outward being mindful of the ear. This will allow you to guide hair into the comb towards the blades.

NOTE: You may also achieve a tapering of sideburns by including the sideburn area as you begin to move the product around the ear.

To Taper the Area Bordering the Right Ear:

Attach the right ear guide comb to your product. Stand facing the right ear and repeat the process described above for the left ear.

Finish by outlining the area around the ear as described in the following section.

OUTLINING

No attachments are needed. Comb hair into a desired style. Starting between the ear and the sideburns, hold the product with the corner edge of blade against hairline. Slowly follow the desired outline of the hair over, around and behind the ears. For defining sideburns and the back of the neck, hold the product upside down, against the skin at the desired length and move down.

Comb hair and check that sides are even. Check for uneven spots throughout the haircut.

SHORT CUTS

Starting with the longest guide comb, cut from the back of the neck to the crown. Hold the guide comb flat against the head and slowly move the product through the hair.

Use the same procedure from the lower side to the

upper side of the head. Then cut the hair against the direction in which it grows, from the front to the crown and even up the cut with the sides.

To give a flattop look, the hair on top of the head must be cut over the top of a flat comb, rather than using the guide comb.

Use closer cutting guide combs to taper the hair down the neckline, as desired. Comb hair and check for uneven spots. Outline sideburns and necklines as previously described.

CLEANING AND MAINTENANCE

OIL

The blades of your new product should be oiled before and after every use. Place a few drops of Wahl Clipper oil on the teeth of the blades. Use only Wahl Clipper Oil included in the pack. Do not use hair oil, grease or any oil mixed with kerosene or any solvent.

Where the world goes to look good.

WAHL®

Wahl salon innovations

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 3 Years from the date of original purchase or receipt as a gift.

The guarantee becomes invalid in the case of misuse or repair by unauthorised persons.

Should this product become defective during the warranty period, return it to the store of purchase together with your proof of purchase for repair or replacement without any charges to you.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl

Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at www.wahl.co.uk

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)

At the end of this products life it should not be disposed of with general household waste.

Care should be taken to dispose of it in a suitable manner in accordance with your Local Authority regulation.



WAHL (UK) LIMITED
HERNE BAY TRADE PARK, SEA STREET
HERNE BAY, KENT, CT6 8JZ.
TECHNICAL SUPPORT TEL: 01227 744331
CUSTOMER CARE TEL: 01227 740066
www.wahl.co.uk

Form No. 58939
Rev0-05/10



MINI PRO TRIMMER

