



Instruction Booklet for ZX515/ZX726

# ***2 Slice*** Toaster



Innovative products since 1919

W a h l k i t c h e n i n n o v a t i o n s



Innovative products since 1919

**WAHL®**

Wahl kitchen innovations

## USER INSTRUCTIONS

Please read this instruction manual carefully and familiarise yourself with your new Wahl Toaster before using for the first time.

Please retain this leaflet for future reference.

READ ALL INSTRUCTIONS BEFORE USING, KEEP APPLIANCE AWAY FROM LIQUIDS.

### IMPORTANT SAFEGUARDS

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

### TO REDUCE THE RISK OF FIRE AND INJURY

The following precautions should be followed when using electrical appliances, such as a toaster:

To avoid the risk of electric shock do not immerse cord, plug or toaster in water or any other liquid.

This appliance is not intended for use by persons

(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Unplug from outlet when not in use and allow to cool down before cleaning or storing away.

Do not place near a lit gas or electric burner or in a heated oven.

Flammable material such as paper, curtains etc. should not be near the sides or top of the toaster when it is being used.

Do not use close to a wall or under a cupboard as scorching of the wall or cupboard may result.

**WAHL®**

Innovative products since 1919

Wahl kitchen innovations

**IMPORTANT**

The mains lead of this appliance is not replaceable by the user. If the supply cord of this toaster is damaged it must only be replaced by the manufacturer or an authorised repairer.

**IMPORTANT NOTES**

**WARNING:** The temperature of the outer shell may cause burning. Always allow the toaster to cool down before attempting to move the toaster.

Never lift the toaster by placing your fingers inside the toaster slots.

Never attempt to remove the bread that has jammed in the slots without first unplugging from the mains and allowing to cool completely. Never insert a fork or other metal objects into toasting slots. Be careful not to damage the internal mechanics or heating elements when removing jammed bread.

Avoid toasting foods with runny frosting, icings or open

filling. Also, avoid torn slices of bread and broken pastries that may become lodged in the toaster.

For best results, clean crumb tray frequently. This can be done by sliding open the crumb tray at the bottom of the toaster. Crumbs can then be tipped out. Always ensure that the toaster is unplugged from mains and cool before doing this.

Keep the toaster away from small children when in operation.

**TOASTING OPERATION**

There are 3 functions (cancel, reheat and defrost) and seven browning degrees.

**NOTE:** WHEN FIRST USED, YOUR TOASTER MAY SMOKE SLIGHTLY. ANY SMOKE OR ODOUR IS NORMAL AND WILL NOT REOCCUR AFTER A FEW USES.



Innovative products since 1919

**WAHL®**

## Wahl kitchen innovations

Before using the toaster for the first time we suggest that you operate the toaster at least five times without bread but at the highest setting. Ventilate the room during this period.

Ensure your mains supply voltage is the same as that marked on the underside of your toaster.

Turn the selector switch clockwise to set the browning control from the lightest stage 1 to the darkest stage 7. If in doubt start with the lowest setting (mark on the selector switch shows you your setting).

Insert sliced bread into the toasting slot and push down the lever until it locks (the lever will only lock when the toaster is plugged in).

The appliance will now start toasting, when the set degree of toasting has been reached the toast pops up automatically.

4 To use the special functions, press the button of the

function you wish to select once you have pushed down the lever: REHEAT or DEFROST.

DEFROST: TO DEFROST AND TOAST FROZEN BREAD

REHEAT: TO REHEAT TOASTED BREAD.

CANCEL: TO STOP TOASTING PREMATURELY



Innovative products since 1919


**WAHL®**

Wahl kitchen innovations

#### WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)

At the end of this products life it should not be disposed of with general household waste.

Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.

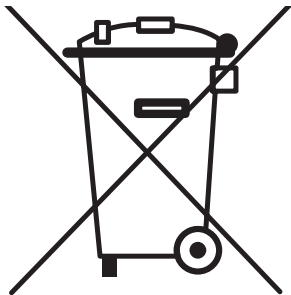

#### CLEANING

Before cleaning remove the plug from the socket and allow the appliance to cool down.

Use a moderately damp cloth to clean the outside of the appliance.

**WARNING! DO NOT ALLOW ANY WATER TO ENTER THE APPLIANCE HOUSING.**

Do not use any aggressive or scrubbing detergents.

Slide out the crumb tray at the bottom of the toaster, remove crumbs and residue and slide crumbs tray back into position.

Do not wrap the cord around the appliance.



Innovative products since 1919

**WAHL®**

Wahl kitchen innovations

## PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers. Please take a minute to register your product online at [www.wahl.co.uk](http://www.wahl.co.uk)

## GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of twenty four months from the date of original purchase or receipt as a gift.  
The guarantee becomes invalid in the case of misuse or repair by unauthorised persons.  
Should this product become defective during the warranty period, return it to the store of purchase.



Innovative products since 1919

**WAHL®**

Wahl kitchen innovations

## WIRING

**WARNING:** If the supply cords is damaged it must be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.

The wires in the mains lead of this toaster are coloured in accordance with the following code:

**BLUE NEUTRAL (N)      BROWN LIVE (L)**  
**GREEN/YELLOW EARTH (E)**

If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and thrown away and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this toaster may not correspond with colour markings identifying the terminals in your plug proceed as follows:

The wire which is coloured **BLUE** must be connected to the terminal in the plug which is marked with the letter "N" or coloured **BLUE** or **BLACK**.

The wire which is coloured **BROWN** must be connected to the terminal in the plug which is marked with the letter "L" or coloured **BROWN** or **RED**.

The wire that is coloured **GREEN** and **YELLOW** must be connected to the terminal which is marked with the letter "E" or by the **EARTH SYMBOL** or coloured **GREEN** or **GREEN** and **YELLOW**.

### **WARNING: THIS APPLIANCE MUST BE EARTHED**

The toaster must be protected by a 13A fuse in a BS 1363/A approved 3 pin plug or by a 13A fuse in the plug adapter or distribution board if another type of plug is used.



WAHL (UK) LIMITED  
HERNE BAY TRADE PARK, SEA STREET  
HERNE BAY, KENT, CT6 8JZ.  
TECHNICAL SUPPORT TEL: 01227 744331  
CUSTOMER CARE TEL: 01227 740066  
[www.wahl.co.uk](http://www.wahl.co.uk)

Form No. ZA143  
Rev2 - 06/09

# **2 *Slice* Toaster**



8