



**Chrome Ionic  
2000W Hairdryer**

# CHROME IONIC 2000W HAIRDRYER

Please read all instructions carefully to familiarise yourself with your new hairdryer before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

**T:** 01227 740066

or visit

**W:** [www.wahl.co.uk](http://www.wahl.co.uk)

**E:** [customer.services@wahl.co.uk](mailto:customer.services@wahl.co.uk)

## INDEX

<b>IMPORTANT SAFEGUARDS</b>	Page 3
<b>OPERATING INSTRUCTIONS</b>	Page 7
<b>STYLING TIPS</b>	Page 7
<b>CLEANING &amp; MAINTENANCE</b>	Page 8
<b>WIRING</b>	Page 9
<b>PRODUCT REGISTRATION</b>	Page 10
<b>GUARANTEE</b>	Page 11

# CHROME IONIC 2000W HAIRDRYER

Please retain this leaflet for future reference.

**READ ALL INSTRUCTIONS BEFORE USING.**

## **IMPORTANT SAFEGUARDS**

Please read this instruction manual carefully and familiarise yourself with your new Wahl Chrome Ionic 2000W Hairdryer before using for the first time.

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

### **TO REDUCE THE RISK OF FIRE AND INJURY**

1. This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the appliance and its cord out of reach of children less than 8 years old.
2. Switch off the appliance and unplug from outlet

## CHROME IONIC 2000W HAIRDRYER

when not in use, before putting on or taking off attachments and also before cleaning the appliance.

3. Never use your appliance without paying attention! Always unplug the unit when not in use or left unattended.
  4. Do not operate the appliance with a broken cord or plug, or if the appliance malfunctions, or is dropped or damaged in anyway.
  5. Do not wrap the cord around the appliance.
  6. Do not obstruct the inlet or outlet grills.
  7. Any servicing or repair must be performed by an authorized service representative.
  8. Do not use outdoors or in damp areas.
  9. Do not let the cord hang over the edge of the work surface or let it touch any hot surfaces.
  10. The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.
  11. To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids.
- 4**

## CHROME IONIC 2000W HAIRDRYER

Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.

12. Never carry the unit by its power cord.
13. Do not drop or insert any object into any opening.
14. Care should be taken to avoid contact with the skin, the face and neck.
15. Do not use with a voltage converter.
16. Allow the appliance to cool before storing away.
17. Use this appliance only for its intended purpose.
18. When the hairdryer is used in the bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
19. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding

## CHROME IONIC 2000W HAIRDRYER

30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice. (NOTE: Mains sockets might not be permitted in average sized bathrooms according to local wiring regulations.)

**!** **WARNING:** DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER.



**NOTE:** During the first few minutes of the initial use, you may notice smoke and a slight odor. This is normal and will quickly disappear.

### REAR FILTER

At the back of the hairdryer there is a filter which may be removed for cleaning.

This filter prevents hair from being sucked into the motor and therefore extends the life of your hairdryer.

It is recommended that this filter is removed regularly for cleaning, and thereby allowing air to flow freely through the motor and fan unit.

# CHROME IONIC 2000W HAIRDRYER

## **OPERATING INSTRUCTIONS**

### **HEAT SETTINGS**

The Wahl Hairdryer has 3 temperature settings, 2 speed settings and a cold shot function, which provides 7 different heat/speed variations.

- High heat high speed
- High heat low speed
- Medium heat high speed
- Medium heat low speed
- Low heat high speed
- Low heat low speed
- Cool shot

### **IONIC TECHNOLOGY**

Your Wahl Hairdryer has a continuous ionic feature. Ionic technology works by releasing negative ions, making hair shiny, smooth and more manageable.

### **STYLING TIPS**

After washing :

1. Gently towel dry hair to remove excess water.
2. Make use of the variable heat settings at different stages of the styling to achieve maximum results.
3. Do not concentrate airflow on anyone area for an extended period of time.

### **CONCENTRATOR NOZZLE**

Attach the concentrator nozzle onto the barrel of your hairdryer for directional blow drying, ideal for applying direct heat to concentrated areas.

# CHROME IONIC 2000W HAIRDRYER

## DIFFUSER

When using a diffuser, the hairdryer should be used on low heat settings. Do not use at high temperatures as overheating can cause damage to both the hairdryer and diffuser. Attach the diffuser onto the barrel of your hairdryer and move through the hair for volume.

## REPAIRS

Do not attempt to repair this appliance yourself. Repairs can only be made by qualified service personnel with special tools. Repairs by under qualified persons will invalidate the guarantee, and may result in accident or injury. If the hairdryer fails to work properly when purchased, return it to the retailer from which it was purchased


## CLEANING AND MAINTENANCE

1. Always unplug the Hairdryer before cleaning.
2. Do not immerse in water.
3. Use a slightly damp cloth to clean the body of the hairdryer, and dry with a clean cloth.
4. Store the appliance in a drawer or hang up away from dust and moisture.
5. The hairdryer is fitted with a removable filter for easy cleaning. To remove the filter use your thumb to ease the bottom of the filter away and then gently pull away from top to free. Use a small brush to remove dust and hair from the filter screen and if necessary wash in warm soapy water, making sure that it is completely dry before re-placing on the hairdryer.



# CHROME IONIC 2000W HAIRDRYER

## WIRING

 **WARNING:** PLEASE CHECK THE POWER CORD REGULARLY FOR DAMAGE. IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURERS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

The wires in the mains lead of this Hairdryer are coloured in accordance to the following code:

Blue Neutral (N)

Brown live (L)

This appliance is fitted with a 3 pin plug which has a 13amp fuse fitted.

If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed on page 10.

## CHROME IONIC 2000W HAIRDRYER

As the colours of the wires in the mains lead of this Hairdryer may not correspond with the colour markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter 'N' or coloured BLACK or BLUE.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED or BROWN.

DO NOT connect either wire to the terminal in the plug which is marked with the letter 'E' or has the Earth symbol, or coloured GREEN or GREEN/YELLOW.

### **PRODUCT REGISTRATION**

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at [www.wahl.co.uk](http://www.wahl.co.uk).

# CHROME IONIC 2000W HAIRDRYER

## **WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)**

At the end of this products life it should not be disposed of with general household waste. Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.



## **GUARANTEE**

This product is guaranteed against defects in material and workmanship for a period of one year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee in no way affects your rights under law in the United Kingdom.

WAHL (UK) LIMITED  
HERNE BAY TRADE PARK,  
SEA STREET  
HERNE BAY  
KENT  
CT6 8JZ.

CUSTOMER SERVICES T: 01227 740066  
[www.wahl.co.uk](http://www.wahl.co.uk)

Form No. ZA325 Rev5 06/13