

WAHL® **max**
pro
1600W hairdryer

A decorative floral pattern consisting of dark grey, stylized vines and leaves, winding across the bottom half of the page.

power

Wahl has professional hairdressing heritage spanning over 80 years. During this time Wahl has supported the professional hairdresser and barber with the development of professional styling tool.

In order to keep your hair in optimum condition Wahl recommends that you visit your hairdresser or barber every four to eight weeks. During consultation at your salon your stylist will recommend which products are ideal to support your style at home and keep your hair looking salon perfect.

Hair is a complicated structure manufactured with the scalp in the hair follicle from water, vitamins, minerals and proteins. This structure is surrounded by an outer cuticle layer that holds the structure together and protects it from external elements.

Healthy hair grows at a rate of 1 centimetre per month in a growth cycle that last around three years, hence hair will grow around 36 centimetres long if allowed to. At the end of this cycle the hair will naturally fall out and the growth

cycle starts again.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Do not take this appliance into the bathroom and do not use near basins or other vessels containing water.
2. Do not immerse in water or other liquids.
3. Unplug the appliance when not in use.
4. Care should be taken to avoid contact with the skin or the face and neck.
5. After use do not wrap the mains lead around the appliance.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

7. Allow the appliance to cool before storing away.
8. When using the diffuser or concentrator nozzle, the hairdryer should be used on low heat settings. Do not use at high temperatures as overheating can cause damage to both the hairdryer and diffuser/concentrator nozzle.
9. Do not obstruct the inlet or outlet grills.
10. Do not operate the hairdryer with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner.
11. Do not pull the plug out of the socket by tugging on the cord.
12. Should the appliance accidently fall into liquid do not reach for the appliance. Unplug immediately from the wall socket before retrieving the appliance. Electrical parts may be live even when the switch is off.

REAR FILTER

At the motor end of the hairdryer there is a filter which may be removed for cleaning.

This filter prevents hair from being sucked into the motor and therefore extends the life of your hairdryer.

It is recommended that this filter is removed regularly for cleaning, and thereby allowing air to flow freely through the motor and fan unit.

HEAT SETTINGS

The Wahl hairdryer has 2 heat/speed settings and a cool shot function, which provides 3 different heat/speed variations.

- High heat high speed
- Low heat low speed
- Cool shot

Where the world goes to look good.

WAHL®

W a h l s a l o n i n n o v a t i o n s

DIFFUSER

Attach the diffuser onto the barrel of your hairdryer to create volume intensive drying without applying direct heat to your hair.

Hold the hairdryer with the diffuser attached at about 10-15cm away from the hair and dry with a low speed and low heat setting, this allows the hair to dry with natural movement and natural volume.

CONCENTRATOR NOZZLE

Attach the concentrator nozzle onto the barrel of your hairdryer for directional blow drying, ideal for applying direct heat to concentrated areas.

DRYING TIPS

AFTER WASHING

Gently towel dry hair to remove excess water.

Make use of the variable heat settings at different stages of the styling to achieve maximum results.

Do not concentrate airflow on any one area for an extended period of time.

REPAIRS

Do not attempt to repair this appliance yourself.

Repairs can only be made by qualified service personnel with special tools. Repairs by under qualified persons will invalidate the guarantee, and may result in accident or injury. If the hairdryer fails to work properly when purchased, return it to the retailer from which it was purchased.

Where the world goes to look good.

WAHL®

Wahl salon innovations

CARE AND CLEANING.

Always unplug the Hairdryer before cleaning.

DO NOT immerse in water.

Use a slightly damp cloth to clean the body of the Hairdryer, and dry with a clean cloth.

Store the appliance in a drawer or hang-up away from dust or moisture.

The Hairdryer is fitted with a removable filter for easy cleaning. To remove the filter, twist the silver cover situated at the rear of the dryer anticlockwise and withdraw. Use a small brush to remove dust and hair from the filter screen and if necessary wash in warm soapy water, making sure that it is completely dry before re-placing on the Hairdryer.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)

At the end of this products life it should not be disposed of with general household waste.

Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.



WIRING

WARNING: If the supply cord is damaged it must be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.

The wires in the mains lead of this Hairdryer are coloured in accordance to the following code:

Blue Neutral (N)

Brown Live (L)

This appliance is fitted with a 3 pin BS Approved BS1363/A plug which has a 13amp fuse fitted. If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this Hairdryer may not correspond with the colour markings identifying the terminals in your plug, proceed as follows

The wire which is coloured **BLUE** must be connected to the terminal in the plug which is marked with the letter 'N' or coloured **BLACK** or **BLUE**.

The wire which is coloured **BROWN** must be connected to the terminal in the plug which is marked with the letter 'L' or coloured **RED** or **BROWN**.

DO NOT connect either wire to the terminal in the plug which is marked with the letter E, has the Earth symbol, or coloured **GREEN** or **GREEN AND YELLOW**.

Where the world goes to look good.

WAHL®

Wahl salon innovations

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of twelve months from the date of original purchase or receipt as a gift.

The guarantee becomes invalid in the case of misuse or repair by unauthorised persons.

Should this product become defective during the warranty period, return it to the store of purchase together with your proof of purchase for repair or replacement.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have.

As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at www.wahl.co.uk

WAHL® max
pro
1600W hairdryer

WAHL (UK) LTD.
HERNE BAY TRADE PARK, SEA STREET, HERNE
BAY, KENT, CT6 8JZ
TECHNICAL SUPPORT TEL: 01227 744331
CUSTOMER CARE TEL: 01227 740066

www.wahl.co.uk

FORM No: ZA563
REV 2 - 01/12

power