



PROFESSIONAL

**CORD-CORDLESS CLIPPER  
INSTRUCTIONS**

## CORD-CORDLESS CLIPPER

Please read all instructions carefully to familiarise yourself with your new clipper before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: [www.wahl.co.uk](http://www.wahl.co.uk)

E: [customer.services@wahl.co.uk](mailto:customer.services@wahl.co.uk)

## CONTENTS

<b>GENERAL USER INFORMATION</b>	Page 3
<b>IMPORTANT SAFEGUARDS</b>	Page 6
<b>PRODUCT DESCRIPTION</b>	Page 8
<b>TECHNICAL DATA</b>	Page 9
<b>OPERATING INSTRUCTIONS</b>	Page 10
<b>CARE AND CLEANING</b>	Page 12
<b>WIRING</b>	Page 13
<b>DISPOSAL</b>	Page 13
<b>GUARANTEE</b>	Page 15

## GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes



**DANGER**

Danger of electric shock which may result in serious physical injury or death.



**DANGER**

Danger of explosion which may result in serious physical injury or death.



**WARNING**

Warning of possible physical injury or a health risk.



**CAUTION**

 
Information about danger of material damage.




Note with useful information and tips.

- ▶ Action to be taken by owner.
1. Carry out these actions in the sequence described.
- List

## CORD-CORDLESS CLIPPER

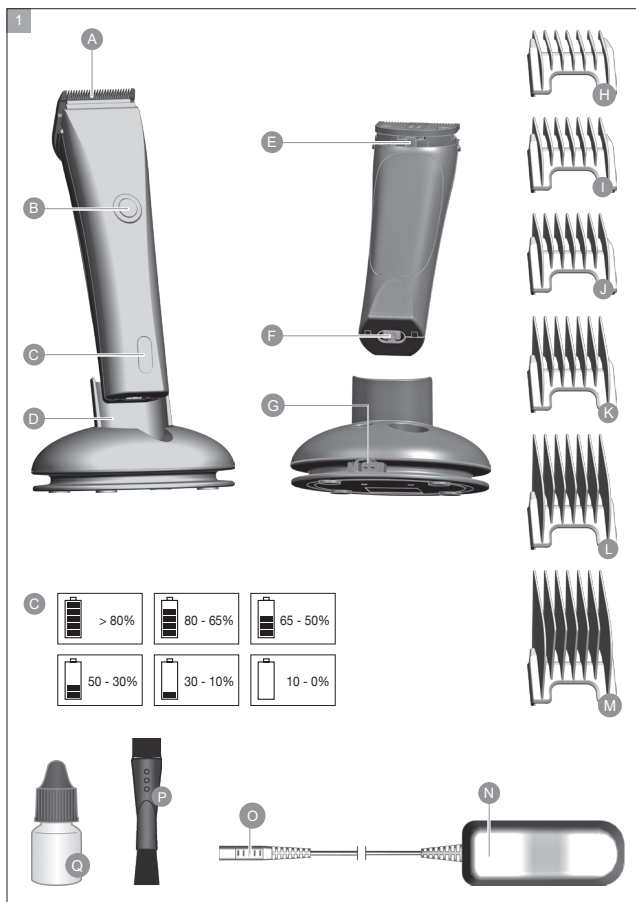

## CORD-CORDLESS CLIPPER

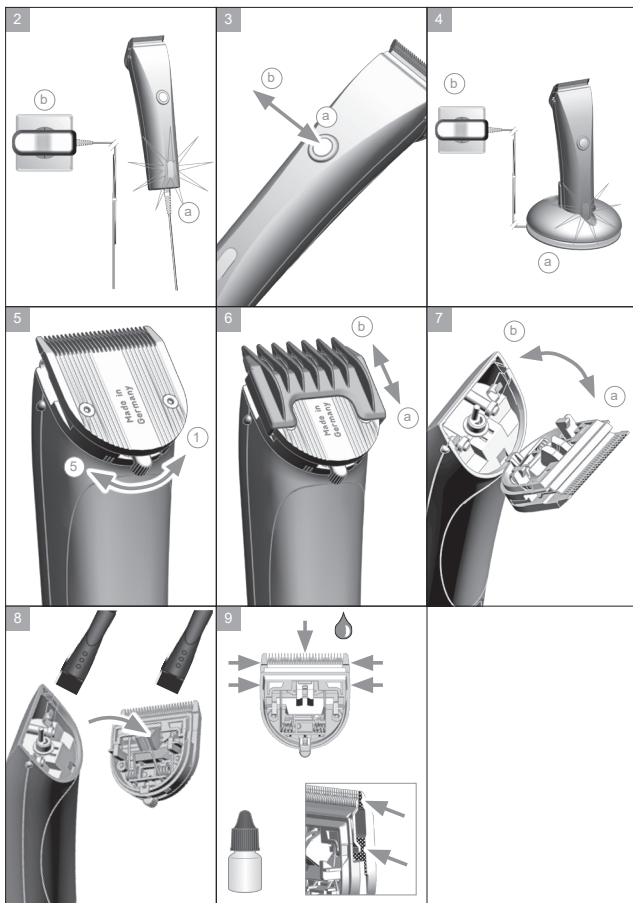 

## CORD-CORDLESS CLIPPER

Please retain this leaflet for future reference.

**READ ALL INSTRUCTIONS BEFORE USING.**

### **IMPORTANT SAFEGUARDS**

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

#### **Requirements**

- ▶ Read the instruction manual in full to familiarize yourself with the product before the first use.
- ▶ This appliance can be used by children from aged 14 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Use this appliance only for its intended purpose.

#### **Hazards**



**Danger! Electric shock due to damage to appliance**

- ▶ Do not operate the appliance with a broken cord, plug or charger, or if the appliance malfunctions, or

is dropped or damaged in anyway.

- ▶ Any servicing or repair must be performed by an authorized service representative.
- ▶ The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.



**Danger! Electric shock due to penetration of liquid.**

- ▶ To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.



**Danger of explosion**

- ▶ Never use the appliance where aerosol (spray) products are being used or where oxygen is released.
- ▶ Do not attempt to replace the battery. Lithium ion batteries may explode, catch fire and/or cause burns if they are dismantled, damaged or exposed to moisture and/or high temperatures.
- ▶ Do not expose the appliance to temperatures below 0°C and above +40°C for any length of time. Avoid direct exposure to sunlight.

## CORD-CORDLESS CLIPPER



### **Warning! Injuries due to incorrect handling**

- ▶ Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- ▶ Never use your appliance without paying attention! Except when charging always unplug this appliance from the electricity outlet immediately after using
- ▶ Exhausted batteries/ rechargeable batteries should not be disposed of in the household waste. Dispose of them in a completely discharged state in accordance with local legal regulations. Do not throw into fire where heat could cause them to rupture.



### **Caution! Danger of product damage**

- ▶ Do not wrap the cord around the appliance / charger.
- ▶ Never carry the unit by its power cord.
- ▶ Do not drop or insert any object into any opening.

## **PRODUCT DESCRIPTION**

Description of parts (Fig. 1)

- A** Blade set
- B** On/off switch
- C** Battery power indicator
- D** Charging stand
- E** Cutting-length adjustment
- F** Appliance socket
- G** Charging stand socket
- H** Attachment comb, cutting length 3 mm
- I** Attachment comb, cutting length 6 mm



## CORD-CORDLESS CLIPPER

- J** Attachment comb, cutting length 9 mm
- K** Attachment comb, cutting length 12 mm
- L** Attachment comb, cutting length 18 mm
- M** Attachment comb, cutting length 25 mm
- N** Plug-in transformer
- O** Appliance plug
- P** Cleaning brush
- Q** Oil for blade set

## TECHNICAL DATA

### HAND-HELD APPLIANCE

Drive unit:	DC motor
Battery:	Li-ION battery (LiFePO <sub>4</sub> )
Battery operating time:	Up to 90 minutes
Dimensions (LxWxH):	178 x 46 x 50 mm
Weight:	Approx. 290 g
Emission sound pressure level:	Max. 63 dB(A) @ 25 cm
Vibration:	< 2.5 m/s <sup>2</sup>

### CHARGING STAND

Dimensions	
with accessories (LxWxH):	96 x 120 x 72 mm
Weight:	Approx. 91 g

### PLUG-IN TRANSFORMER

Type	Adapter 6000
Power consumption:	Max. 12 W
Operating voltage:	100 – 240 V / 50 – 60 Hz

The appliance is safety insulated and radio screened. It meets the requirements of EU Electromagnetic Compatibility Directive 2004/108/EC and Machinery Directive 2006/42/EC.

## CORD-CORDLESS CLIPPER

### OPERATING INSTRUCTIONS

Keep the packaging for safe storage or transport later.

Check that the contents are complete.

Check all the parts for possible transport damage.

#### CHARGING THE BATTERY

1. Connect the appliance plug (O) on the plug-in transformer to the charging stand socket (G) (Fig. 4a).
  - The appliance can also be connected directly to the plug-in transformer for charging (Fig. 2a/b).
  - Battery overcharging is prevented thanks to intelligent charge management.
2. Connect the plug-in transformer to the mains socket (Fig. 4b).
3. Switch off the appliance using the on/off switch (Fig. 3b).
4. Place appliance on the charging stand (Fig. 4) or connect directly to the plug-in transformer (Fig. 2a/b). A signal will sound and the charging process begins.
  - Depending on the charge status, the corresponding segment of the battery power indicator will flash during the charging process. Once the battery is fully charged, all segments of the battery power indicator will remain lit continuously.
  - After the appliance has been removed from the charging stand, the display goes out after approx. 30 seconds (power saving mode).
  - It should take around 60 minutes for the appliance to charge to full capacity.
5. Once the battery is fully charged, a signal will sound.

#### BATTERY OPERATION

1. Switch on the appliance using the on/off switch and switch off after use (Fig. 3a/b).
  - After the appliance has been switched off, the display goes out about 30 seconds later (power saving mode).
  - When the battery is fully charged, the appliance can be used for up to 90 minutes without mains connection.
  - The charge status of the battery is displayed by the battery power indicator (C).

## CORD-CORDLESS CLIPPER

- When the battery has fully run down, the appliance switches itself off automatically.
- In case of insufficient maintenance of the blade set, the operating time can be reduced considerably.

### **MAINS OPERATION**

- 1.Connect the appliance plug (O) on the plug-in transformer to the appliance socket (F) (Fig. 2a).
- 2.Connect the plug-in transformer to the mains socket (Fig. 2b).
- 3.Switch on the appliance using the on/off switch and switch off after use (Fig. 3a/b).

### **SETTING THE CUTTING LENGTH**

The cutting length can be adjusted to between 0.7mm and 3mm (5 possible positions) using the cutting-length adjustment integrated into the blade set (Fig. 5).

### **CUTTING WITH THE ATTACHMENT COMB**

The appliance can also be operated with attachment combs. In order to achieve the indicated cutting length, the cutting length adjustment lever should be set to position 1 (Fig. 5).

The following attachment combs are included as standard: 3 mm, 6 mm, 9 mm and 12 mm, 18 mm and 25 mm cutting lengths.

### **ATTACHING/REMOVING THE ATTACHMENT COMB**

1. Slide the attachment comb on to the blade set in the direction of the arrow until it reaches the limit stop (Fig. 6a).
2. The attachment comb can be removed by pushing it in the direction of the arrow (Fig. 6b).

## CORD-CORDLESS CLIPPER

### CARE AND CLEANING

#### **Danger! Electric shock due to penetration of liquid.**



- ▶ Switch the appliance off and disconnect from the power supply, before you start with cleaning and care.
- ▶ Do not immerse the appliance in water!
- ▶ Do not allow any liquid to get inside the appliance.
- ▶ Only reconnect the appliance to the power supply if it is completely dry.

#### **Handle with care! Danger from aggressive chemicals.**



- ▶ Aggressive chemicals could damage the appliance and accessories.
- ▶ Never use solvents or scouring agents.
- ▶ Only use cleaning agents and blade set oil recommended by the manufacturer.

Hygienic spray and blade set oil are available from your dealer or our service centre.

Remove the attachment comb (Fig. 6b) after every use and lift the blade set out of the housing (Fig. 7a). Use the cleaning brush to remove any cut hairs from the housing opening and from the blade set (Fig. 8). The cleaning lever can also be pressed. This allows the cut hairs that accumulate between the bottom blade and the top blade to be easily removed using the cleaning brush (EASY CLEANING).



- Only wipe the appliance with a soft, slightly damp cloth.
- The blade set using the hygienic spray.
- Oil the blade set with the blade set oil (Fig. 9).

For a good and long-lasting cutting performance, it is important to oil the blade set frequently. If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.

## CORD-CORDLESS CLIPPER

### **AUTOMATIC SENSOR SYSTEM**

To give you advance notice of an urgent need for maintenance care, your hair cutting appliance has been equipped with an automatic sensor system.

The sensor system automatically recognises when the blade set needs oiling or cleaning. After the appliance is switched off, an acoustic signal will sound and the battery power indicator will flash for 2 minutes. The acoustic signal and the flashing of the battery power indicator can be cancelled (turned off) by briefly switching the appliance on and off.

Before using the appliance again, it is strongly recommended to clean the appliance and oil the blade set.

Failure to observe these instructions may result in damage to and early failure of the appliance, which will void all guarantee claims.

### **CHANGING THE BLADE SET**

**Warning! Injuries and material damage due to incorrect handling.**



- ▶ Switch the appliance off and disconnect from the power supply before changing the blade set.

1. Switch the appliance off using the on/off switch (Fig. 3b) and disconnect from the power supply.
2. Slide the blade set off the housing in the direction of the arrow (Fig. 7a). Remove the blade set.
3. Replace the blade set by hooking it into the housing and pressing it down until it clicks into position (Fig. 7b).

## CORD-CORDLESS CLIPPER

### WIRING



WARNING: IF THE TRANSFORMER IS DAMAGED IT MUST BE REPLACED.

THIS PRODUCT MUST ONLY BE USED WITH THE TRANSFORMER SUPPLIED. SHOULD A REPLACEMENT BE REQUIRED PLEASE CONTACT WAHL CUSTOMER SERVICES.

### DISPOSAL



**Handle with care! Environmental damage in the case of incorrect disposal.**

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment. Adhere to the relevant legal requirements when disposing of the appliance.

**Information on the disposal of electrical and electronic appliances in the European Community:**



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

## **GUARANTEE**

This product is guaranteed against defects in material and workmanship for a period of one year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include blades, cables, shaver heads, foils and cutters etc which are consumable parts.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

WAHL (UK) LTD  
STERLING HOUSE  
CLIPPER CLOSE  
RAMSGATE, KENT  
CT12 5GG

CUSTOMER SERVICES T: 01227 740066  
[www.wahl.co.uk](http://www.wahl.co.uk)

Form No. ZB437  
Rev2 10-18