



**ULTIMA PLUS SHAVER
INSTRUCTIONS**

ULTIMA PLUS SHAVER

Please read all instructions carefully to familiarise yourself with your new Wahl shaver before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: www.wahl.co.uk

E: customer.services@wahl.co.uk

CONTENTS

GENERAL USER INFORMATION	Page 3
IMPORTANT SAFEGUARDS	Page 6
OPERATING INSTRUCTIONS	Page 11
CLEANING & MAINTENANCE	Page 13
REPLACEMENT OF PARTS	Page 14
TROUBLESHOOTING	Page 15
CONFORMITY	Page 17
TECHNICAL DATA	Page 17
WIRING	Page 17
DISPOSAL	Page 17
PRODUCT REGISTRATION	Page 18
GUARANTEE	Page 19

GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes

**DANGER**

Danger of electric shock which may result in serious physical injury or death.

**DANGER**

Danger of explosion which may result in serious physical injury or death.

**WARNING**

Warning of possible physical injury or a health risk.

**CAUTION**

Information about danger of material damage.



Note with useful information and tips.

- ▶ Action to be taken by owner.
1. Carry out these actions in the sequence described.
- List

ULTIMA PLUS SHAVER

SHORT INTRODUCTION

1. After unpacking your shaver, check the product overview and the list of included parts to ensure that your product is complete and that all parts are in good order.
2. Before first use of the product, be sure to read the safety instructions starting on page 6.
3. Connect the shaver to the power cable and then connect the power cable to the power point.
4. Before using it cordless for the first time, you should recharge the shaver for at least 60 minutes. Unplug the power cable from the power point and from the shaver once the batteries are fully recharged (green flashing LED).
5. Alternatively, the shaver can be used immediately when connected to the power point.
6. Before shaving, remove the protective cap (1) or trimmer cap (8) from the blade head (2) by pressing on the sides of the cap whilst lifting. Turn the shaver on using the on/off switch (3) on the front of the shaver.
7. After washing and drying your face, chin and throat areas, start shaving with circular movements without putting any pressure on the skin. Use your free hand to stretch the skin on your face to make the stubble stand up.
8. After shaving, switch the shaver off and clean the blade parts carefully under running water or with the cleaning brush (supplied).

ULTIMA PLUS SHAVER



NOTE:

Check that all accessories are included and undamaged.

1. Protective cap
2. Blade head
3. On / off switch with travel lock
4. Charge display
5. Connection for power cable
6. Long hair trimmer
7. Cutting system with double shaving foil and integrated long hair trimmer
8. 2-in-1 protective cap / trimmer cap
9. Unlocking for protective cap / trimmer cap
10. Unlocking buttons for blade head (both sides)
11. Unlocking buttons for lift & wash function (both sides)

Other Accessories (no image):

Charger, cleaning brush, storage pouch, Instructions for Use

ULTIMA PLUS SHAVER

Please retain this leaflet for future reference.

READ ALL INSTRUCTIONS BEFORE USING.

IMPORTANT SAFEGUARDS

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.



DANGER for Children

- ▶ Read the instruction manual in full to familiarise yourself with the product before the first use.
- ▶ This appliance can be used by children from aged 14 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Use this appliance only for its intended purpose.
- ▶ This shaver is intended exclusively for trimming human hair. The shaver is designed for private home use and must not be used for commercial purposes.
- ▶ The shaver must only be used indoors.

- ▶ Do not use the device to cut artificial hair or animal hair
- ▶ Children must not play with packaging material. Do not allow children to play with plastic bags. Danger of suffocation.



Symbols on the shaver

The hand-held shaver can be rinsed under running water.
DANGER! Disconnect the charger from the shaver first.



DANGER of electric shock due to penetration of liquid

- ▶ Do not use this device – with the charger connected – in the vicinity of bathtubs, showers, washbasins or other vessels containing water.
- ▶ Protect the cable and the charger from moisture, dripping water or splash water.
- ▶ Do not operate the device with the charger connected if your hands are wet.
- ▶ Do not immerse the cable and the charger in water or other liquids or rinse them under running water.
- ▶ Unplug the charger from the power point before cleaning the shaver and its parts under running water.
- ▶ If the device has fallen into water, pull out the charger immediately, and only then remove the device from the water. Do not use the device

again, but have it checked by a specialist.

- ▶ If the device is used in a bathroom, the cord connecting the device to the mains power must be pulled out after use, as the proximity of water represents a hazard, even when the device is switched off.
- ▶ Installation of a residual current device (FI/RCD) with a rated residual operating current of no more than 30 mA is recommended to provide additional protection.
- ▶ Ask your electrician for advice. The installation should only be carried out by a qualified electrician.



DANGER of electric shock due to damage to appliance

- ▶ Do not operate the shaver if the shaver, the charger or the cable shows visible signs of damage or if the shaver has been dropped.
- ▶ Connect the cable to the shaver before plugging the charger into a power point.
- ▶ Only connect the charger to a properly installed easy to access power point supplying voltage matching the rating plate. The power point must still be easily accessible after connection.
- ▶ Ensure that the cable cannot be damaged by sharp edges or hot surfaces.
- ▶ Ensure that the cable is not trapped or crushed.

- ▶ Always pull at the charger and never pull on the cable when unplugging the charger.
- ▶ Remove the charger from the power point:
 1. After each use
 2. After each charging process
 3. If a fault occurs
 4. Before connecting the device to the cable
 5. Before cleaning the shaver
- ▶ To avoid any risk, do not make any changes to the shaver or accessories. Do not replace the cable yourself either. Repairs should only be carried out by a specialist or at our Service Centre.



DANGER of Explosion from rechargeable batteries

- ▶ Protect rechargeable batteries against mechanical damages. Danger of fire.
- ▶ Do not expose the shaver to direct sunshine or heat. The ambient temperature should not be lower than 5 °C or higher than 35 °C.
- ▶ The charge contacts on the shaver must not be connected by metallic objects. Rechargeable batteries may overheat and explode.
- ▶ Charge the shaver only with the charger provided.
- ▶ Should the electrolyte solution leak out of the rechargeable batteries, avoid contact with eyes,

mouth, nose and skin. Rinse immediately with plenty of clean water and consult a doctor. The electrolyte solution can cause irritation.



WARNING! Risk of injury

- ▶ Place the cable in such a way that no one trips over it or steps on.
- ▶ Do not use the device on open wounds, cuts, sunburn or blisters.
- ▶ Do not operate the shaver if the device or cutting elements are damaged or defective.
- ▶ The cutting blades are sharp. Handle with care.
- ▶ Keep the shaver away from your eyes.
- ▶ Always switch off the shaver before cleaning it.



WARNING! Risk of material damage

- ▶ Use the original accessories only.
- ▶ Never place the shaver on hot surfaces (e.g. hob plates) or near heat sources or open fire.
- ▶ Do not cover the charger to prevent overheating.
- ▶ In order to avoid damages to the shaving foil, do not exert excessive pressure on the shaving foil.
- ▶ Do not use any harsh or abrasive cleaning agents.



NOTE: We advise you not to use shaving gel, since this may cause the shaving foil and cutting blades to stick to each other.

OPERATING INSTRUCTIONS

CHARGING

- Before first operation of the shaver in battery mode, you should recharge the shaver for at least 60 minutes.
- In order to maximise the battery life, you should allow the batteries to completely discharge before recharging them.
- The shaver runs on 2 NiMH high performance batteries with protection against overcharging. The batteries can be recharged without a risk of overcharging or lowering performance.
- Please note that the battery life will decrease during extended periods of storage. For this reason, long recharging times should be avoided because of the interruption between the charging and discharging cycles.

- 1.Place the shaver on a level surface.
- 2.Connect the charger to the shaver.
- 3.Insert the charger into an easily accessible power point.
- 4.Recharging status is indicated by a green LED that lights up in the recharging display (4).
- 5.After charging for about 60 minutes, the batteries will be fully charged. This is indicated by a green flashing LED..
- 6.Once the batteries are fully charged, the shaver can be used in battery mode for about 45 minutes.
- 7.Unplug the power cable from the power point and from the shaver as soon as the batteries are fully recharged.
- 8.The shaver can also be recharged using the “quick recharge” process that takes about 3 minutes. This status is indicated by the green LED in the recharging display (4). This charge is sufficient for a single shave.
- 9.If your shaver stops during shaving due to its batteries being insufficiently charged, you can continue shaving by connecting it to a power point.

OPERATION

WARNING. Do not operate the shaver if the shaving foil is damaged.

ULTIMA PLUS SHAVER

The shaver can still be used whilst being charged.

1. Please ensure the shaver is switched off before plugging into the mains power supply.
2. Connect the charger to the shaver.
3. Plug the charger into an easily accessible power point.
4. Take off the protective cap.
5. Use the on / off switch; (3) to switch on the shaver.

SHAVE

- The shaver is suitable for dry as well as wet shaves (Wet & Dry).
- Initial applications may result in a temporary redness or irritation of the skin, since the skin must first get used to this type of shaving. This is normal and usually takes between 2 and 4 weeks.
- Remove the protective cap (1) or trimmer cap (8) by pressing the unlocking buttons (9) on both sides and by removing the cap.
- Use the on / off switch; (3) to switch on the shaver.
- Hold the shaver at a right angle to the surface of the skin and move it carefully and in circular motion over your face.
- Shave against the direction of beard growth.
- At parts of the face that are harder to shave, such as the chin, stretch the skin for a better result.
- After shaving, switch off the shaver and clean the cutting elements carefully.

USING THE TRAVEL LOCK

This function prevents the shaver from being accidentally switched on during transport. In order to activate / deactivate, press the small button in the lower area of the On / Off switch; (3). Then, push the switch to the ON position, up in the direction of the blade head.

TRIMMING LONG HAIR

Use the hair trimmer on the rear of the shaver to shorten beard and sideburns.

1. Take off the protective cap.
2. Push the hair trimmer upward.
3. Use the on / off switch; (3) to switch on the shaver.
4. After use, switch off the shaver, push the hair clipper into its basic position and clean the shaver.

THREE- / FIVE-DAY BEARD SHAVER

- You can use the long hair trimmer (6) and the trimmer cap (8) to shave a three or five day beard. Click the trimmer cap (8) onto the blade head (2).
- Slide the long hair trimmer (6) into the desired position.
 - a) Position 1 will produce a beard length of approximately 4 mm (five-day beard)
 - b) Position 2 will produce a beard length of approximately 2 mm (three-day beard)

i NOTE: When using the attachment comb, there is no direct contact between the shaving foil and the skin. This means that the blade system will not receive its usual natural oil and therefore additional oiling may be required.

- To ensure that your shaver continues to provide you with lasting shaving quality, be sure to apply a drop of Wahl Clipper oil on the foils after having cleaned the shaver after use. Remove the trimmer cap (8) by pressing the unlocking buttons (9) on both sides and pull off the trimmer cap.

CLEANING AND MAINTENANCE



DANGER! Remove the charger from the power point before cleaning the shaver. Never submerge the entire shaver in water.

DRY CLEANING

- Always switch off the shaver before cleaning it.
- Do not use any harsh or abrasive cleaning agents.
- Do not remove the shaving foil from the shaving foil frame and do not clean it with the brush.

i NOTE: Clean the shaver after every use to guarantee optimal results.

- Press the locking buttons on the sides (10) and remove the blade head (2).
- Place the blade head on a flat surface and blow it out.
- Clean the cutting blades with the cleaning brush.

ULTIMA PLUS SHAVER

WET CLEANING

- Shaving head and cutting blades can be cleaned under warm, running water (max 70 °C)

WET CLEANING WITH “LIFT & WASH” FUNCTION:

- Press the release buttons (11). The blade head frame will automatically slide into “Lift & Wash” position (7).
- Hold the shaver head under warm, running water (no hotter than 70 °C), in such a way that the water can run through the opening (2).
- For increased cleaning effectiveness you can also use regular liquid soap. Rinse thoroughly under warm, running water.
- Allow the shaver to dry completely before replacing the blade head.
- After cleaning you should spread a drop of Wahl Clipper oil on the cutting blades and the long hair trimmer to keep them in good working order.
- Wipe the housing down with a soft, damp cloth.
- Hold the blade head on the sides and press it down until it locks into place.
- Replace the protective cap (1) or trimmer cap (8).



NOTE: From time to time, place a few drops of Wahl Clipper Oil onto the cutting blades and the trimmer attachment. Let the device run for a couple of seconds to distribute the oil evenly. Using a soft cloth, wipe off the excess oil, if necessary.

REPLACEMENT PARTS

Cutting elements are subject to natural wear and excluded from the warranty. For optimal shaving, please replace your cutters & foil regularly.

We recommend replacing shaving foils once a year and the cutting blades every 12–18 months to ensure an optimal shave. The replacement parts can be ordered from Wahl Customer Services.

REPLACING PARTS

1. Take off the protective cap.
2. Press the release buttons of blade head and remove it.

3. Grasp the old cutting blades at both ends between thumb and index finger and pull them carefully off the shaver.
4. Take the new cutting blades at both ends between thumb and index finger and push them into the white holding device. Press the cutting blades completely and briefly down once until they audibly lock into place.
5. Pull the shaving foil frame out off the bracket on the blade head frame.
6. Place the new shaving foil frame into the blade head frame. When inserting the shaving foil frame, make sure the bracket of the shaving foil frame points to the front of the blade head frame. Carefully press onto the shaving foil frame until it snaps into place with an audible click.
7. Replace the blade head onto the shaver.

TROUBLESHOOTING



WARNING!

- Do not attempt to repair the shaver yourself.
- Always remove the charger from the socket whenever a fault occurs.

Fault	Please check the following
No function	<ul style="list-style-type: none"> • Is there power to the power point? • Batteries low?
The shaving performance diminishes:	<ul style="list-style-type: none"> • Cutting blade cleaned and oiled?

If you are experiencing a fault which is not listed here, please do not hesitate to contact our Customer Services. Repairs must only be carried out by qualified technicians or by our Service Centre.

CONFORMITY

The CE mark was applied in accordance with the corresponding European directives.

TECHNICAL DATA

Article no.	Please check the following
Wall power supply: Input voltage Output Voltage Protection Class Ambient Conditions	100–240V ~, 50/60 Hz, max. 5W 4V 600 mA II only approved for indoor use
Men's shaver: Input voltage Rechargeable Batteries Protection Class Ambient Temperature	4V 4W 2x 1.2V NiMH / HR03 (AAA) III 5 °C to 35 °C

In the interest of product improvements, we reserve the right to make technical and optical changes to the device and accessories.

WIRING



WARNING: If the transformer is damaged it must be replaced.

This product must only be used with the transformer supplied, Should a replacement be required contact Wahl Customer Services.

DISPOSAL



Handle with care! Environmental damage in the case of incorrect disposal.

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Adhere to the relevant legal requirements when disposing of the appliance. Information on the disposal of electrical and electronic appliances in the European Community:



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

ULTIMA PLUS SHAVER

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Services, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at www.wahl.co.uk.

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 3 years from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include blades, cables, shaver heads, foils and cutters etc., which are consumable parts.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee. This guarantee in no way affects your rights under law in the United Kingdom.

WAHL (UK) LIMITED
HERNE BAY TRADE PARK
SEA STREET
HERNE BAY
KENT
CT6 8JZ.

CUSTOMER SERVICES **T:** 01227 740066
www.wahl.co.uk

Form No. ZB451 Rev0 10-14