



HAIRDRYER

Ionic Style

Please read all instructions carefully to familiarize yourself with the Wahl hairdryer before using.

Save these instructions for further reference.

For any further assistance or information call customer services on

T: 01227 740066

or visit

W: www.wahl.co.uk

E: customer.services@wahl.co.uk

CONTENTS

IMPORTANT SAFEGUARDS	Page 3
BEFORE USE	Page 6
OPERATING INSTRUCTIONS	Page 7
CLEANING AND MAINTENANCE	Page 8
WIRING	Page 9
PRODUCT REGISTRATION	Page 10
GUARANTEE	Page 11

IMPORTANT SAFEGUARDS



When using this electrical appliance, especially when children are present, basic safety precautions should always be followed including the following.

TO REDUCE THE RISK OF FIRE AND INJURY

1. This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
3. Never use your appliance without paying attention! Always unplug the unit when not in use, or left unattended.

4. Do not operate the appliance with a broken cord or plug, or if the appliance malfunctions, or is dropped or damaged in anyway.
5. Do not wrap the cord around the appliance.
6. Do not obstruct the inlet or outlet grills.
7. Any servicing or repair must be performed by an authorized service representative.
8. Do not use outdoors or in damp areas.
9. Do not let the cord hang over the edge of the work surface or let it touch any hot surfaces.
10. The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.
11. To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.

12. Never carry the unit by its power cord.
13. Do not drop or insert any object into any opening.
14. Care should be taken to avoid contact with the skin, the face and neck.
15. Do not use with a voltage converter.
16. Allow the appliance to cool before storing away.
17. Use this appliance only for its intended purpose.
18. When the hairdryer is used in the bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
19. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

 **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 

BEFORE USE

HAIRDRYER SETTINGS

Your hairdryer has 3 temperature settings and 2 speed settings, which provides 6 different heat and speed variations plus cool shot

High Heat High Speed

High Heat Low Speed

Medium Heat High Speed

Medium Heat Low Speed

Low Heat High Speed

Low Heat Low Speed

NOTE: During the first few minutes of the initial use you may notice smoke and a slight odour. This is normal and will quickly disappear.

CONCENTRATOR ATTACHMENTS

The air concentrator nozzle is useful for directing airflow or spot drying. It may be fitted when using a round brush to speed the drying of hair. The concentrator is easily fitted to the front of the dryer and may be turned to the desired position.

IMPORTANT: Do not use the attachments on high settings as overheating can cause damage to both the dryer and concentrator nozzle.

OPERATING INSTRUCTIONS

1. Before plugging in check the voltage on the rating label, corresponds to the local mains voltage.
2. As a general guide, use the HIGH heat and speed setting for rough drying for thicker hair, and the LOW setting for finer hair and more precise control when styling. The cool setting can be used at the end to set the style.
3. Wash and condition the hair, then gently towel dry hair to remove excess water. **DO NOT** use the hairdryer on hair that is dripping wet.
4. Start styling at the back of the hair and work forwards.
5. Do not concentrate the airflow on any one area for an extended period of time.


REAR FILTER

- At the motor end of the dryer there is a filter cover which may be removed for cleaning.
- The filter prevents hair from being sucked into the motor end of your hairdryer.
- To remove the filter cover, simply hold filter cover and twist anticlockwise until released.
- It is recommended that the filter cover is removed regularly for cleaning, and thereby allowing air to flow freely through the motor and fan unit.

CLEANING AND MAINTENANCE

- Always unplug the hairdryer before cleaning.
- Do not immerse in water.
- Use a slightly damp cloth to clean the body of the hairdryer, and dry with a clean cloth.
- Store the appliance in a drawer or hang-up away from dust or moisture.
- The hairdryer is fitted with a removable filter for easy cleaning. To remove the filter cover, simply hold the filter cover and twist anticlockwise. Use a small soft brush to remove dust and hair from the filter and if necessary wash in warm soapy water, making sure that it is completely dry before re-placing on the hairdryer.

WIRING

 **WARNING:** IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURERS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

The wires in the mains lead of this hairdryer are coloured in accordance to the following code:

Blue Neutral (N) Brown Live (L)

This appliance is fitted with a 3 pin plug which has a 13amp fuse fitted.

If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this hairdryer may not correspond with the colour markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter 'N' or coloured BLACK OR BLUE.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED OR BROWN.

DO NOT connect either wire to the terminal in the plug which is marked with the letter 'E', has the Earth symbol, or coloured GREEN OR GREEN AND YELLOW

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at www.wahl.co.uk.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)



At the end of this products life it should not be disposed of with general household waste.

Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of one year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee in no way affects your rights under law in the United Kingdom.

Wahl (UK) Ltd
Herne Bay Trade Park
Herne Bay
Kent
CT6 8JZ
www.wahl.co.uk

Customer Service T: 01227 740066
Form No. ZB574
Rev0 07-15