



ZX946

TRAVEL KETTLE

INSTRUCTIONS



Please read all instructions carefully to familiarise yourself with the Wahl Stainless Steel Travel Kettle before using.

Save these instructions for further reference.

For any further assistance or information call customer services on

T: 01227 740066 or visit

W: www.wahl.co.uk

E: customer.services@wahl.co.uk

INDEX

IMPORTANT SAFEGUARDS	Page 3
OPERATING INSTRUCTIONS	Page 6
PRODUCT REGISTRATION	Page 8
GUARANTEE	Page 9
WIRING	Page 10

IMPORTANT SAFEGUARDS

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

TO REDUCE THE RISK OF FIRE AND INJURY

1. This appliance is not intended for use by children.
2. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of the reach of children.
3. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
4. Do not overfill the kettle. If the kettle is overfilled then boiling water may be ejected.
5. Switch off the appliance and unplug


from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.


6. Never use your appliance without paying attention! Always unplug the unit when not in use, even for a moment.
7. Do not operate the appliance with a broken cord or plug, or if the appliance malfunctions, or is dropped or damaged in anyway.
8. Any servicing or repair must be performed by an authorized service representative.
9. Do not use outdoors or in damp areas.
10. Do not let the cord hang over the edge of the work surface or let it touch any hot surfaces.
11. To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains

- socket immediately. Do not put your hands in the water.
12. Never carry the unit by its power cord.
 13. Only use this product for its intended purpose, misuse may result in injury.
 14. Parts of this product will remain hot after use, please take care while the product cools down.
 15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

 **WARNING:** THE OUTSIDE OF THE KETTLE BECOMES HOT DURING AND IMMEDIATELY AFTER OPERATION. DO NOT REMOVE THE LID WHEN WATER IS BOILING.

 **WARNING:** DO NOT REMOVE THE LID WHILE THE WATER IS BOILING.

In the unfortunate event that hot water is spilt on to the skin, immediately run cold water over the scalded area without stopping to remove clothing. Get medical help immediately for anything but the smallest incident.

OPERATING INSTRUCTIONS

For economy and speed of boiling, fill the kettle only with the required amount of water, making sure that this does not exceed the maximum level marked on the inside of the kettle.

IMPORTANT: TAKE EXTRA CARE IF THE KETTLE IS FULL OF BOILING WATER.

It is recommended that you rinse out the kettle and boil the maximum quantity of fresh water two or three times before first using it. Check the lid is properly closed.

IMPORTANT: BEFORE CONNECTING THE KETTLE TO THE MAINS ENSURE THAT THERE IS WATER IN THE KETTLE, BUT DO NOT FILL ABOVE THE MAXIMUM LEVEL MARKED ON THE INSIDE OF THE KETTLE.

Plug in and switch on the power supply. Press the on button, the neon light will come on and your kettle will boil and switch off automatically. You can use the on / off switch to turn off your kettle at any point during boiling.

IMPORTANT: CARE MUST BE TAKEN WHEN POURING WATER FROM THE KETTLE. IF THIS IS DONE TOO QUICKLY, WATER MAY ESCAPE FROM AROUND THE LID.

Always ensure that there is water in the kettle.

Always unplug the kettle after use.

If you find drops of water under your kettle, don't worry - it is just condensation.

This kettle works with all world voltages however optimum performance will be achieved when used at 230V.

PRODUCT REGISTRATION


Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at www.wahl.co.uk.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)



At the end of this products life it should not be disposed of with general household waste.

 Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 2 years from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.


Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

WIRING

 **WARNING:** IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURERS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

The wires in the mains lead of this kettle are coloured in accordance with the following code:

BLUE NEUTRAL (N) BROWN LIVE (L) GREEN/
YELLOW EARTH (E)

This appliance is fitted with a plug which has a fuse of the appropriate rating.

If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and thrown away and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this kettle may not correspond with colour markings identifying the terminals in your plug proceed as follows:


The wire, which is coloured BLUE, must be connected to the terminal in the plug which is

marked with the letter 'N' or coloured BLUE or BLACK.

The wire, which is coloured BROWN, must be connected to the terminal in the plug which is marked with the letter 'L' or coloured BROWN or RED.

The wire, which is coloured GREEN and YELLOW, must be connected to the terminal which is marked with the letter 'E' or by the EARTH SYMBOL or coloured GREEN or GREEN and YELLOW.

The kettle must be protected by a 13A fuse in a 13A (BS1363) plug or by a 13A fuse in the plug adapter or distribution board if another type of plug is used.

 **WARNING:** THIS APPLIANCE MUST BE EARTHED

The kettle must be protected by a 13A fuse in a 13A (BS1363) plug or by a 13A fuse in the plug adapter or distribution board if another type of plug is used.

Wahl (UK) Ltd
Herne Bay Trade Park
Herne Bay
Kent
CT6 8JZ
www.wahl.co.uk

Customer Service T: 01227 740066

Form No. ZB711
Rev0 06-17