



ZX945

# **ELECTRIC EGG BOILER**

## **INSTRUCTIONS**



Please read all instructions carefully to familiarise yourself with the Wahl Egg Boiler before using.

Save these instructions for further reference.

For any further assistance or information call  
customer services on

T: 01227 740066 or visit


W: [www.wahl.co.uk](http://www.wahl.co.uk)

E: [customer.services@wahl.co.uk](mailto:customer.services@wahl.co.uk)

## **INDEX**

<b>DESCRIPTION OF PARTS</b>	Page 3
<b>IMPORTANT SAFEGUARDS</b>	Page 4
<b>OPERATING INSTRUCTIONS</b>	Page 8
<b>CLEANING AND CARE</b>	Page 11
<b>WIRING</b>	Page 12
<b>PRODUCT REGISTRATION</b>	Page 13
<b>GUARANTEE</b>	Page 14

## DESCRIPTION OF PARTS

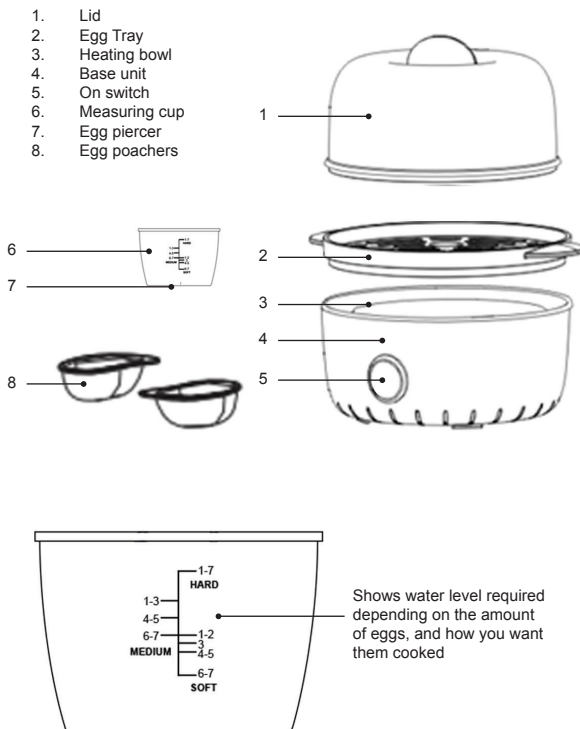

Choose from soft, medium or hard eggs and depending on the required amount of eggs being cooked fill to the corresponding level directly above the chosen egg type.

## **IMPORTANT SAFEGUARDS**

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

### **TO REDUCE THE RISK OF FIRE AND INJURY**

1. Before use, check that the voltage of your wall outlet corresponds to that shown on the data plate of the appliance.
2. Do not place the appliance near a heat source or in a hot oven, as serious damage may occur.
3. Never leave the appliance in operation unattended.
4. This appliance is not intended for use by children.
5. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of the reach of children.

6. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
7. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped, damaged or immersed in water. Return the appliance to WAHL (UK) LTD, for examination and repair.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should

## Egg Boiler


- become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water.
- 10. Do not drop or insert any object into any opening.
- 11. Do not use outdoors.
- 12. Do not use an extension cord with this appliance.
- 13. Care needs to be taken as burns can occur from contact with the hot surfaces of this appliance, the hot water, the steam or the food. Keep hands, arms and face etc clear of the steam from the vent, and when removing the lid.
- 14. Never move the appliance when it is full of liquid or hot eggs.
- 15. This appliance is intended for indoor domestic use only, not commercial use.
- 16. Always unplug the appliance immediately after use, when

moving it or prior to any cleaning or maintenance.

17. Only use this product for its intended purpose, misuse may result in injury.
18. Parts of this product will remain hot after use, please take care while the product cools down.
19. The pin at the bottom of the measure cup is sharp, take care to avoid injuries.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

 <b>WARNING:</b> THIS APPLIANCE PRODUCES HOT STEAM. CARE SHOULD BE TAKEN TO AVOID BURNS AND INJURY.
--


## OPERATING INSTRUCTIONS

Before first use

1. Using warm water and washing up liquid, wash all removable parts, rinse and dry. Wipe clean the inside of the heating bowl and dry.
2. Route the cable so it does not overhang and can't be tripped over or caught accidentally.
3. Place the base unit onto a stable surface.

## BOILED EGGS

1. Decide how many eggs you want to cook and how you want to cook them, hard, medium or soft boiled. Then take your measuring cup and using the markings fill with the appropriate amount of cold water to the level shown (see diagram on page 3). Please note that the more eggs you cook the less water you require.
2. Pour water into the heating bowl.
3. Before placing eggs in the egg tray, prick the top of the eggs using the pin at the bottom of the measuring cup, this will prevent the eggs from cracking during boiling.

 **WARNING:** THE PIN AT THE BOTTOM OF THE MEASURE CUP IS SHARP, TAKE CARE TO AVOID INJURIES



4. Place egg tray on top of the heating bowl filled with water.
5. Place the eggs into the egg tray, making sure the end that has been pricked is at the top.
6. Place lid on top of eggs.
7. Plug in the appliance.
8. Press the 'On' switch, the light will be lit and boiling will commence. (If the indicator light is on before pressing the power button, it indicates the egg boiler is already switched on).
9. When the eggs are ready the light will go out.
10. Remove the lid carefully to avoid contact with steam or hot surfaces.
11. Immediately after cooking, the eggs will be extremely hot, care should be taken when removing them.
12. Allow the egg boiler to cool down before re-using.

**IMPORTANT:** Always ensure the unit is switched off and unplugged immediately after use.

## POACHED EGGS

1. Using the markings on the measuring cup fill with cold water to the Medium 6-7 mark.
2. Pour water into the heating bowl.
3. Break an egg into each poaching cup.
4. Place the egg tray on top of the heating bowl

## Egg Boiler

filled with water.


5. Place the poaching cups onto the egg tray.
6. Place the lid on top.
7. Press 'On' switch, the light will be lit and poaching will commence. (if the indicator light is on before pressing the power button, it indicates the egg boiler is already switched on).
8. When the eggs are ready the light will go out.
9. Remove the lid carefully to avoid contact with steam or hot surfaces.
10. Immediately after cooking, the eggs will be extremely hot, care should be taken when removing them.
11. Allow the egg boiler to cool down before re-using.

 **WARNING:** NEVER PLACE THE POACHING CUPS DIRECTLY ONTO THE HEATING BOWL.

**IMPORTANT:** Always ensure the unit is unplugged immediately after use.


## CLEANING AND CARE

1. Unplug the cord from the outlet.
2. Allow to cool.
3. Wash the egg tray and lid in warm soapy water, rinse and dry.
4. The lid and egg tray can be washed in the dishwasher.
5. Wipe the heating bowl and main housing with a damp cloth.

 **WARNING:** TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT IMMERSE BASE IN WATER.

**TIP:** Limescale build up can be removed from the heating bowl using white vinegar and a cloth.

## WIRING

 **WARNING:** IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURERS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

The wires in the mains lead of this egg boiler are coloured in accordance to the following code:

Blue Neutral(N) Brown live(L) Yellow/Green(E)

This appliance is fitted with a 3 pin plug which has a 3amp fuse fitted.

If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this egg boiler may not correspond with the colour markings identifying the terminals in your plug, proceed as follows.

The wire, which is coloured BLUE, must be connected to the terminal in the plug which is marked with the letter 'N' or coloured BLACK or BLUE.

The wire, which is coloured BROWN, must


be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED or BROWN.

The wire, which is coloured GREEN and YELLOW, must be connected to the terminal which is marked with the letter 'E' or by the EARTH SYMBOL or coloured GREEN or GREEN and YELLOW  
THIS PRODUCT MUST BE EARTHED.

**WASTE ELECTRICAL & ELECTRONIC  
EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)**



At the end of this products life it should not be disposed of with general household waste.

 Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.

## **PRODUCT REGISTRATION**

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers. Please take a minute to register your product online at [www.wahl.co.uk](http://www.wahl.co.uk).

## **GUARANTEE**

This product is guaranteed against defects in material and workmanship for a period of 2 years from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

Egg Boiler

Wahl (UK) Ltd  
Herne Bay Trade Park  
Herne Bay  
Kent  
CT6 8JZ  
[www.wahl.co.uk](http://www.wahl.co.uk)

Customer Service T: 01227 740066

Form No. ZB720  
Rev0 06-17