



**PROFESSIONAL SHAVER  
INSTRUCTIONS**

# PROFESSIONAL SHAVER

## PROFESSIONAL SHAVER

Please read all instructions carefully to familiarise yourself with your new Professional Shaver before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: [www.wahl.co.uk](http://www.wahl.co.uk)

E: [customer.services@wahl.co.uk](mailto:customer.services@wahl.co.uk)

### CONTENTS

|                                 |         |
|---------------------------------|---------|
| <b>GENERAL USER INFORMATION</b> | Page 4  |
| <b>IMPORTANT SAFEGUARDS</b>     | Page 5  |
| <b>OPERATING INSTRUCTIONS</b>   | Page 9  |
| <b>TROUBLESHOOTING</b>          | Page 12 |
| <b>CARE AND CLEANING</b>        | Page 12 |
| <b>WIRING</b>                   | Page 14 |
| <b>DISPOSAL</b>                 | Page 14 |
| <b>GUARANTEE</b>                | Page 15 |

## PROFESSIONAL SHAVER

### GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes



**DANGER**

Danger of electric shock which may result in serious physical injury or death.



**DANGER**

Danger of explosion which may result in serious physical injury or death.



**WARNING**

Warning of possible physical injury or a health risk.



**CAUTION**

Information about danger of material damage.



Note with useful information and tips.

- ▶ Action to be taken by owner.
1. Carry out these actions in the sequence described.
- List

Please retain this leaflet for future reference.

**READ ALL INSTRUCTIONS BEFORE USING.**

## **IMPORTANT SAFEGUARDS**

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

### **Requirements**

- ▶ Read the instruction manual in full to familiarize yourself with the product before the first use.
- ▶ This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Use this appliance only for its intended purpose.

## Hazards



### **Danger! Electric shock due to damage to appliance**

- ▶ Do not operate the appliance with a broken cord, plug or charger, or if the appliance malfunctions, or is dropped or damaged in anyway.
- ▶ Any servicing or repair must be performed by WAHL (UK) LTD or a suitably qualified professional. The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.



### **Danger! Electric shock due to penetration of liquid.**

- ▶ To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.



### **Danger of explosion**

- ▶ Never use the appliance where aerosol (spray) products are being used or where oxygen is released.

- ▶ Exhausted batteries/ rechargeable batteries should not be disposed of in the household waste. Dispose of them in a completely discharged state in accordance with local legal regulations. Do not throw into fire where heat could cause them to rupture.



**Warning! Injuries due to incorrect handling**

- ▶ Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- ▶ Never use your appliance without paying attention! Except when charging always unplug this appliance from the electricity outlet immediately after using.



**Caution! Danger of product damage**

- ▶ Do not wrap the cord around the appliance / charger.
- ▶ Do not use outdoors or in damp areas.
- ▶ Never carry the unit by its power cord.
- ▶ Do not drop or insert any object into any opening.

# PROFESSIONAL SHAVER






## OPERATING INSTRUCTIONS

### QUICK TIPS & HANDY REMINDERS

- The foil is designed for super close cutting to hair that is as close as 0.1mm, the foil needs to glide over the skin. **Do not press hard against the skin but allow the shaver to work for you.** Pressing against the skin too hard can cause damage to the foil.
- It is important to use the shaver with a foil and cutter bar assembly that is clean and free of hair and other debris that might affect performance.
- The foil and cutter bar assembly are consumable parts. Replacement time may vary depending on usage. The foil is micro-thin with precise, raised inner cutting edges around the holes. These raised cutting edges will wear with use which will be indicated if your shaver slows down and the foil seems to get warm.
- To ensure continued shaving satisfaction, you should replace the foils often and cutter bar assembly periodically. (fig. A)

A

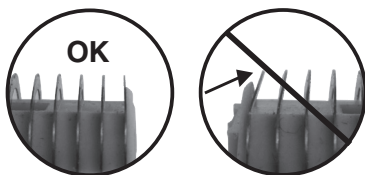

- Replace cutter bar assembly if damaged. Damage to the foil will result from using a broken or bent cutter bar assembly. WAHL MODEL NO. 7043 REPLACEMENT FOIL/CUTTER BAR ASSEMBLY
- Replace foil if creased, worn or broken. Using a damaged or broken foil can result in facial injury. WAHL MODEL NO. 7043-100 REPLACEMENT SUPER CLOSE GOLD FOIL
- Always replace the Foil Guard to protect the delicate dual foil heads when the shaver is not in use.
- For best performance, charge shaver until full charge is achieved before first use. When the shaver is fully charged, the Recharging Indicator Light will not be illuminated.

## PROFESSIONAL SHAVER

- If you are a first-time electric shaver user, or changing from another brand, there will be a 2-3 week (or less) adjustment period, while your face and beard adapt to the new foil.
- During the break-in period of the cutter bar, black residue may be left on the face. It is a harmless combination of whiskers, skin debris and minute particles from the cutter bar, which will wash off easily. This condition will quickly disappear with use.
- We suggest that you thoroughly cleanse and completely dry skin prior to shaving. For those times when the beard is longer than 1/32" begin by using a trimmer to cut the beard, then use the shaver to get a close, clean shave.
- Begin shaving at the neckline, in short, upwards strokes and then continuing upwards until you have shaved all areas of the beard. The shaver is designed to remove most facial hair and give a close, clean shave that is bump and irritation free.

## USING RECHARGEABLE SHAVERS

- This unit may be used without a cord when fully charged. If battery power is low, a power cord can attach directly to the unit for continued use as a corded unit. The indicator light will illuminate when the shaver is run with a cord.
- Plug power cord directly into unit. Be sure shaver is switched OFF when charging.
- Plug power cord into an outlet at the correct voltage.
- FOR CORDED OPERATION, connect to receptacle on the bottom of the unit. If your battery is completely run down, allow the unit to charge for 1 minute (switched OFF) before using as a corded unit.
- If the cord is left attached to the unit when not in use, the cord will automatically charge the unit when left in the OFF position.
- To clean the unit, use a clean cloth (dry or dampened with water). DO NOT USE bleach, benzene or thinner to clean the unit.

## PROFESSIONAL SHAVER

### CHARGING OPERATION

The shaver can be used with the cord or without the cord, if adequately charged. Unlike many other shavers, you will have the ability to shave even if the battery power is low. For best performance, charge shaver until full charge is achieved before first use. When the shaver is fully charged, the Recharging Indicator Light will not be illuminated. Plug the power cord into the shaver or recharging stand (not all shavers have recharge stands). **BE SURE SHAVER IS IN THE "OFF" POSITION, (MARKED "O" ON THE SHAVER) WHEN CHARGING.** In the "off" position, the Recharging Indicator Light will glow only until a full charge has been achieved. The shaver cannot be overcharged, so you may charge it as often as desired.

### CHARGING OPTIONS (fig. B)

To recharge shaver, plug power cord directly in unit or place shaver in recharge stand.



### BATTERY OPERATION

When the battery is fully charged, the equipment can be used for up to 90 minutes of continuous run time.

## PROFESSIONAL SHAVER

### TROUBLESHOOTING

If your shaver does not seem to be operating or charging properly, please check the following:

- Check the outlet's current by plugging another appliance (one you know is in proper working condition) into the outlet.
- Make sure the unit is not connected to a power source that turns itself off when lights are turned off.
- Make sure the shaver and charging transformer contacts are clean and free of hair or other contaminants.

### LITHIUM-ION BATTERY REPLACEMENT

This product uses a lithium-ion battery. For proper disposal of this appliance, please refer to disposal section on page 14. For battery replacement send the entire, intact clipper unit to Wahl (UK) Limited. Do not attempt to remove the battery. Lithium-ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged, or exposed to water or high temperatures.

If you choose not to replace the battery, the entire, intact clipper must be disposed. Do not attempt to remove the battery for disposal. Lithium-ion batteries may be subject to local disposal regulations.

### CARE AND CLEANING

#### CORD CARE

The cord should never be used to pull the shaver. Freedom of movement needs to be maintained. Care should be used to keep the cord untwisted, and undamaged. When stored, the cord should be coiled and placed neatly in a dry place.

#### CLEANING THE FOIL/CUTTER BAR

By properly cleaning and maintaining the shaver, it will provide maximum comfort and bump-free shaving. It is important to use with a foil and cutter bar assembly that is clean and free of hair and other debris that might affect performance.

## PROFESSIONAL SHAVER

### CLEANING THE FLEX FOIL HEAD

Remove the flex foil head from the top of the shaver by pressing the round button located on the right side of the shaver (**fig. C**).



C


Next, lift the flex foil head off of the shaver.

The flex foil head may be cleaned of loose material, by gently tapping the housing against the surface of your sink. Replace the flex foil head to the top of the shaver before use. The foil is micro-thin with precise, raised inner cutting edges, always handle with **care**.

### CLEANING THE CUTTER BAR ASSEMBLY (**fig. D**)

Remove the flex foil head from the top of the shaver by pressing the round button located on the right side of the shaver. Next, lift the flex foil head off of the shaver; this will expose the cutter bar assembly. Gently brush any loose hair and debris from the cutter bar assembly and surrounding area by using the pre-shave brush. To remove the cutter bar assembly, gently press down on it and turn the assembly 90 degrees. It should pop right off. Run the cutter bar assembly under warm water and dry it off with a paper towel. Return the cutter bar assembly to the shaver by reversing this process and replace the flex foil head.

D

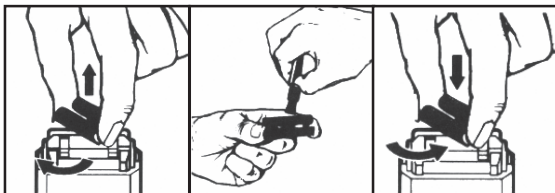

## PROFESSIONAL SHAVER

### WIRING



WARNING: IF THE TRANSFORMER IS DAMAGED IT MUST BE REPLACED IN ORDER TO AVOID A HAZARD.

THIS PRODUCT MUST ONLY BE USED WITH THE TRANSFORMER SUPPLIED. SHOULD A REPLACEMENT BE REQUIRED PLEASE CONTACT WAHL CUSTOMER SERVICES.

### DISPOSAL



**Handle with care! Environmental damage in the case of incorrect disposal.**

#### LITHIUM BATTERY DISPOSAL

Do not dispose of this product or the Lithium battery in the normal household waste. The product should be returned to Wahl Customer Services where we offer a take back service or taken to a local collection facility where they will be dealt with safely and sent for the appropriate recycling. Do not attempt to remove the battery. Lithium-Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged, or exposed to water or high temperatures.

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Adhere to the relevant legal requirements when disposing of the appliance.

**Information on the disposal of electrical and electronic appliances in the European Community:**



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

## **GUARANTEE**

This product is guaranteed against defects in material and workmanship for a period of one year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include blades, cables, shaver heads, foils and cutters etc which are consumable parts.

This product is design for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

WAHL (UK) LTD  
STERLING HOUSE  
CLIPPER CLOSE  
RAMSGATE, KENT  
CT12 5GG

CUSTOMER SERVICES T: 01227 740066  
[www.wahl.co.uk](http://www.wahl.co.uk)

Form No. ZB887  
Rev.0 03-19