

The logo consists of the word "WAHL" in a bold, black, sans-serif font, enclosed within a rounded rectangular border that has a slight 3D effect.

WAHL®

**MANSCAPER™
INSTRUCTIONS**

MANSCAPER™ TRIMMER



MANSCAPER™ TRIMMER

Please read all instructions carefully to familiarise yourself with your new Wahl Manscaper™ Trimmer before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit


W: www.wahl.co.uk

E: customer.services@wahl.co.uk



CONTENTS

GENERAL USER INFORMATION	Page 4
IMPORTANT SAFEGUARDS	Page 5
SPECIFICATIONS	Page 9
DESCRIPTION OF PARTS	Page 9
OPERATING INSTRUCTIONS	Page 10
HOW TO MANSCAPE	Page 13
CARE AND CLEANING	Page 15
TROUBLESHOOTING & WIRING	Page 16
DISPOSAL	Page 17
GUARANTEE	Page 18



MANSCAPER™ TRIMMER

GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes



DANGER

Danger of electric shock which may result in serious physical injury or death.



DANGER

Danger of explosion which may result in serious physical injury or death.



WARNING

Warning of possible physical injury or a health risk.



CAUTION

Information about danger of material damage.



Note with useful information and tips.

- ▶ Action to be taken by owner.
1. Carry out these actions in the sequence described.
- List

Please retain this leaflet for future reference.

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic safety precautions should always be followed, including the following:

Requirements on the user

- Read the instruction manual in full to familiarize yourself with the product before the first use.
- This appliance can be used by children from aged 14 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this appliance only for its intended purpose.

Hazards



Danger! Electric shock due to damage to appliance

MANSCAPER™ TRIMMER

- ▶ Do not operate the appliance with a broken cord, plug or charger, or if the appliance malfunctions, or is dropped or damaged in anyway.
- ▶ Any servicing or repair must be performed by Wahl (UK) Ltd or a suitably qualified professional.
- ▶ The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.



Danger! Electric shock due to penetration of liquid

- ▶ Do not reach for an appliance that is plugged in and has fallen into water. Unplug immediately from the outlet.

Note: Some electrical parts inside the trimmer are electrically live, even with the switch “off.” Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.



Danger of explosion!

- ▶ Never use the appliance where aerosol (spray) products are being used or where oxygen is released.

- ▶ Do not attempt to replace the battery. Lithium ion batteries may explode, catch fire and or cause burns if they are dismantled, damaged or exposed to moisture and/or high temperatures.
- ▶ Do not expose the appliance to temperatures below 0°C and above +40°C for any length of time. Avoid direct exposure to sunlight.



Warning! Injuries due to incorrect handling

- ▶ Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- ▶ Never use your appliance without paying attention! Except when charging always unplug this appliance from the electricity outlet immediately after using
- ▶ Exhausted batteries/ rechargeable batteries should not be disposed of in the household waste. Dispose of them in a completely discharged state in accordance with local legal regulations. Do not throw into fire where heat could cause them to rupture.



Caution! Danger of product damage

- ▶ Do not wrap the cord around the appliance.
- ▶ Never carry the unit by its power cord.
- ▶ Do not drop or insert any object into any opening.

MANSCAPER™ TRIMMER

WET / DRY USE

- ▶ The WAHL trimmer is designed to be water resistant and shower proof. This lets you use your WAHL trimmer in the shower or at the sink without worry and makes it easy to clean under running water.

i NOTE: Do not submerge trimmer to prevent water ingress into electronics. Warranty is void if trimmer is submerged.

i NOTE: The trimmer is for wet/dry use. The trimmer will not run while the cord is attached for safety.



This symbol, located on the trimmer, represents that the trimmer is suitable for use in the bath and shower.

MANSCAPER™ TRIMMER

 
SPECIFICATIONS

Product Name: Manscaper™ Trimmer

Rated Voltage: 5V DC

Power Consumption: 1.2A

DESCRIPTION OF PARTS

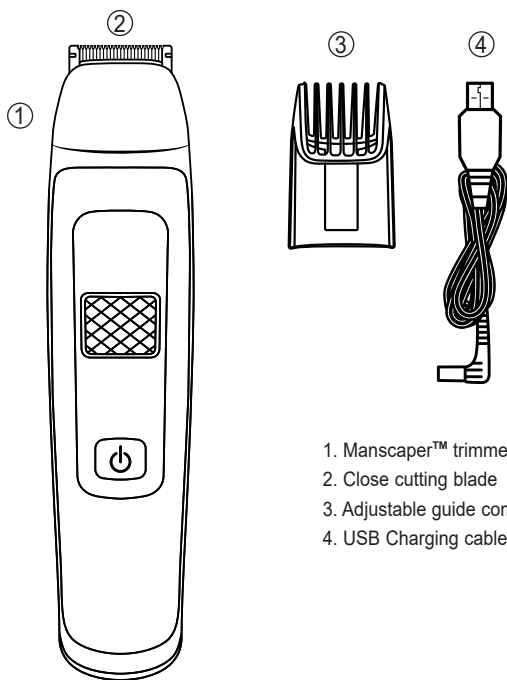

1. Manscaper™ trimmer
2. Close cutting blade
3. Adjustable guide comb
4. USB Charging cable

MANSCAPER™ TRIMMER

OPERATING INSTRUCTIONS

 
RECHARGING

The trimmer cannot be overcharged, so you may charge it as often as desired. However, periodic recharging of the trimmer, rather than continuous recharging, will prolong battery life.

1. All 4 LEDs light up when the unit is powered on and fully charged. These LED's are also battery level indicators and gradually turn off based on the charge level.
2. The bottom LED lights up when there is a low battery (less than 25% power). If lower than 10% battery life, the bottom LED flashes.
3. When charging the unit, the LEDs light up to show the charge level. All 4 LEDs will be lit when the unit is fully charged.
4. This trimmer is conveniently designed for household use. It should be allowed to charge for 60 minutes before first use.
5. Remove the trimmer, USB cable and accessories from the packing material.
6. Connect the USB cable to the trimmer.
7. Plug in the USB: to a certified device such as on a computer, receptacle, lamp, class 2 power supply or automotive adapter.
8. Warning: Never use an unapproved USB source.
9. When trimmer is low in power, it should charge to assure maximum power is available when it is next used.

This trimmer is designed to completely charge the battery without overcharging. Do not use the trimmer while it is charging.

10. Only use the USB cable supplied by the manufacturer with this trimmer.

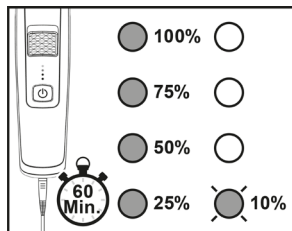

MANSCAPER™ TRIMMER

TRAVEL LOCK

 
The Wahl Manscaper® trimmer comes with an electronic travel lock to avoid accidental activation while transporting.

Hold power button down for 3 seconds to engage travel lock.

Trimmer will turn on for those 3 seconds, and turn off once the travel lock is engaged.

Hold power button down for 3 seconds to disengage travel lock. Trimmer will turn on once the travel lock is disengaged.

Disable/Enable Travel Lock

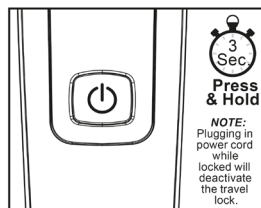


WET/DRY USE

The Wahl trimmer is designed to be water resistant and shower proof. This lets you use your Wahl trimmer in the shower or at the sink without worry and makes it easy to clean under running water.

NOTE: The trimmer is for wet/dry use. The trimmer will not run while the cord is attached for safety.

 For best results use on damp or dry hair. Cutting hair while it is saturated with water is not good for the hair and is not recommended.

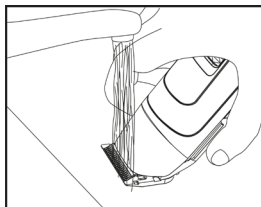


This symbol, located on the trimmer, represents that the shaver is suitable for use in the bath and shower.

MANSCAPER™ TRIMMER

TRIMMING WITH ATTACHMENT COMB

The attachment is ideal for blending, tapering and defining, as well as for achieving a “close trim” stubble look. To use the attachment, go with the hair direction. To achieve closer looks, go against the hair direction.

 To attach guide comb, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the trimmer blade.

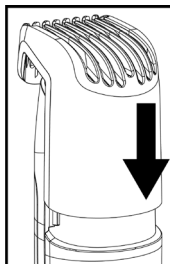


TRIMMING PRIVATES

Manscaping can be easy and fun, but also a little intimidating. It is certainly an area where you will want to take some extra time and care to get the results you want with no discomfort. Wahl's Manscaper™ with its wrap-around safety guards will help keep your privates safe during the coming expedition, but you will still want to observe some caution to avoid any mishaps along the way.

Before you even begin, it's important to know what you want to have your “NetherScape” look like when you are done. Are you looking for an even trim all over, edging back excess hair that sticks out around your briefs, or planning to use one of the more whimsical stylings that can be found in an internet search? Once you have decided what you want the finished result to look like, follow the steps below to achieve your new look.

HOW TO MANSCAPE

 1. Clean is important. Be sure your Manscaper™ is clean and ready to perform the task with plenty of power available to do the job. Also, make sure your hair is clean and dry for best results.
2. Use a comb to gently remove any snarls or tangles from your pubic hair. Go slow at first until you get the hang of combing the NetherScape to avoid painful pulls and jabs. After your hair is clear of obstructing tangles, you are ready to start trimming.
3. Set the wrap-around guard dial to its longest position. You will set it to progressively shorter lengths as you work your hair into the style you want, but it's best to take off a little at a time.
4. Gently trim in the direction your hair naturally grows, and avoid cutting against the grain as much as possible.
5. Using your free hand, pull your skin taught as you get to shorter lengths to avoid folds of skin entering the trimmer blade. See illustrations for examples of what to do and what not to do.
6. Do the job, but don't over do it. To avoid irritating sensitive skin, you will want to make as few passes as possible as you get into the shorter lengths. Remember to go gently and take light strokes.
7. **TAKE YOUR TIME.** A fully charged Manscaper™ will run for up to 100 minutes on a charge, so you have plenty of time to go slow and get the job done right.

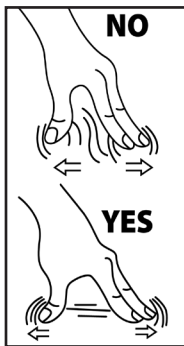

PRO TIP: After you perform your trimming, make sure to clean up the mess. Nobody wants to walk into the bathroom and find that all over the floor.

 
MANSCAPER™ TRIMMER

SPECIAL FEATURES


Your trimmer has been designed with several advanced features to help you get perfect results every time you trim. Your trimmer may be used to neatly trim anywhere you may need grooming.

Your trimmer has a Detachable Blade System for easy cleaning.

To remove the blade, simply pull top edge of blade away from body unit. To attach, align back tab of the blade to the cavity on the inner edge of trimmer unit and push down on top of blade.

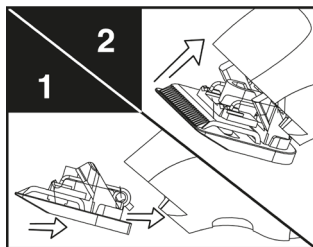

 Self-Sharpening Blades are made to maintain their shape and sharpness for extended periods.

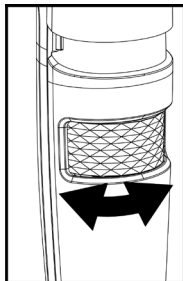

Wrap-Around Safety Guard makes achieving a consistent trim easy every time. The guide has 19 cutting lengths, and can be removed (providing an 20th cutting position).

To attach the guide, simply slide it on. Adjust the trimming length by turning the dial left or right to the desired setting.

CARING FOR YOUR TRIMMER

OILING BLADES

For best results, use Wahl Clipper Oil on the blades only when necessary, or approximately once a month. Motor bearings are permanently lubricated—do not attempt to oil.

 
When oiling your trimmer, turn the trimmer "ON - I," hold the unit with the blades facing DOWN and squeeze three drops across the front of the blade and one drop on each side on the heel of the blade. Wipe off excess oil with soft cloth.

NOTICE—DO NOT OVER OIL!

Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.

BLADE CARE

Trimmer blades have precision-hardened, ground and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty or abrasive material. Clean with the included brush.

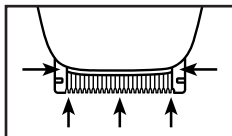

CLEANING/STORAGE

Before storing your trimmer, use the cleaning brush to whisk any loose hairs from the unit and the blades. Store unit in such a manner so that blades are protected from damage.

MANSCAPER™ TRIMMER

TROUBLESHOOTING

- If the trimmer unexpectedly stopped operating try resetting the device by plugging the trimmer into the USB cable.
- If your trimmer does not seem to take a charge, check the following before returning it for repair:
 1. Check outlet to make sure it is working by plugging in another appliance.
 2. Be sure the trimmer is properly connected to the power source, all connections are secure and the switch on the trimmer is turned “OFF - 0.”
 3. If your electricity is connected to a master power switch, we suggest the trimmer be disconnected from the power source anytime the master switch is off. Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery.
 4. If trimmer does not run and it is completely charged, turn the unit “ON - I” and pinch or push the blades manually. (Oil may have dried out between the blades, so they may be temporarily stuck together.)

WIRING



WARNING: If the USB cable is damaged it must be replaced in order to avoid hazard. This product must only be used with the USB cable supplied. Should a replacement be required, please contact WAHL customer services on 01227 740066.

LITHIUM ION BATTERY REPLACEMENT, TRIMMER DISPOSAL AND RECYCLING

LITHIUM-ION BATTERY REPLACEMENT

For battery replacement the entire, intact clipper or trimmer should be sent to: Wahl (UK) Ltd Customer Services (the address can be found on the reverse of this booklet) or taken to a suitably qualified professional. The battery should only be replaced by the original manufacturers spare, for safety reasons a substitute should not be used. Do not attempt to remove the battery. Lithium-Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged or exposed to water or high temperatures.

LITHIUM BATTERY DISPOSAL

Do not dispose of this product or the Lithium battery in the normal household waste. The product should be returned to Wahl Customer Services where we offer a take back service or taken to a local collection facility where they will be dealt with safely and sent for the appropriate recycling.

DISPOSAL



Handle with care! Environmental damage in the case of incorrect disposal.

- ▶ Correct disposal will ensure environmental protection and prevent any potentially harmful impact on people or the environment.

Adhere to the relevant legal requirements when disposing of the appliance. Information on the disposal of electrical and electronic appliances in the European Community:



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2012/19/ EU (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

MANSCAPER™ TRIMMER

GUARANTEE

This trimmer is guaranteed against defects in material and workmanship for a period of five years from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include cables, shaver heads, foils and cutters etc, which are consumable parts.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under law in the United Kingdom.

MANSCAPER™ TRIMMER

WAHL (UK) LTD
STERLING HOUSE
CLIPPER CLOSE
RAMSGATE, KENT
CT12 5GG

CUSTOMER SERVICES T: 01227 740066
www.wahl.co.uk

Form No. ZC218
Rev.0 01-24