



P R O F E S S I O N A L

# **ANIMAL CLIPPERS AND TRIMMERS**

## **INSTRUCTIONS**

## TABLE OF CONTENTS

<b>IMPORTANT SAFEGUARDS</b>	3
USEFUL INFORMATION ABOUT YOUR PRODUCT	5
BLADES	5
 <b>PRODUCT INSTRUCTIONS</b>	
<b>MAINS CLIPPERS</b>	
<b>MAX 45</b>	
MAINS POWERED CORDED CLIPPER	6
<b>KM5 / KM10</b>	
MAINS POWERED CLIPPER	10
<b>KMC+</b>	
CORD/CORDLESS CLIPPER	14
<b>KM SUPERA</b>	
RECHARGEABLE CLIPPER	18
<b>ARCO</b>	
RECHARGEABLE DOG CLIPPER	24
<b>BRAVURA</b>	
CORD/CORDLESS CLIPPER	28
 <b>TRIMMERS</b>	
<b>BRAVMINI</b>	
RECHARGEABLE TRIMMER	33
<b>MINI ARCO</b>	
CORD/CORDLESS TRIMMER	36
 <b>ATTACHMENT COMBS</b>	38
<b>BATTERY REPLACEMENT, REMOVAL &amp; DISPOSAL</b>	39
<b>WIRING &amp; DISPOSAL</b>	40

These clippers and trimmers are designed for use in commercial grooming environments.  
Save these instructions for future reference.

Please read all instructions carefully to familiarise yourself  
with the product before using.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: [www.wahl.co.uk](http://www.wahl.co.uk)

E: [customer.services@wahl.co.uk](mailto:customer.services@wahl.co.uk)

## IMPORTANT SAFEGUARDS

When using your electrical appliance, basic safety precautions should always be followed, including the following:

### REQUIREMENTS

- ▶ Read the instruction manual in full to familiarise yourself with the product before the first use.
- ▶ This appliance can be used by children from aged 14 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Use this appliance only for its intended purpose.

### HAZARDS



#### **Danger! Electric shock due to damage to appliance**

- ▶ Do not operate the appliance with a broken cord, plug or charger, or if the appliance malfunctions, or is dropped or damaged in anyway.
- ▶ Any servicing or repairs must be performed by an authorised service representative.
- ▶ The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.



#### **Danger! Electric shock due to penetration of liquid**

- ▶ To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.



### **Danger of explosion**

- ▶ Never use the appliance where aerosol (spray) products are being used or where oxygen is.
- ▶ Do not expose the appliance to temperatures below 0°C and above +40°C for any length of time. Avoid direct exposure to sunlight.



### **Warning! Injuries due to incorrect handling**

- ▶ Cutting blades may become hot after prolonged use.
- ▶ Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- ▶ Never use your appliance without paying attention! Except when charging always unplug this appliance from the electricity outlet immediately after using.
- ▶ These appliances are intended for animal hair trimming and clipping only.



### **Caution! Danger of product damage**

- ▶ Do not wrap the cord around the appliance.
- ▶ Do not use outdoors or in damp areas.
- ▶ Never carry the unit by its power cord.
- ▶ Do not drop or insert any object into any opening.

*Covers all models:*

Emission sound pressure level: max. <70 dB(A)

Vibration: < 2,5 m/s<sup>2</sup>



## USEFUL INFORMATION ABOUT YOUR PRODUCT

### Essential information

*For maximum efficiency, durability and satisfaction from Wahl clippers and trimmers, please note the following points:-*

- Regularly apply a few drops of oil to the blades during clipping/trimming. Clipper oil lubricates the blades and will ensure your clippers or trimmers perform to their maximum capacity. Without oil, friction is increased therefore generating heat. If blades are getting hot then insufficient oil is being applied or the blades need cleaning or sharpening.
- Always ensure the animal coat is dry, as clean as possible and brushed to remove tangles, grease and dirt particles from the hair.
- During operation, take time to regularly brush hairs and dirt from the blades.
- We recommend use of Wahl Hygienic Spray to ensure grease and dirt particles are flushed from the blade surface. DO NOT use water to clean the blades.
- Always oil the blades after cleaning.
- Always clean your machine and blades thoroughly when you have finished clipping. Do not separate the top and bottom blade when cleaning.
- If your product has an air filter ensure it is clear of obstructions to avoid overheating the motor.
- Whenever storing your appliance, disconnect all cables and store your clipping/trimming kit in a dry, temperate environment.
- Always oil your blades before use and before storage to prevent atmospheric moisture causing damage to the blade surface.

### BLADES

The blades are the single most important part of a clipper or trimmer and must be well maintained at all times for maximum cutting performance.

Cutting hair does not blunt the blades. Abrasive particles on the animal's hair, such as dirt, sand, grease, etc will blunt the blades.


Blades will not cut if abrasive particles are picked up and carried by the oil film between the blades. These particles tend to separate the blades from each other and pull the hair as opposed to cutting it cleanly. Keeping your blades well oiled performs the following important functions:-

- Provides a low friction, very thin film lubricant between the cutting blades so the blades can take a full cutting stroke without becoming hot from frictional heat.
- Flushes abrasive particles and hairs out from between the blades.

If you cut into dirt, immediately clean your blades with Wahl Hygienic Spray or Wahl Clipper Oil to flush out the dirt. ALWAYS apply clipper oil after cleaning with hygienic spray or coolant.

# MAX 45 - CORDED CLIPPER

Model: 1245

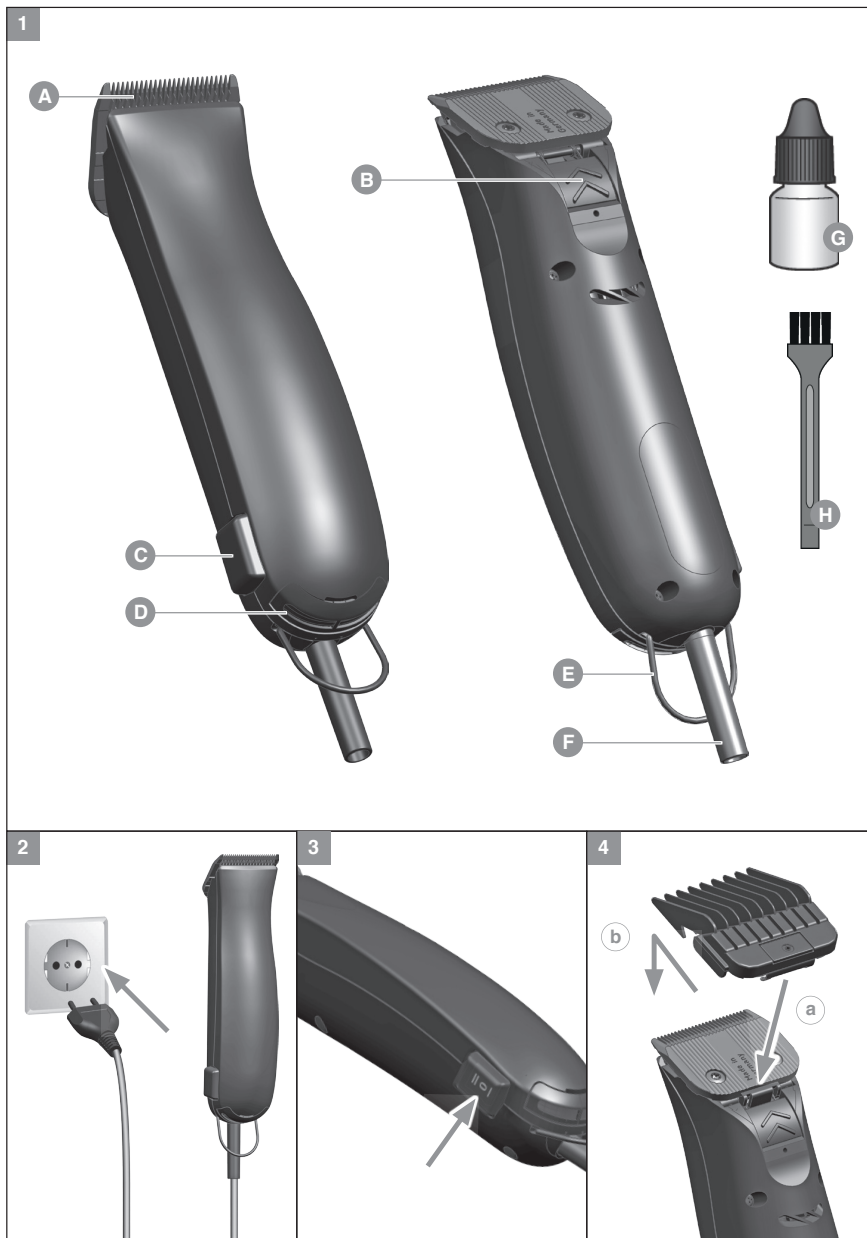



## Model: **MAX 45 - CORDED CLIPPER**

### **Description of parts (Fig. 1)**

- A. Blade set
- B. Release button for blade set
- C. On/off switch
- D. Air filter
- E. Hang-up loop
- F. Mains cable
- G. Oil for blade set
- H. Cleaning brush

### **Mains Operation**

1. Connect to the mains power supply (Fig. 2)
2. Switch on the appliance using the on/off switch and switch off after use (Fig. 3).  
The appliance has two speed settings.  
These can be selected via the on/off switch.  
Setting I = slow speed  
Setting II = high speed

### **Cutting with the attachment comb**

The appliance can also be operated with attachment combs. Attachment combs can be used to extend the cutting length range.

For best results we recommend using a #30 or #10 blade with the comb attachments.

Accessories are available from your local dealer.

### **Attaching / removing the attachment comb**

1. Fit the attachment comb onto the bottom edge of the blade set (Fig. 4a) and push it over the cutting edge of the bottom blade until it locks (Fig. 4b).
2. Push the attachment comb towards the cutting edge of the bottom blade (Fig. 5) and remove it from the blade set.

### **Changing the blade set**

To remove a blade set:

1. Switch off the appliance using the on/off switch (Fig. 3).
2. Press the release button (B) (Fig. 6a) towards the blade set and lift the blade set away from the housing (Fig. 6b).
3. Remove the blade set from the clip (Fig. 6c).

To attach a new blade set:

1. Attach the new blade set onto the clip (Fig. 8a).
2. Ensure that the clip is folded out. If this is not the case, you can fold out the clip with a flat screwdriver (Fig. 7).
3. Push the blade towards the machine to snap into place.
4. If the blade fails to engage, switch the appliance on (Fig. 3), then push the blade set against the hand-held appliance until it audibly clicks into place and the blade moves (Fig. 8b).

Remove the attachment comb (Fig. 5) after every use and lift the blade set out of the casing (Fig. 6).

Use the cleaning brush to remove any cut hairs from the housing opening and from the blade set (Fig. 9).



**Caution!** Injuries due to incorrect handling.

The blade set must not be unscrewed. The top blade must not be pushed out completely!

- Push the top blade to the side (Fig. 9a) and remove cut hairs from the top and bottom blade using the cleaning brush.
- After cleaning, return the top blade to its initial position (Fig. 9b). The top blade should be aligned in the centre of the bottom blade. After cleaning the blade set, we recommend using hygienic spray. It keeps all blade sets hygienically clean and is effective against bacteria and viruses.

- Oil the blade set with the blade set oil (Fig. 10).
- We recommend that you clean and care for your blade set during and after clipping.
- Re-attach the blade set after cleaning (Fig. 7/8). Switch the appliance on briefly (approx. 10 seconds) to ensure the oil film is evenly distributed.
- For a good and long-lasting cutting performance, it is important to oil the blade set frequently.
- If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.

**Clean the air filter regularly to ensure the supply of air:**

1. Detach the filter cover using a blunt lever and remove from the housing (Fig. 11a)
2. Clean the air filter using the cleaning brush.
3. Push the filter cover into the housing until it locks into position (Fig. 11b).
4. Only wipe the appliance with a soft, slightly damp cloth. Do not use solvents or abrasives.

**PROBLEM ELIMINATION**

**Blade set is cutting badly or pulling hair out.**

**Cause:** Blade set is dirty, worn out or blade is blunt.

- Clean and oil the blade set (Fig. 9/10);  
if this does not resolve the problem, replace the blade set (Fig. 6/7/8).

**Skin injury**

**Cause:** Too much pressure on the skin.

- Reduce pressure when cutting close to skin.

**Cause:** Damaged blade set.

- Check whether the blade edges, or teeth are damaged and replace the blade set if necessary.
- NEVER use a damaged blade as this will cause injury.

**Appliance is not working**


**Cause:** Defective power supply.

- Make sure that contact between the mains and the socket is faultless. Check the mains cable for possible damage.

*In the event that this information does not help you resolve your problem, please contact our Customer Service team. Never attempt to repair the appliance yourself!*

## KM5 - CORDED CLIPPER KM10 - CORDED CLIPPER

Model: 1260 + 1261

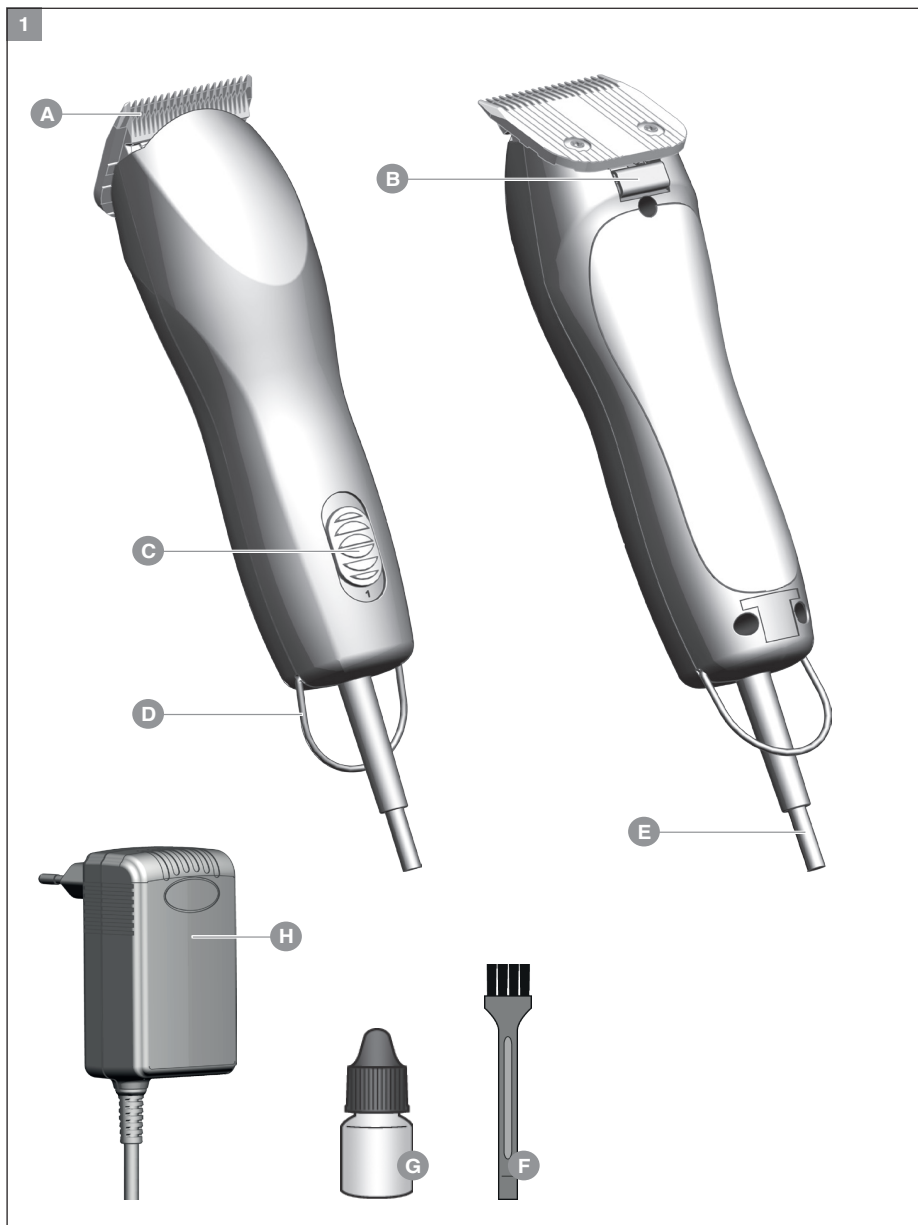



Model: **KM5 - CORDED CLIPPER**  
**KM10 - CORDED CLIPPER**

**Description of parts (Fig. 1)**

- A. Blade set
- B. Release button for blade set
- C. On/off switch
- D. Hang-up loop
- E. -
- F. Cleaning brush
- G. Oil for blade set
- H. Plug-in transformer

**Mains Operation**

1. Connect to the mains power supply (Fig. 2)
2. Switch on the appliance using the on/off switch (Fig. 3a) and switch off after use (Fig. 3b).  
The appliance has two speed settings.  
These can be selected via the on/off switch.  
Setting I = slow speed  
Setting II = high speed

**Cutting with the attachment comb**

The appliance can also be operated with attachment combs. Attachment combs can be used to extend the cutting length range.

For best results we recommend using a #30 or #10 blade with the comb attachments.

Accessories are available from your local dealer.

**Attaching / removing the attachment comb**

1. Fit the attachment comb onto the bottom edge of the blade set (Fig. 4a) and push it over the cutting edge of the bottom blade until it locks (Fig. 4b).
2. Push the attachment comb towards the cutting edge of the bottom blade (Fig. 5) and remove it from the blade set.

**Changing the blade set**

To remove a blade set:

1. Switch off the appliance using the on/off switch (Fig. 3).
2. Press the release button (B) (Fig. 6a) towards the blade set and lift the blade set away from the housing (Fig. 6b).
3. Remove the blade set from the clip (Fig. 6c).

To attach a new blade set:

1. Attach the new blade set onto the clip (Fig. 8a).
2. Ensure that the clip is folded out. If this is not the case, you can fold out the clip with a flat screwdriver (Fig. 7).
3. Push the blade towards the machine to snap into place.
4. If the blade fails to engage, switch the appliance on (Fig. 3), then push the blade set against the hand-held appliance until it audibly clicks into place and the blade moves (Fig. 8b).

Remove the attachment comb (Fig. 5) after every use and lift the blade set out of the casing (Fig. 6).

Use the cleaning brush to remove any cut hairs from the housing opening and from the blade set (Fig. 9).



**Caution!** Injuries due to incorrect handling.

The blade set must not be unscrewed. The top blade must not be pushed out completely!

- Push the top blade to the side (Fig. 9a) and remove cut hairs from the top and bottom blade using the cleaning brush.
- After cleaning, return the top blade to its initial position (Fig. 9b). The top blade should be aligned in the centre of the bottom blade. After cleaning the blade set, we recommend using hygienic spray. It keeps all blade sets hygienically clean and is effective against bacteria and viruses.
- Oil the blade set with the blade set oil (Fig. 10).
- We recommend that you clean and care for your blade set during and after clipping.



- Re-attach the blade set after cleaning (Fig. 7/8). Switch the appliance on briefly (approx. 10 seconds) to ensure the oil film is evenly distributed.
- For a good and long-lasting cutting performance, it is important to oil the blade set frequently.
- If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.

**Clean the air filter regularly to ensure the supply of air:**

1. Clean the air filter using the cleaning brush.
2. Only wipe the appliance with a soft, slightly damp cloth. Do not use solvents or abrasives.

**PROBLEM ELIMINATION**

**Blade set is cutting badly or pulling hair out.**

**Cause:** Blade set is dirty, worn out or blade is blunt.

- Clean and oil the blade set (Fig. 9/10);  
if this does not resolve the problem, replace the blade set (Fig. 6/7/8).

**Skin injury**

**Cause:** Too much pressure on the skin.

- Reduce pressure when cutting close to skin.

**Cause:** Damaged blade set.

- Check whether the blade edges, or teeth are damaged and replace the blade set if necessary.
- NEVER use a damaged blade as this will cause injury.

**Appliance is not working**


**Cause:** Defective power supply.

- Make sure that contact between the mains and the socket is faultless. Check the mains cable for possible damage.

*In the event that this information does not help you resolve your problem,  
please contact our Customer Service team. Never attempt to repair the appliance yourself!*

## KMC+ CORD/CORDLESS CLIPPER

Model: KML

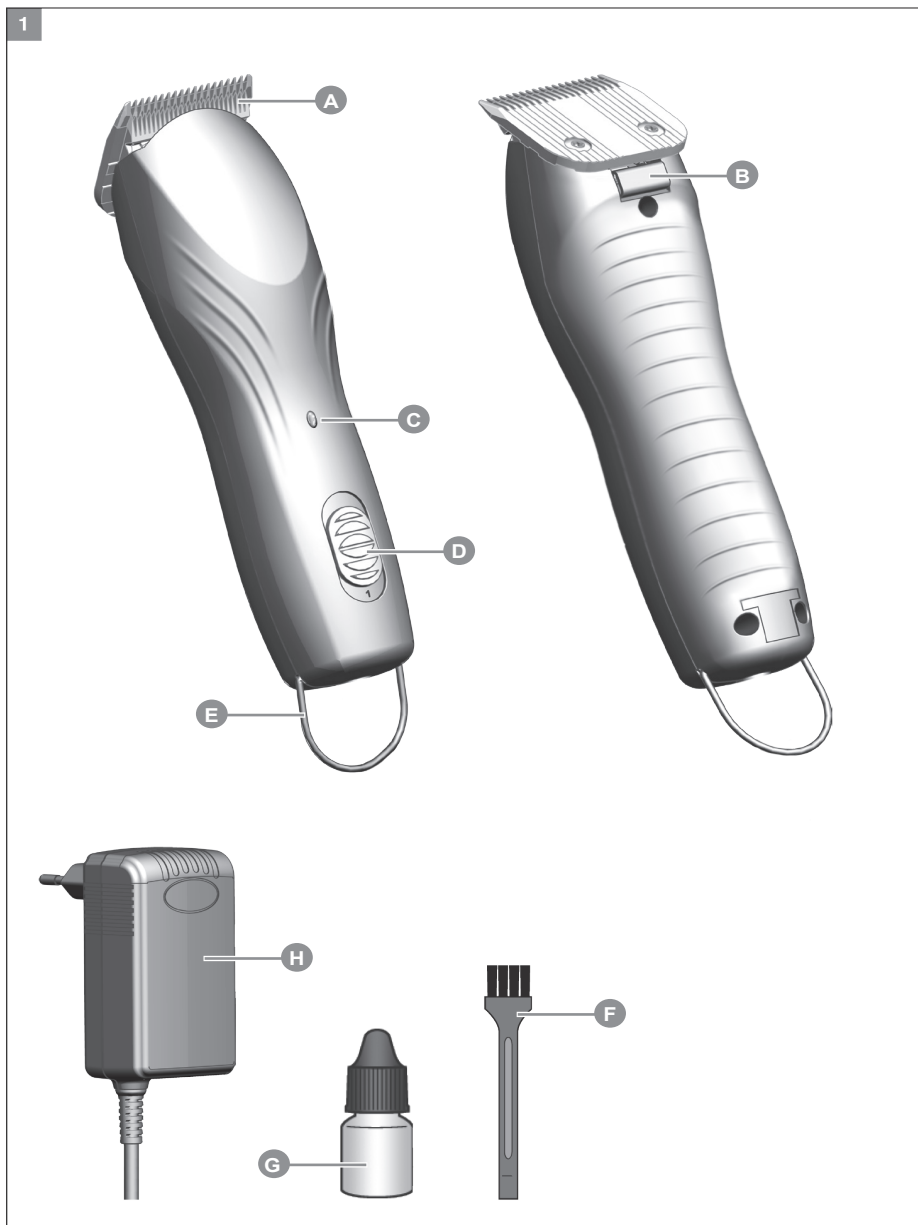



Model: **KMC+ CORD/CORDLESS CLIPPER**

#### **Description of parts (Fig. 1)**

- A. Blade set
- B. Release button for blade set
- C. LED Light
- D. On/off switch
- E. Hang-up loop
- F. Cleaning brush
- G. Oil for blade set
- H. Plug-in transformer

#### **Operation**

- Charge the clipper battery fully before using for the first time.
- Turn unit on/off
- Two Speed: Push the power switch to (1) 3700 for the low speed and to the (2) 4500 for the high speed. To turn unit off push the power switch to the bottom position (0).

#### **Charging the battery**

- During cordless operation, the two-color LED light will light up solid green. When the green LED light begins to flash, this indicates battery charge is low and the unit will need to be recharged.
- When the battery has fully run down, the clipper will switch itself off automatically.
- To charge, connect the cord to the charging socket on the clipper and the plug the plugin transformer into an electrical socket.
- When the battery begins to charge, an LED light will blink green to indicate the unit is charging. When the LED light has stopped blinking and remains a constant, unblinking green, the clipper is fully charged and ready for use.
- Full charge time will take approximately 60 minutes. A full charge allows for approximately 120 minutes of clipper run time. In the case of low battery, the clipper can be used as a corded unit. However the battery will not begin to charge until the clipper is turned off.
- This clipper includes a "Quick Charge" feature; For example, 10 minutes of charge time will provide 15 minutes of run time.

#### **Cutting with the attachment comb**

The appliance can also be operated with attachment combs. Attachment combs can be used to extend the cutting length range.

For best results we recommend using a #30 or #10 blade with the comb attachments.

Accessories are available from your local dealer.

#### **Attaching / removing the attachment comb**

1. Fit the attachment comb onto the bottom edge of the blade set (Fig. 4a) and push it over the cutting edge of the bottom blade until it locks (Fig. 4b).
2. Push the attachment comb towards the cutting edge of the bottom blade (Fig. 5) and remove it from the blade set.

#### **Changing the blade set**

To remove a blade set:

1. Switch off the appliance using the on/off switch (Fig. 3).
2. Press the release button (B) (Fig. 6a) towards the blade set and lift the blade set away from the housing (Fig. 6b).
3. Remove the blade set from the clip (Fig. 6c).

To attach a new blade set:

1. Attach the new blade set onto the clip (Fig. 8a).
2. Ensure that the clip is folded out. If this is not the case, you can fold out the clip with a flat screwdriver (Fig. 7).

3. Push the blade towards the machine to snap into place.
4. If the blade fails to engage, switch the appliance on (Fig. 3), then push the blade set against the hand-held appliance until it audibly clicks into place and the blade moves (Fig. 8b).

Remove the attachment comb (Fig. 5) after every use and lift the blade set out of the casing (Fig. 6). Use the cleaning brush to remove any cut hairs from the housing opening and from the blade set (Fig. 9).



**Caution!** Injuries due to incorrect handling.

The blade set must not be unscrewed. The top blade must not be pushed out completely!


- Push the top blade to the side (Fig. 9a) and remove cut hairs from the top and bottom blade using the cleaning brush.
- After cleaning, return the top blade to its initial position (Fig. 9b). The top blade should be aligned in the centre of the bottom blade. After cleaning the blade set, we recommend using hygienic spray. It keeps all blade sets hygienically clean and is effective against bacteria and viruses.
- Oil the blade set with the blade set oil (Fig. 10).
- We recommend that you clean and care for your blade set during and after clipping.
- Re-attach the blade set after cleaning (Fig. 7/8). Switch the appliance on briefly (approx. 10 seconds) to ensure the oil film is evenly distributed.
- For a good and long-lasting cutting performance, it is important to oil the blade set frequently.
- If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.


#### PROBLEM ELIMINATION

- **Flashing Red LED Light:** The over-current protection circuit has been activated, possibly due to using a dirty or scored blade. The unit will automatically shut down, but can be reset by turning the switch to the off position and then turning it back on. If the problem is not resolved, the unit may stop again right away.
- **Solid Red LED Light:** The battery pack temperature is too high. This could happen if the unit is used under very heavy clipping loads in extreme temperature conditions or while charging the unit in an extreme temperature environment. The unit will be temporarily disabled until the battery temperature returns to a normal level. Do not attempt to recharge the unit until the solid red LED light has turned off.

*In the event that this information does not help you resolve your problem, please contact our Customer Service team. Never attempt to repair the appliance yourself!*

## KM SUPERA - CORDLESS CLIPPER - 1263

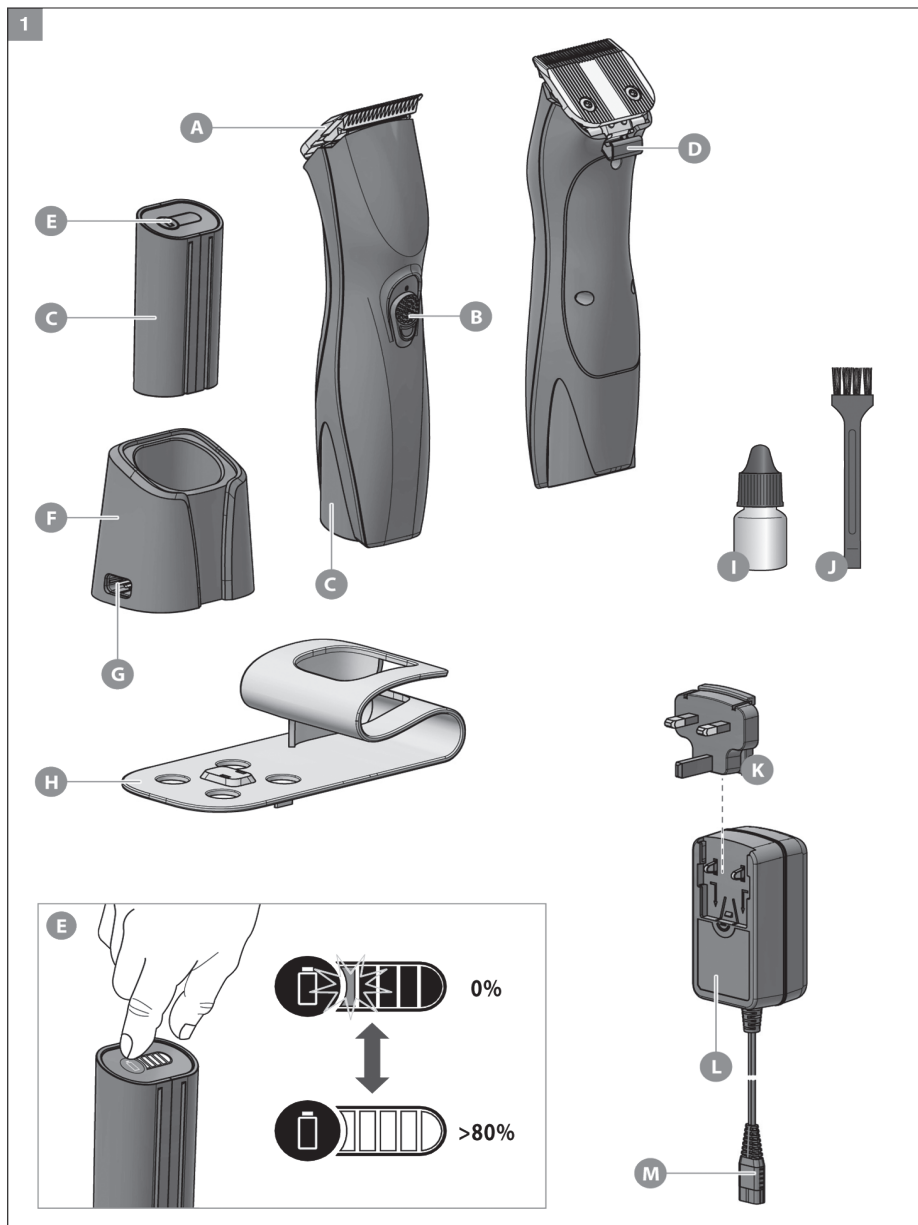

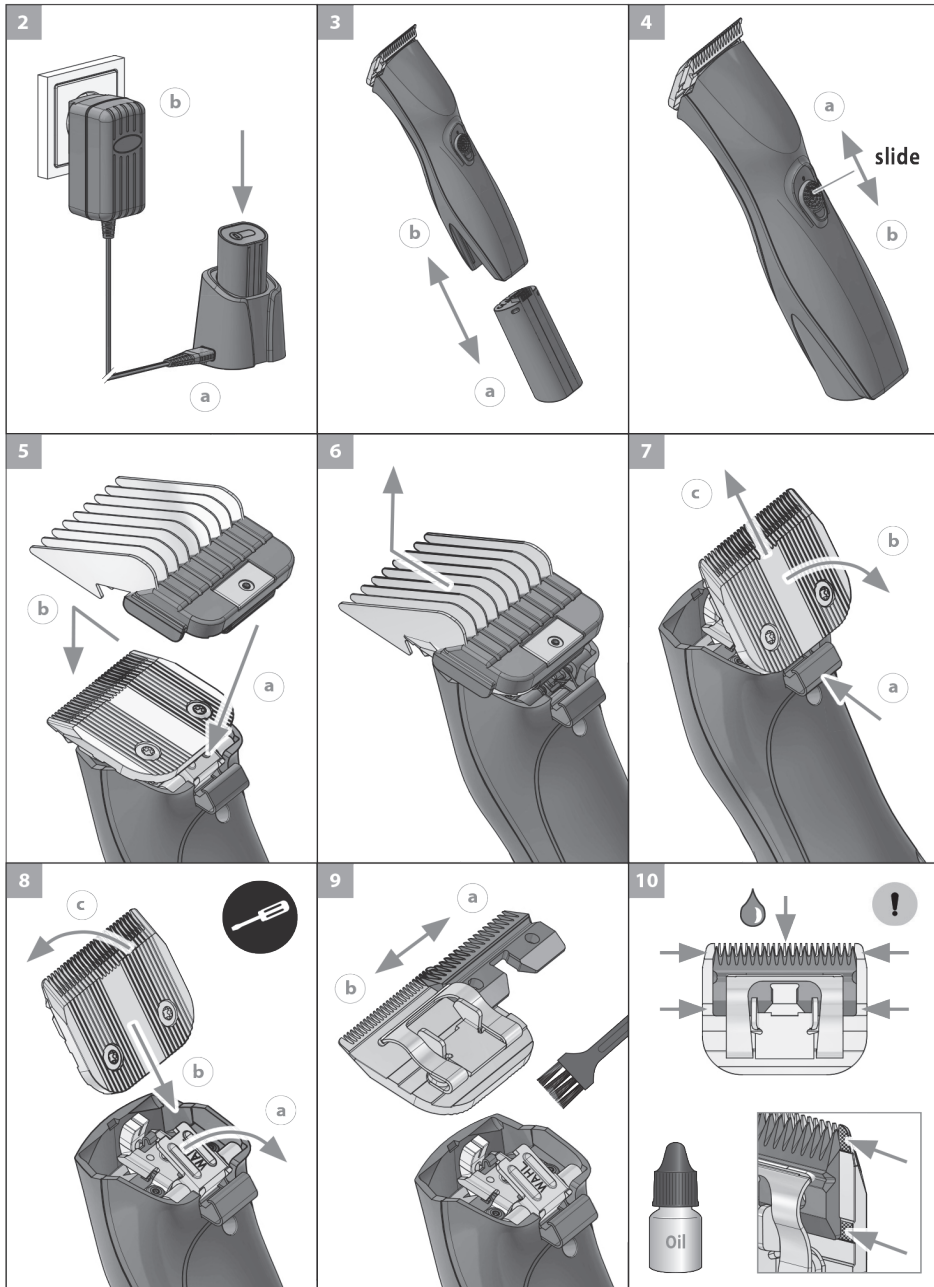

## Model: **KM SUPERA - RECHARGEABLE CLIPPER**



### Description of parts (Fig. 1)

- A. Blade set
- B. On/off switch
- C. Battery pack
- D. Release button for blade set
- E. Charging/battery power indicator
- F. Charging stand
- G. Charging stand socket
- H. Appliance holder\*
- I. Oil for blade set\*
- J. Cleaning brush\*
- K. Plug attachment (depending on country variant)
- L. Plug-in transformer
- M. Appliance plug

\*Optional accessories can vary, depending on the model

### Operation

#### Preparation

-  Keep the packaging material for safe storage or transport later.
- Check that the contents are complete. Scope of supply, see packaging.
- Check all the parts for possible transport damage.
-  Please note that we perform quality tests on all of our products. Therefore, you may find small synthetic hair on the blade set or on the machine. However, we assure you that your clipper and cutting blade / blade set are unused.





### Safety




 

#### **Caution! Damage due to incorrect power supply.**

- Only operate the appliance with the voltage stated on the nameplate.

### Charging the battery

1. Connect the appliance plug of the plug-in transformer to the charging stand socket (Fig.2 .
2. Connect the plug-in transformer to the mains socket (Fig.2 .
3. Place the battery pack into the charging stand (Fig.2).The charging process starts.
-  The charging/battery power indicator flashes during the charging process.
4. Once capacity reaches >80%, all LED segments light up on the charging/battery power indicator. Once full charging capacity has been reached, the charging/battery power indicator goes out.
-  Additional battery packs are available for purchase. While the hair clipper is in use, a second battery pack can be charged in the charging stand. This way the clipper is always ready for use.

### Battery Operation

1. Switch on the appliance using the on/off switch, and switch off after use (Fig. 4 /.
-  • The appliance has two different speed settings. These can be selected via the on/off switch.  
Setting 1 = slow speed | Setting 2 = high speed



- In case of insufficient maintenance of the blade set, the operating time can be reduced considerably.
- During battery operation, the charging/battery power indicator lights up to reflect the charge status of the battery pack.
- When the charging/battery indicator lights start to blink, the battery pack needs to be recharged.

To replace the battery pack, proceed as follows:

1. Switch off the appliance using the on/off switch (Fig. 4 ⑥).
2. Remove the battery pack from the appliance (Fig. 3 ②).
3. Remove the charged battery pack from its charging stand and slide it into the appliance until it engages with an audible click (Fig. 3 ⑥).

Checking the battery charge level: You can check the prevailing charge status of the battery pack at any time. To do this, press the button on the charging/battery power indicator on the battery pack (Fig. 1E).

## Operation

### Cutting with the comb attachment

The appliance can also be operated with attachment combs. Attachment combs allow you to extend the cutting length range.

- ① Attachment combs are optional accessories and can vary from model to model.

### Attaching / removing the attachment comb

1. Fit the attachment comb onto the bottom edge of the blade set (Fig. 5 ②) and push it over the cutting edge of the until it locks (Fig. 5 ⑥).
2. Push the attachment comb towards the cutting edge of the blade (Fig. 6) and remove it from the blade set.

## Maintenance



**Warning! Injuries and material damage due to incorrect handling.**

- Before performing any cleaning and maintenance work, switch off the device and disconnect it from the power supply.

### Cleaning and care



**Danger! Electric shock due to penetration of liquid.**

- Do not immerse the appliance in water!
- Do not allow any liquid to get inside the appliance.



**Caution! Danger from aggressive chemicals.**

Aggressive chemicals could damage the appliance and accessories.

- Never use solvents or scouring agents.
- Only use cleaning agents and blade set oil recommended by the manufacturer.



- You can source accessories online or from our retailers.
- Spare parts and blade set oil are available from our service centre.

- ▶ Remove the attachment comb (Fig. 6) and lift the blade set out of the housing (Fig. 7), see replacement of the blade set.
- ▶ Use the cleaning brush to remove any cut hairs from the housing opening and from the blade set (Fig. 9).



**Caution! Injuries due to incorrect handling.**

- ▶ The blade set must not be disassembled.
  - ▶ The cutting blade must not be pushed out completely!
- ▶ Push the cutting blade to the side (Fig. 9 a) and remove cut hairs from the cutting and bottom blade using the cleaning brush. After cleaning, return the cutting blade to its initial position (Fig. 9 b). The cutting blade should be aligned in the centre of the bottom blade.
  - ▶ Oil the blade set with the blade set oil (Fig. 10).
    - ▶ For a long-lasting, good cutting performance, it is important to clean and oil the blade set frequently.
    - ▶ Oil the marked areas of the blade set **every 15 minutes** with one drop of oil each (Fig. 10).
    - ▶ If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.
  - ▶ Reinstall the blade set and fold it back into position (Fig. 8 c), see Changing the blade set.
  - ▶ After oiling, switch the appliance on briefly (approx. 10 seconds) to ensure the oil film is evenly distributed.
  - ▶ Wipe the appliance clean only with a soft, slightly damp cloth.
  - ▶ The contacts on the charging stand, on the appliance and on the battery pack must be kept clean at all times.

**Changing the blade set**

1. Switch off the appliance using the on/off switch (Fig. 4 b).
2. Press the release button (Fig. 7 a) towards the blade set and lift the blade set out of the housing (Fig. 7 b).
3. Remove the blade set from the latch (Fig. 7 c).
4. Attach the new blade set onto the latch (Fig. 8 b).
5. Switch the appliance on (Fig. 4 a). Then push the blade set blade moves (Fig. 8 c).

**Problem solving**

**Blade set is cutting badly or pulling hair out.**

Cause: Blade set is dirty or worn out.

- ▶ Clean and oil the blade set. If this does not resolve the problem, replace the blade set.

**Skin injury**

Cause: Too much pressure on the skin.

- ▶ Check whether the blade edges were damaged during use and replace the blade set if necessary.

### **Battery operating time is too short**

Cause: Blade set and housing opening are dirty.

- ▶ Clean and oil the blade set.

Cause: Battery pack is worn.

- ▶ Replace the battery pack with an original spare part.

**i** Replacement battery packs are available from your dealer or from our service centre as accessories.

### **Charging/battery power indicator is not lit up**

Cause: The battery pack is fully charged.

- ▶ Press the button on the charging/battery power indicator to check the charge status of the battery pack.

Cause: The battery pack has not been placed correctly on the charging stand.

- ▶ Ensure that the appliance has been placed correctly on the charging stand.

Cause: Charging contacts are dirty.

- ▶ Clean the charging contacts on the battery pack and on the charging stand.

Cause: Defective power supply.

- ▶ Ensure that the plug-in transformer is plugged into the mains socket and the charging stand.
- ▶ Check the mains cable for possible damage.

### **Not possible to switch on the appliance**

Cause: The battery pack was not placed correctly into the appliance.

- ▶ Remove the battery pack from the appliance.
- ▶ Insert the battery pack into the appliance until it clicks into place.

Cause: The battery pack is flat.

- ▶ Check the charge status of the battery pack.
- ▶ If necessary, recharge the battery pack.

### **Appliance reduces speed**

Cause: The blade set does not move easily.

- ▶ Clean and oil the blade set. If the problem persists, replace the blade set.

Cause: The battery pack is flat.

- ▶ Check the charge status of the battery pack.
- ▶ If necessary, recharge the battery pack.

### **Not possible to attach the blade set**


Cause: The blade latch on the blade set is folded in.


- ▶ Unfold the latch from the housing using the tip of a flat screw driver (Fig. 8 a).

In the event that this information does not help you resolve your problem, please contact our service centre. Never attempt to repair the hair clipper yourself!

# ARCO - RECHARGEABLE CLIPPER

Model: 1854

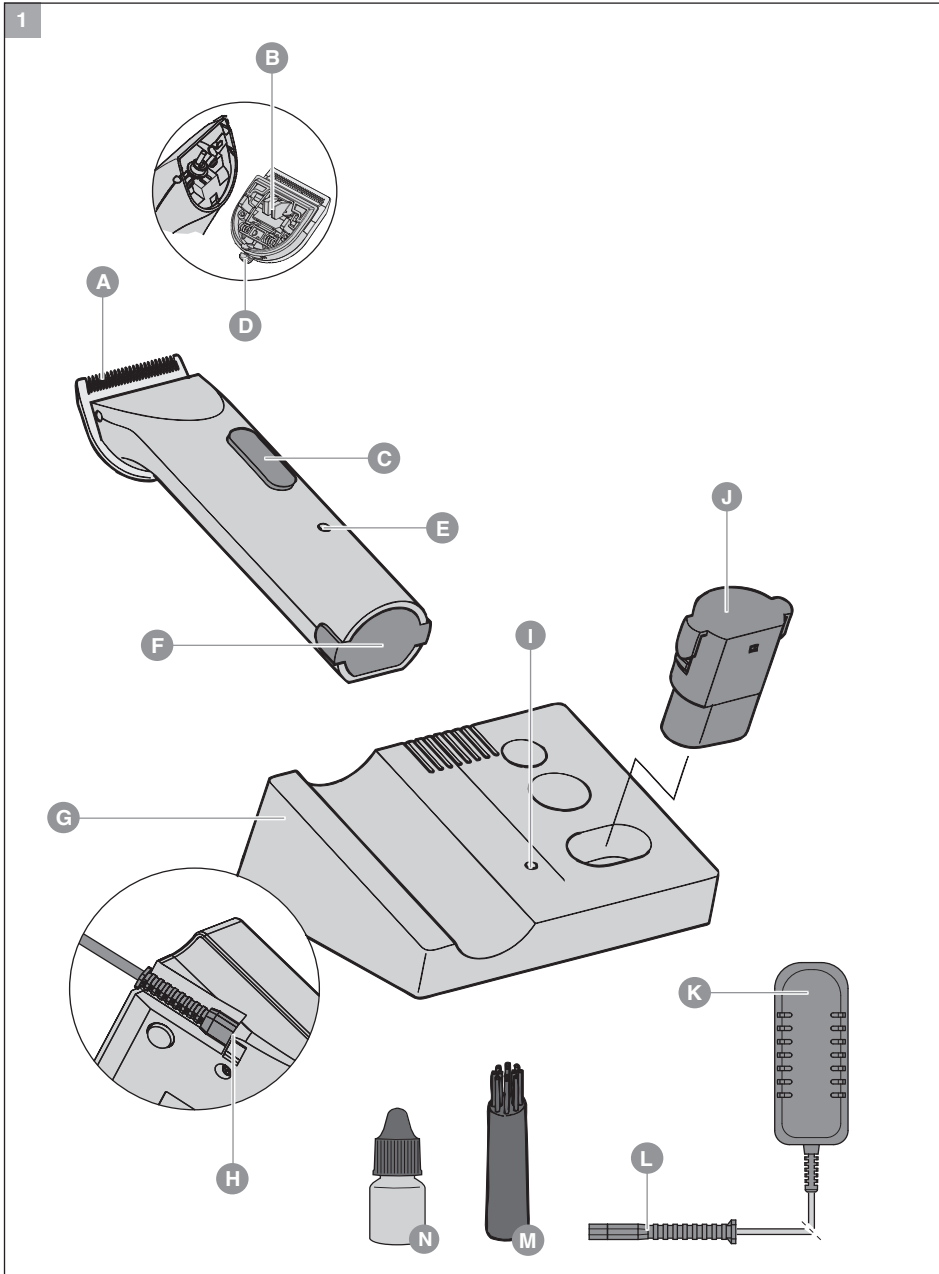

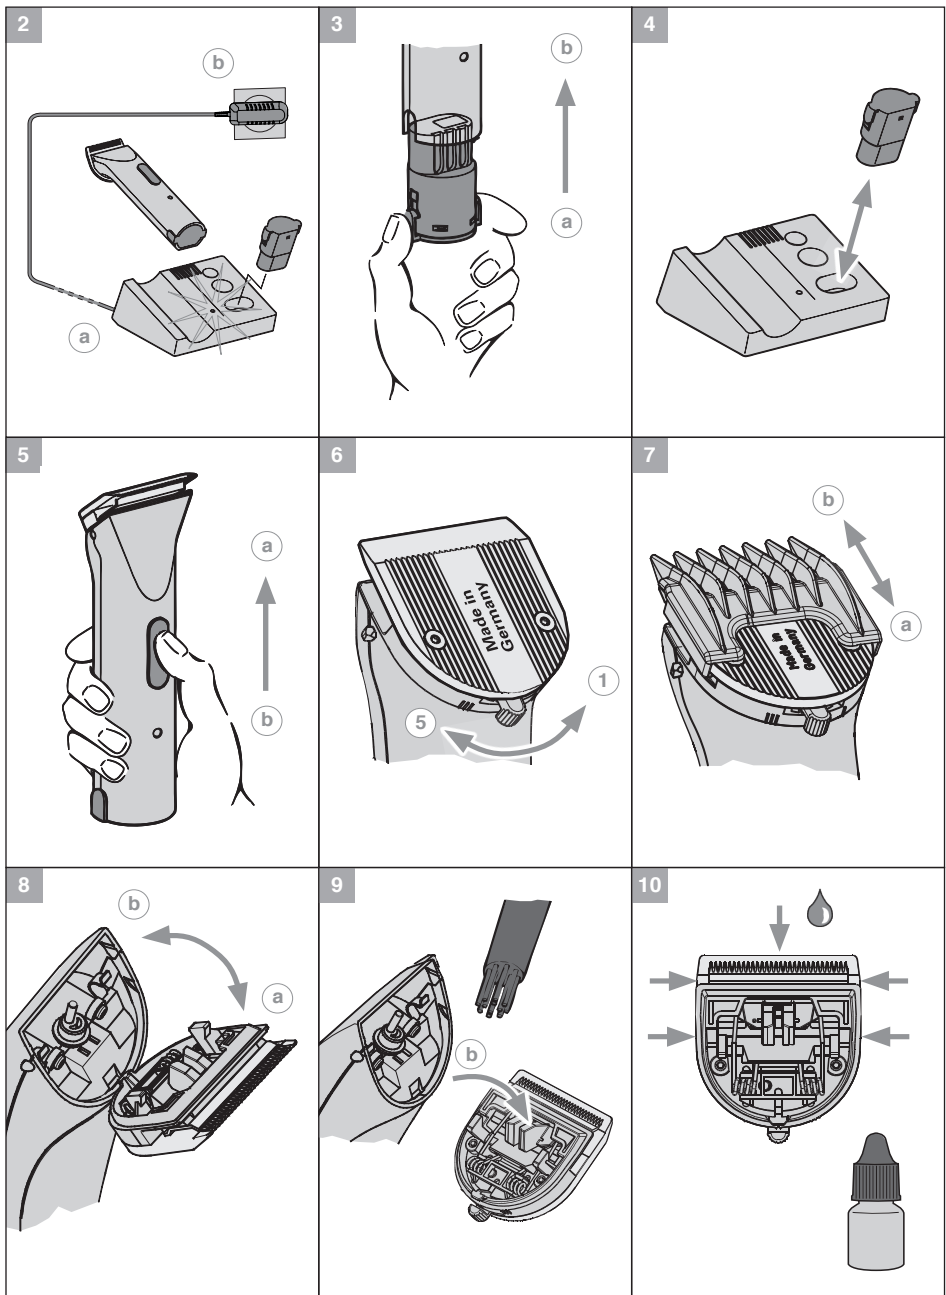

## Model: ARCO - RECHARGEABLE CLIPPER

### Description of parts (Fig. 1)

- A. Blade set
- B. Cleaning lever
- C. On/off switch
- D. Cutting-length adjustment
- E. Battery charge indicator
- F. Battery pack
- G. Charging stand
- H. Charging stand socket
- I. Charging indicator
- J. Interchangeable battery pack
- K. Plug-in transformer
- L. Appliance plug
- M. Cleaning brush
- N. Oil for blade set

\* Attachment combs are optional accessories and can vary from model to model.

### Charging the battery

This cordless hair clipper is supplied with two battery packs. While the appliance is in use, the second battery pack can be recharged on the charging stand. This means that the clipper is always ready for use.

*Before the appliance is used for the first time, each battery pack should be charged for approx 90 minutes.*

1. Connect the appliance plug (L) on the plug-in transformer to the charging stand socket (H) (Fig. 2a).
2. Connect the plug-in transformer to the mains socket (Fig. 2b).
3. Insert the battery pack into the recess of the charging stand (Fig. 4). The charging process starts. During charging, the red charging indicator (I) is illuminated.
  - It should take around 75 minutes for the appliance to charge to full capacity.
  - The second battery can remain in the charging stand so that a charged battery pack is always available.
4. Once charging is complete, the charging indicator (I) on the charging stand (G) will start flashing.

### Battery Operation

1. Switch on the appliance using the on/off switch and switch off after use (Fig. 5a/b).
  - When you press the on/off switch, the battery power indicator (E) will light up briefly to indicate that the appliance is ready for use.
  - The appliance can be operated for up to 80 minutes when the battery is fully charged.
  - Insufficient maintenance of the blade set can significantly reduce the operating life.
  - If the battery power indicator (E) on the hand-held appliance lights up during operation, this means there is only approx. 15% battery power remaining. The battery pack needs to be recharged. You can now use the charged replacement battery pack.

### To recharge the battery:

1. Switch off the appliance using the on/off switch (Fig. 5b).
2. Press the unlock buttons on the side and remove the battery pack (Fig. 3a).
3. Remove the charged battery pack (Fig. 4) and push it into the appliance until you hear it snap into place (Fig. 3b).
4. Fit the flat battery pack to the charging stand (Fig. 4). **See Charging the battery**

## OPERATION

### Setting the cutting length

The cutting length can be adjusted to between 0.7mm and 3mm (5 possible positions) using the cutting-length adjustment integrated into the blade set (Fig. 6).

### Cutting with attachment combs

The appliance can also be operated with attachment combs. In order to achieve the indicated cutting length, the cutting length adjustment lever should be set to position I (Fig. 6).

### **Attaching/removing the attachment comb**

1. Slide the attachment comb on to the blade set in the direction of the arrow until it reaches the limit (Fig. 7a).
2. The attachment comb can be removed by pushing it in the direction of the arrow (Fig. 7b).

### **Maintenance, cleaning and care.**

- Remove the attachment comb (Fig. 7b) after every use and lift the blade set out of the housing (Fig. 8a).
- Use the cleaning brush to remove any cut hairs from the housing opening and from the blade set (Fig. 9).
- The cleaning lever (Fig. 9b) can also be pressed. This allows the cut hairs that accumulate between the bottom blade and the top blade to be easily removed using the cleaning brush.
- Only wipe the appliance with a soft, slightly damp cloth
- The charging contacts on the charging stand and on the battery pack should always be kept clean.
- Clean the blade set regularly using hygienic spray.
- Oil the blade set with the blade set oil (Fig. 10)
- For long-lasting cutting performance, it is important to oil the blade set frequently.
- If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.

### **Changing the blade set**

Removing the blade set:

1. Switch the appliance off using the on/off switch (Fig. 5b) and disconnect from the power supply.
2. Slide the blade set off the housing in the direction of the arrow (Fig. 8a). Remove the blade set.

Replacing the blade set:

1. Replace the blade set by hooking it into the housing. The small lug at the base of the blade should be aligned with the indent on the clipper casing. Press the blade down until it clicks into position (Fig. 8b).

### **Problem elimination**

#### **Blade set is cutting badly or pulling hair out.**

**Cause:** Blade set is dirty, worn or blunt.

- Clean and oil the blade set (Fig. 9/10); if this does not resolve the problem, replace the blade set (Fig. 8).

#### **Skin injury**

**Cause:** Too much contact pressure on the skin.

- Reduce contact pressure when cutting close to skin.

**Cause:** Damaged blade set.

- Check whether the blade edges or teeth are damaged and replace the blade set if necessary.
- NEVER use a damaged blade as this will cause injury.

#### **Battery life is too short.**

**Cause:** Blade set and housing opening are dirty.

- Clean and oil the blade set (Fig. 9/10).

**Cause:** Battery is worn out.

- Replace the battery pack with an original spare part.
- Replacement battery packs are available from your dealer or from our Customer Service team.

#### **Charging indicator does not light up.**

**Cause:** The battery pack is not correctly positioned on the charging stand.

- Ensure that the battery pack has been correctly placed on the charging stand.

**Cause:** Charging contacts are dirty.

- Clean the charging contacts on the charging stand and on the battery pack


**Cause:** Defective power supply.

- Ensure that the plug-in transformer is plugged into the mains socket.
- Check the mains cable for possible damage.


### **Battery Removal, Disposal and Replacement**

For Removal instructions see page 33

**BRAVURA - CORD /CORDLESS CLIPPER**  
Model: 1870

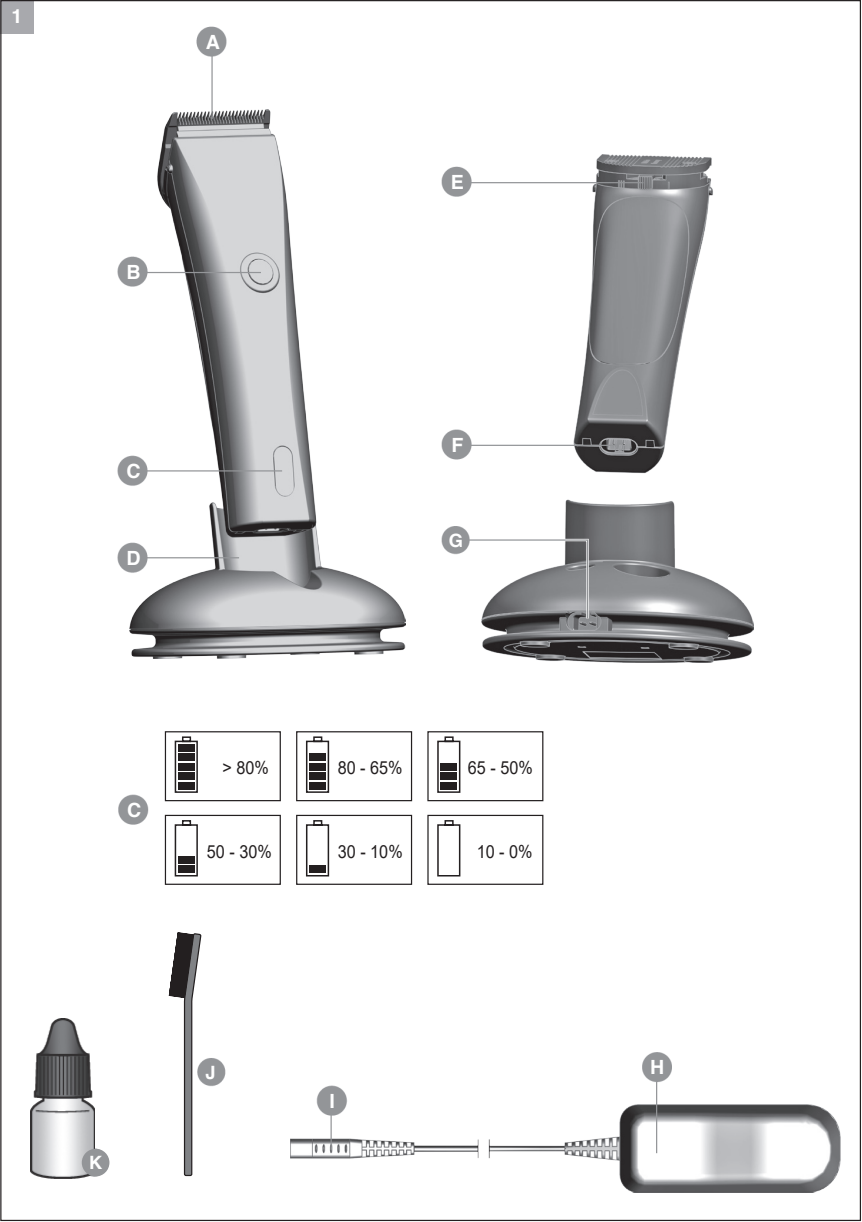



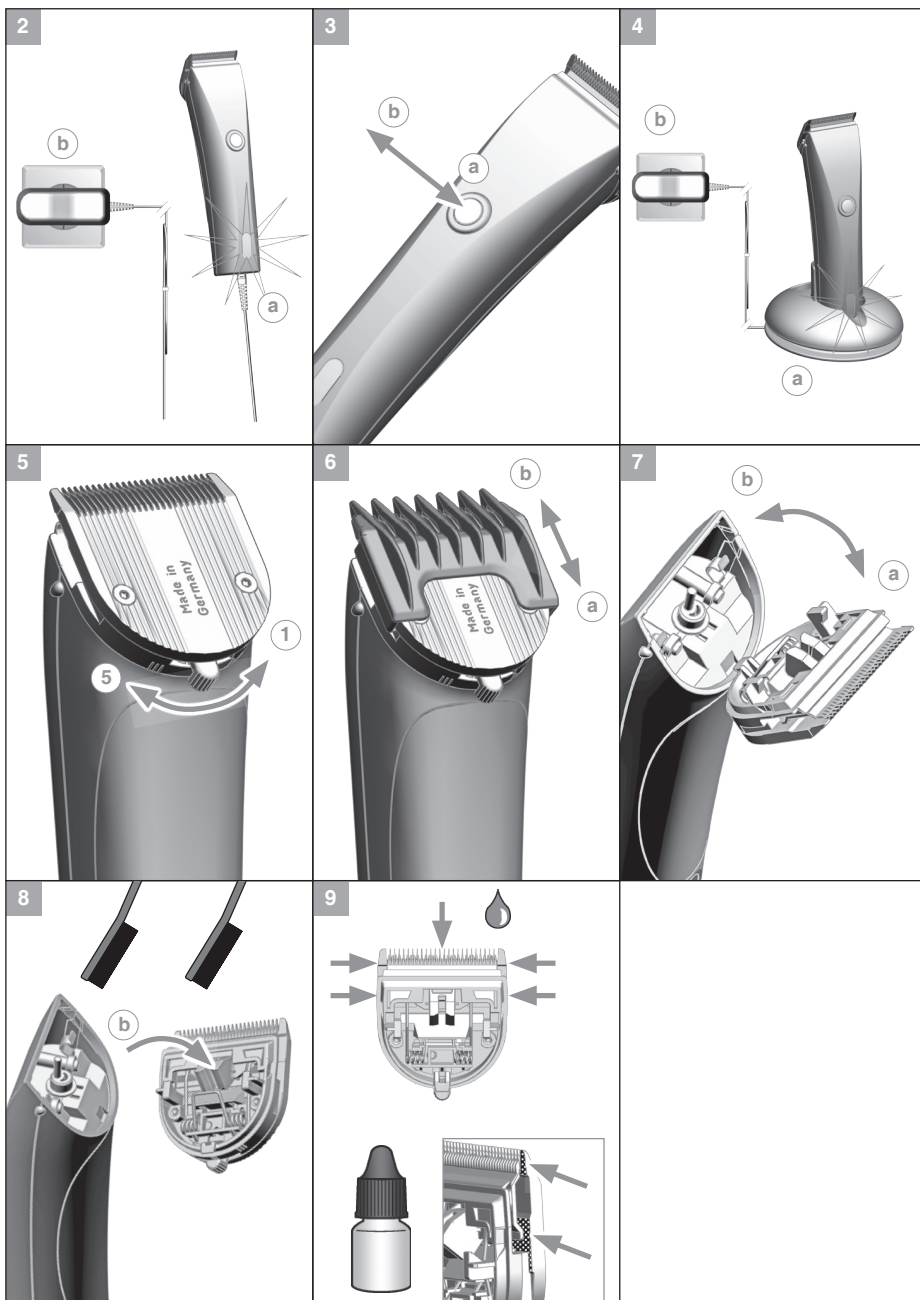

## Model: BRAVURA - CORD / CORDLESS CLIPPER

### Description of parts (Fig. 1)

- A. Blade set
- B. On/off switch
- C. Battery power indicator
- D. Charging stand
- E. Cutting-length adjustment
- F. Appliance socket
- G. Charging stand socket
- H. Plug-in transformer
- I. Appliance plug
- J. Cleaning brush
- K. Oil for blade set

\* Attachment combs are optional accessories and can vary from model to model.

### Charging the battery

1. Connect the appliance plug (I) on the plug-in transformer to the charging stand socket (G) (Fig. 4a).
  - The appliance can also be connected directly to the plug-in transformer for charging (Fig. 2a/b).
  - Battery overcharging is prevented thanks to intelligent charge management.
2. Connect the plug-in transformer to the mains socket (Fig. 4a).
3. Switch off the appliance using the on/off switch (Fig. 3a).
4. Place appliance on the charging stand (Fig. 4) or connect directly to the plug-in transformer (Fig. 2a/b). A signal will sound and the charging process begins.
5. Depending on the charge status, the corresponding segment of the battery power indicator will flash during the charging process. Once the battery is fully charged, all segments of the battery power indicator will remain lit continuously.
6. After the appliance has been removed from the charging stand, the display goes out after approx. 30 seconds (power saving mode).
7. It should take around 60 minutes for the appliance to charge to full capacity.
8. Once the battery is fully charged, a signal will sound

### Battery Operation

1. Switch on the appliance using the on/off switch and switch off after use (Fig. 3a/b).
  - After the appliance has been switched off, the display goes out about 30 seconds later (power saving mode).
  - When the battery is fully charged, the appliance can be used for up to 90 minutes without mains connection.
  - The charge status of the battery is displayed by the battery power indicator (C). When the battery has fully run down, the appliance switches itself off automatically.
  - In case of insufficient maintenance of the blade set, the operating time can be reduced considerably.

### Mains Operation

1. Connect the appliance plug (I) on the plug-in transformer to the appliance socket (F) (Fig. 2a).
2. Connect the plug-in transformer to the mains socket (Fig. 2b).
3. Switch on the appliance using the on/off switch and switch off after use (Fig. 3a/b).

## OPERATION

### Setting the cutting length

The cutting length can be adjusted to between 0.7mm and 3mm (5 possible positions) using the cutting-length adjustment integrated into the blade set (Fig.5).

### Cutting with attachment combs

The appliance can also be operated with attachment combs.

In order to achieve the indicated cutting length, the cutting length adjustment lever should be set to position 1 (Fig. 5).

### **Attaching/removing the attachment comb**

1. Slide the attachment comb on to the blade set in the direction of the arrow until it reaches the limit (Fig. 6a).
2. The attachment comb can be removed by pushing it in the direction of the arrow (Fig. 6a).

### **Maintenance, cleaning and Care.**

- Remove the attachment comb (Fig. 6b) after every use and lift the blade set out of the housing (Fig. 7a).
- Use the cleaning brush to remove any cut hairs from the housing opening and from the blade set (Fig. 8).
- The cleaning lever (Fig. 8b) can also be pressed. This allows the cut hairs that accumulate between the bottom blade and the top blade to be easily removed using the cleaning brush.
- Only wipe the appliance with a soft, slightly damp cloth
- Oil the blade set with the blade set oil (Fig. 9)
- For good and long-lasting cutting performance, it is important to oil the blade set frequently.
- If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.

### **Automatic sensor system**

To give you advance notice of an urgent need for maintenance care, your hair cutting appliance has been equipped with an automatic sensor system.

- The sensor system automatically recognises when the blade set needs oiling or cleaning.
- After the appliance is switched off, an acoustic signal will sound and the battery power indicator will flash for 2 minutes.
- The acoustic signal and the flashing of the battery power indicator can be cancelled (turned off) by briefly switching the appliance on and off.
- Before using the appliance again, it is strongly recommended to clean the appliance and oil the blade set. See section Maintenance, Cleaning and care.
- Failure to observe these instructions may result in damage to and early failure of the appliance, which will void all guarantee claims.

### **Changing the blade set**

Removing the blade set:

1. Switch the appliance off using the on/off switch (Fig. 3a) and disconnect from the power supply.
2. Slide the blade set off the housing in the direction of the arrow (Fig. 7a). Remove the blade set.

Replacing the blade set:

1. Replace the blade set by hooking it into the housing. The small lug at the base of the blade should be aligned with the indent on the clipper casing. Press the blade down until it clicks into position (Fig. 7b).

### **Problem elimination**

#### **Blade set is cutting badly or pulling hair out.**

**Cause:** Blade set is dirty or worn.

- Clean and oil the blade set (Fig. 8/9); if this does not resolve the problem, replace the blade set (Fig. 7).

#### **Battery life is too short.**

**Cause:** Blade set and housing opening are dirty.

- Clean and oil the blade set (Fig. 8/9).

A blade set that is very dirty and has not been oiled can halve the available battery life! If the blade set is clean and oiled and the battery life is still far too short, it is likely that the batteries are nearing the end of their life.

- Battery life generally decreases at a steady rate when the appliance is used on a day-to-day

basis. The batteries used here are specially designed for professional and everyday use, but are also affected by this.

**Battery power indicator light does not light up.**

**Cause:** Appliance has not been correctly placed on the charging stand

- Ensure that the hand-held appliance has been correctly placed on the charging stand.

**Cause:** Defective power supply.

- Ensure that the plug-in transformer is plugged into the mains socket.
- Check the mains cable for possible damage.
- Check the power supply.

**Entire battery power indicator is flashing**

- Check whether the blade set is blocked and the blade is able to move.
- Switch the appliance on and off. If the entire display is flashing, please contact your specialist retailer or the Wahl Customer Service team.

**Battery power indicator light does not light up.**

**Cause:** Appliance has not been correctly placed on the charging stand.

**Battery Removal, Disposal and Replacement**

**For removal instructions see page 33**

**Skin injury**

**Cause:** Too much contact pressure on the skin.


- Reduce contact pressure when cutting close to skin.

**Cause:** Damaged blade set.

- Check whether the blade edges or teeth are damaged and replace the blade set if necessary.
- NEVER use a damaged blade as this will cause injury.

**BRAVMINI - RECHARGEABLE TRIMMER**

Model: 1590

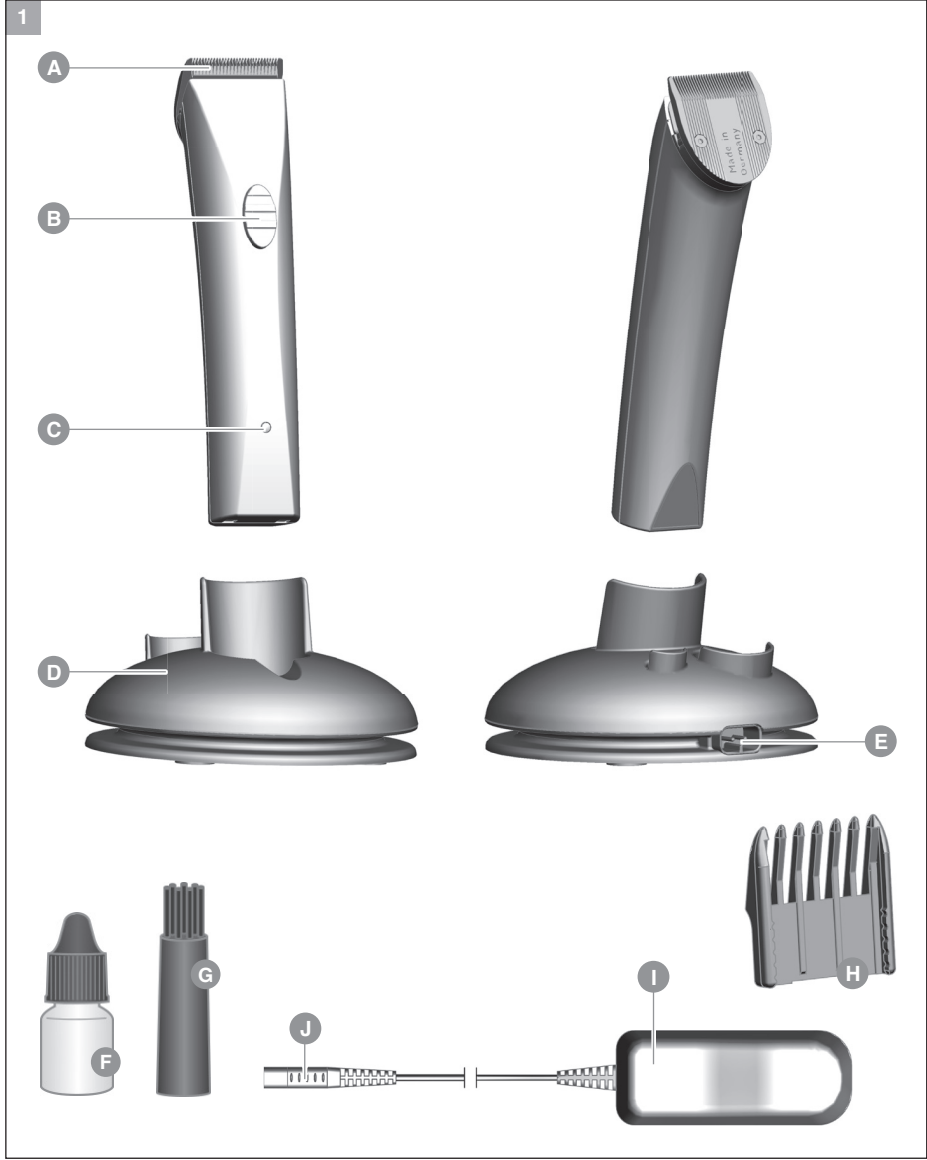



## Model: BRAVMINI RECHARGEABLE TRIMMER

### Description of parts (Fig. 1)

- A. Blade set
- B. On/off switch
- C. Charging indicator
- D. Charging stand
- E. Charging stand socket
- F. Oil for blade set
- G. Cleaning brush
- H. Attachment comb
- I. Plug-in transformer
- J. Appliance plug

\* Before the appliance is used for the first time it should be charged for **16** hours.

### Charging the Rechargeable Battery

1. Connect the appliance plug (J) on the plug-in transformer to the charging stand socket (E) (Fig. 2a). Battery overcharging is prevented thanks to intelligent charge management.
2. Connect the plug-in transformer to the mains socket (Fig. 2a).
3. Switch off the appliance using the on/off switch (Fig. 3a).
4. Place the appliance on the charging station (Fig. 2) · During charging, the charging indicator (C) is illuminated.
  - After the appliance has been removed from the charging stand, the display goes out.
  - It takes no more than 16 hours for the appliance to charge to full capacity.

### Battery Operation

1. Switch on the appliance using the on/off switch and switch off after use (Fig. 3a/b).
  - With the battery fully charged, the appliance can be operated for up to 100 minutes. This capacity is attained after approx. 5 - 10 charging cycles. In case of insufficient maintenance of the blade set, the operating time can be reduced considerably.

## OPERATION

### Cutting with the attachment comb

The appliance can also be operated with an attachment comb. The attachment comb has 5 indent positions for adjusting the length of cut. The further the attachment comb is pushed in (retracted), the shorter the length of cut. The length of cut can be adjusted from 3 mm (Fig. 5a) to 6 mm (Fig. 5b).

### Attachment Comb

Attaching/removing the attachment comb

1. Slide the attachment comb on to the blade set in the direction of the arrow until it reaches the limit stop (Fig. 4a).
2. The attachment comb can be removed by pushing it in the direction of the arrow (fig 4b)

*If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.*

### Changing the blade set

Removing the blade set:

1. Switch the appliance off using the on/off switch (Fig. 3a) and disconnect from the power supply.
2. Slide the blade set off the housing in the direction of the arrow (Fig. 6a). Remove the blade set.

Replacing the blade set:


1. Replace the blade set by hooking it into the housing. The small lug at the base of the blade should be aligned with the indent on the clipper casing. Press the blade down until it clicks into position (Fig. 6b).

### Battery Removal, Disposal and Replacement

For removal instructions see page 33

# MINI ARCO - CORD /CORDLESS TRIMMER

Model: 1565

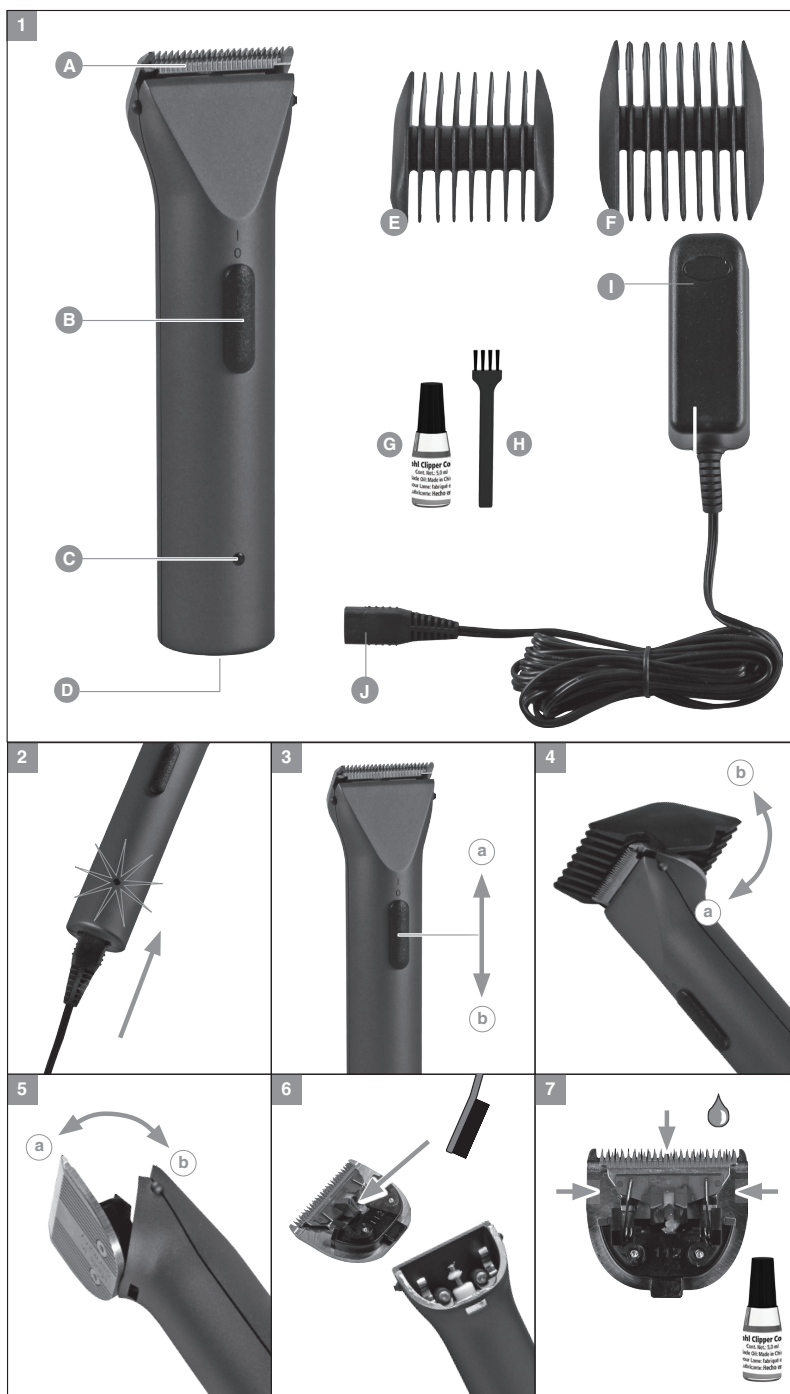



## Model: **MINI ARCO - CORD / CORDLESS TRIMMER**

### **Description of parts (Fig. 1)**

- A. Blade set
- B. On/off switch
- C. Charging indicator light
- D. Appliance socket
- E. Attachment comb small = cutting lengths 3 mm and 6 mm
- F. Attachment comb large = cutting lengths 9 mm and 12 mm
- G. Cleaning brush
- H. Oil for blade set
- I. Plug-in transformer
- J. Appliance plug

### **Charging the battery**

Before the appliance is used for the first time it should be charged for 2 hours.

1. Connect the appliance plug (J) on the plug-in transformer to the appliance socket (D) (Fig. 2).  
Battery overcharging is prevented thanks to intelligent charge management.
2. Connect the plug-in transformer to the mains socket
3. Switch off the appliance using the on/off switch (Fig. 3b).
  - During charging, the charging indicator (C) flashes at evenly spaced intervals. When the battery is fully charged, the charging indicator flashes at a different rate (16 on / 1 off).
  - It should take around 2 hours for the appliance to charge to full capacity

### **Battery Operation**

1. Switch on the appliance using the on/off switch and switch off after use (Fig. 3a/b).
  - When the battery is fully charged, the appliance can be used for up to 100 minutes without mains connection. This capacity is attained after approx. 5 - 10 charging cycles.
  - Insufficient maintenance of the blade set will reduce operating time considerably.

### **Mains Operation**

1. Connect the appliance plug (J) on the plug-in transformer to the appliance socket (D) (Fig. 2).
2. Insert the plug-in transformer into the mains socket.
3. Switch on the appliance using the on/off switch and switch off after use (Fig. 3a/b).

## **OPERATION**

### **Cutting with the attachment comb**

The appliance can also be operated with attachment combs. The following attachment combs are included as standard:

- Attachment comb small = cutting lengths 3 mm and 6 mm
- Attachment comb large = cutting lengths 9 mm and 12 mm
- The cutting length (in mm) is shown on the attachment comb.
- One attachment comb can be used for two different cutting lengths. For the second cutting length, all you need to do is remove the attachment comb, rotate and replace.
- The advantage of these attachment combs is that no matter the angle at which you approach the hair, you always achieve the same cutting length.

### **Attaching/removing the attachment comb**

1. Place the attachment comb onto the cutting edge of the blade set and press it down onto the blade set into the knobs in the direction of the housing until it clicks into position (Fig. 4a).
2. The attachment comb can be removed by pushing it in towards the cutting edge (Fig. 4b).

### **Changing the blade set**

Removing the blade set:

1. Switch the appliance off using the on/off switch (Fig. 3b) and disconnect from the power supply.
2. Slide the blade set off the housing in the direction of the arrow (Fig. 5a). Remove the blade set.

Replacing the blade set:


1. Replace the blade set by hooking it into the housing. The small lug at the base of the blade should be aligned with the indent on the clipper casing. Press the blade down until it clicks into position (Fig. 5b).

### **Battery Removal, Disposal and Replacement**

For removal instructions see page 33



# ATTACHMENT COMBS

## Competition/Prime Blade Comb Attachments

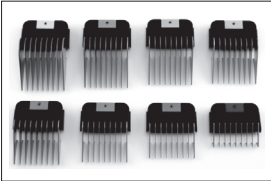

#	NAME	LENGTH	COLOUR
#5		3mm	RED
#4		6mm	PURPLE
#2		10mm	BLUE
#1		13mm	ORANGE
#0		16mm	YELLOW
#A		19mm	LAVENDER
#C		22mm	GREEN
#E		25mm	LIGHT BLUE
  
## 5 in1 Blade Comb Attachments

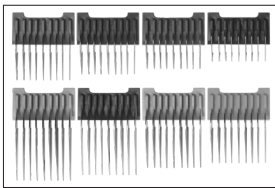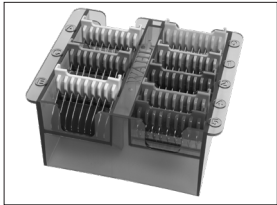

#	NAME	LENGTH	COLOUR
#5		3mm	RED
#4		6mm	PURPLE
#2		10mm	BLUE
#1		13mm	ORANGE
#0		16mm	YELLOW
#A		19mm	LAVENDER
#C		22mm	GREEN
#E		25mm	LIGHT BLUE

## **BATTERY REPLACEMENT, REMOVAL AND DISPOSAL**

### **MINI ARCO BRAVMINI**

For battery replacement the entire, intact trimmer should be sent to: Wahl (UK) Ltd Customer Services (the address can be found on the reverse of this booklet) or taken to a suitably qualified professional. The battery should only be replaced by the original manufacturers spare.

#### **Battery Removal and Disposal**

At the end of its life, when it will no longer take a full charge, the battery in your trimmer must be removed and recycled/disposed of correctly. Batteries should be disposed of at an official collection point. If you are having trouble removing the battery you can also return the product to Wahl (UK) Ltd Customer Services who will dispose of it in an environmentally safe way.

To remove the battery follow these steps:

1. Unplug the transformer from the outlet, disconnect from trimmer and allow the batteries to completely run down before disassembly.
2. Remove the Blade
3. Using a Torx 7 screwdriver, remove the 2 screws found under the blade
4. Pry the Trimmer apart along the join in the housing
5. Remove the motor and PCB assembly
6. Remove the battery by prizing up from the PCB (be careful not to puncture the battery)
7. Apply tape to both ends of the battery before recycling/disposing.

Replacement batteries can be ordered from: Wahl (UK) Ltd Customer Services (the address can be found on the reverse of this booklet). The battery should only be replaced by the original manufacturers spare.

### **ARCO**

#### **Battery Removal and Disposal**

At the end of its life, when it will no longer take a full charge, the battery in your clipper must be removed and recycled/disposed of correctly. Batteries should be disposed of at an official collection point. If you are having trouble removing the battery you can also return the product to Wahl (UK) Ltd Customer Services who will dispose of it in an environmentally safe way.

To remove the battery follow these steps:

1. Allow the batteries to completely run down before removing.
2. Press the clips on each side of the battery and remove.
3. Apply tape to over the contacts of the battery before recycling/disposing.

### **Bravura**

#### **Lithium Battery Replacement, Removal and Disposal**

For battery replacement the entire, intact clipper or trimmer should be sent to: Wahl (UK) Ltd Customer Services (the address can be found on the reverse of this booklet) or taken to a suitably qualified professional. The battery should only be replaced by the original manufacturers spare, for safety reasons a substitute should not be used.

Do not attempt to remove the battery. Lithium-Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged or exposed to water or high temperatures.

#### **Lithium Battery Disposal**

Do not dispose of this product or the Lithium battery in the normal household waste.

The product should be returned to Wahl Customer Services where we offer a take back service or taken to a local collection facility where they will be dealt with safely and sent for the appropriate recycling.

## WIRING AND DISPOSAL

### WIRING - Max 45

**WARNING:** If the supply cord is damaged it must be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.

The wires in the mains lead are coloured in accordance to the following code:

Blue Neutral (N)

Brown live (L)

This appliance is fitted with a 3 pin plug which has a 3 amp fuse fitted.

If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this appliance may not correspond with the colour markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter 'N' or coloured BLACK or BLUE.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED or BROWN.

DO NOT connect either wire to the terminal in the plug which is marked with the letter 'E' or has the Earth symbol, or coloured GREEN or GREEN/YELLOW.

If a 13 amp (BS 1363) plug is used, a 3 amp fuse must be fitted. If any other type of plug is used a 5 amp fuse must be fitted either in the plug or adaptor at the distribution board. Replacement fuses should be approved to BS 1362

Fuse cover must be refitted when changing the fuse. If the fuse cover is lost the plug must not be used until a replacement is obtained. Information for obtaining the correct fuse is marked on the carrier itself and in the bottom of the fuse cavity in the plug. These may be obtained from Wahl (UK) Ltd.

**KM5**

**KM10**

**WARNING:** If the transformer is damaged it must be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard. This product must only be used with transformer supplied. Should a replacement be required contact Wahl (UK) Ltd customer services.

### WIRING - Arco

**Bravura**

**BravMini**

**Mini Arco**

**KMC+**

**KM Supera**

**WARNING:** If the transformer is damaged it must be replaced. This product must only be used with the transformer supplied. Should a replacement be required contact Wahl (UK) Ltd customer services.

## DISPOSAL

### Handle with care! Environmental damage in the case of incorrect disposal.

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Adhere to the relevant legal requirements when disposing of the appliance.

#### Information on the disposal of electrical and electronic appliances in the European Community:

Within the European Community, national regulations are specified for the disposal of electrical appliances, based on **EU Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE)**.

In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

The packaging for this product is made from recyclable materials. Dispose of this in an environmentally friendly manner by recycling it. Information on the disposal of electrical and electronic appliances in the European Community:



**WEEE**

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2012/19/EU (WEEE)

At the end of this products life it should not be disposed of with general household waste.

Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation

## GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 1 year from the date of original purchase or receipt as a gift.

The guarantee becomes invalid in the case of misuse or repair by unauthorised persons.

Should this product become defective during the warranty period, return it to the store of purchase together with your proof of purchase for repair or replacement without any charges to you.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

## GENERAL CLEANING

Aggressive chemicals could damage the appliance and accessories

- Never use solvents or scouring agents.
- Only use cleaning agents and blade set oil recommended by the manufacturer.
- Hygienic spray and blade set oil are available from your dealer or our Customer Service Team.

### Never immerse the appliance in water.

Remove the attachment comb after each use and clean the blade set using the cleaning brush.

Remove the blade set and clean the blade. Remove any hairs and dirt between top and bottom blade with the cleaning brush.

The appliance must be kept clean. Use only a slightly damp cloth for cleaning the housing and charging stand if applicable. Never use solvents or scouring agents.

Oil the blade set regularly using the oil supplied to maintain the cutting performance and ensure a long service life. Replace the attachment comb to protect the blade when not in use.

The blade set should be replaced if cutting performance is reduced after extended use.







P R O F E S S I O N A L

**WAHL (UK) LTD**

Sterling House  
Clipper Close  
Ramsgate  
Kent  
CT12 5GG

Customer Services

T: 01227 740066

W: [www.wahl.co.uk](http://www.wahl.co.uk)

E: [customer.services@wahl.co.uk](mailto:customer.services@wahl.co.uk)