



**Beretto Clipper
Instructions**

Beretto clipper instructions

Please read all instructions carefully to familiarise yourself with your new clipper before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: www.wahl.co.uk

E: customer.services@wahl.co.uk

CONTENTS

DESCRIPTION OF PARTS	Page 3
IMPORTANT SAFEGUARDS	Page 4
OPERATING INSTRUCTIONS	Page 6
USING YOUR TRIMMER	Page 7
CLEANING & CARE	Page 8
GUARANTEE	Page 10

Beretto clipper instructions



Beretto clipper instructions

Description of parts

- A Blade
- B On/off switch
- C Charge indicator
- D Charging stand with transformer
- E Attachment comb 1, cutting length 3 mm
- F Attachment comb 2, cutting length 6 mm
- G Attachment comb 3, cutting length 9 mm
- H Attachment comb 4, cutting length 12 mm
- I Attachment comb 6, cutting length 18 mm
- J Attachment comb 8, cutting length 25 mm
- K Blade guard
- L Cleaning brush
- M Oil for blade
- N Flat top comb

Please retain this leaflet for future reference.

READ ALL INSTRUCTIONS BEFORE USING. IMPORTANT SAFEGUARDS

Please read this instruction manual carefully and familiarise yourself with your new Wahl Clipper before using for the first time.

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic safety precautions should always be followed, including the following:

1. This appliance can be used by children from aged 14 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given

Beretto clipper instructions

supervision or instruction concerning use of the appliance in a safe and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
3. Never use your appliance without paying attention! Except when charging always unplug this appliance from the electricity outlet immediately after using
4. Do not operate the appliance with a broken cord, plug or charger, or if the appliance malfunctions, or is dropped or damaged in anyway.
5. Do not wrap the cord around the appliance.
6. Any servicing or repair must be performed by an authorized service representative.
7. Do not use outdoors or in damp areas.
8. The use of attachments that are not supplied by the manufacturer may cause fire, electric

Beretto clipper instructions

- shock or injury and damage to the appliance.
9. To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.
 10. Never carry the unit by its power cord.
 11. Do not drop or insert any object into any opening.
 12. Use this appliance only for its intended purpose.
 13. Exhausted batteries/ rechargeable batteries should not be disposed of in the household waste. Dispose of them in a completely discharged state in accordance with local legal regulations. Do not throw into fire where heat could cause them to rupture.



Danger of explosion

- ▶ Never use the appliance where aerosol (spray) products are being used or where oxygen is released.

Beretto clipper instructions

Charging the battery

Before the appliance is used for the first time, it should be charged for 3 - 5 hours. It then takes 3 hours to fully recharge the battery again.

The appliance is charged via the charging stand. Place the appliance in the charging stand so that charging contact is made. During charging, the charging indicator is illuminated. The charging indicator will begin to blink when almost fully charged and may shut off when fully charged. Note: If the appliance is fully charged and is placed in the stand to charge, the charging indicator may not turn on. This does not indicate the appliance can no longer charge, it means the appliance does not need to draw electricity because it is already fully charged.

Cutting length adjustment

The cutting length adjustment integrated in the blade set (Fig.1) has five settings to determine the length of the hair from 0.7mm - 3mm. Move the adjusting lever to the required position and click it into place.

Battery operation




Switch on the appliance using the on/off switch (Fig. 2a) and, after use, switch it off again (Fig. 2b). When the battery is fully charged, the appliance can be used for up to 90 minutes.

Cutting with attachment combs

Depending on the desired haircut, the appliance can be operated with or without attachment comb. The scope of supply includes the following attachment combs: 3 mm, 6 mm, 9 mm, 12 mm, 18mm and 25mm cutting length.

Attaching/removing the attachment comb

1. Slide the attachment comb all the way on to the blade set in the direction indicated by the arrow. (fig.3a).
2. The attachment comb can easily be removed by pushing it in the direction of the arrow. (fig.3b).

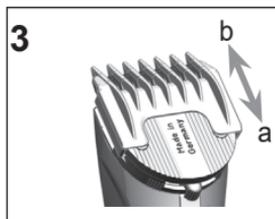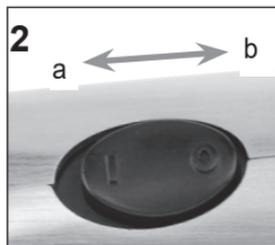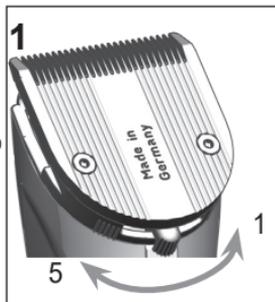

Beretto clipper instructions

Cleaning and care

Oil the blade set (Fig. 4).

Do not immerse the appliance in water!

After each use, remove the attachment comb (Fig. 3b) and use the cleaning brush to remove cut hairs from the housing opening and from the blade set (Fig. 6). Remove the blade set to do this (Fig. 5a). The charging contacts on the appliance and on the charging stand should always be kept clean.

Only wipe the appliance with a soft cloth, which may be dampened slightly. Never use solvents or scouring agents!

The blade set can be cleaned with hygienic spray.

For a long-lasting, good cutting performance, it is important to oil the blade set frequently (Fig. 4).

Only use Wahl clipper oil.

Clipper oil (3310) and hygienic spray (ZX495) is available from your dealer or our Service Centre.

If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.

Use the blade guard when the appliance is not in use.



Always store the appliance with the blade guard in place.

Changing the blade set

Switch off the appliance using the on/off switch (Fig. 2b).

The blade set can be removed by sliding it away from the housing in the direction of the arrow (Fig. 5a).

To replace the blade set, position it with the hook in the opening of the housing and press it onto the housing until it clicks into position (Fig. 5b).

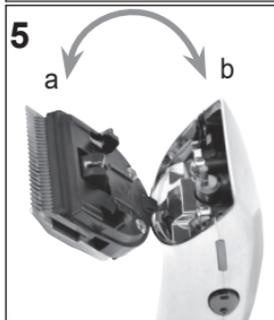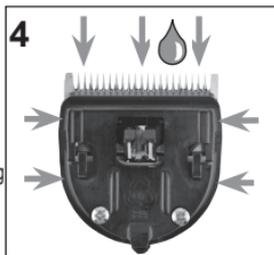

Beretto clipper instructions

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)

At the end of this products life it should not be disposed of with general household waste.

Care should be taken to dispose of it in a suitable manner in accordance with your Local Authority regulation.



Beretto clipper instructions

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 1 year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include blades, cables which are consumable parts.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

BLADE WEAR IS NOT COVERED UNDER THE TERMS OF WARRANTY.

Beretto clipper instructions

IMPORTANT WIRING INSTRUCTION

 **WARNING:** IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURERS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD. THIS PRODUCT MUST ONLY BE USED WITH THE TRANSFORMER SUPPLIED. SHOULD A REPLACEMENT BE REQUIRED CONTACT WAHL CUSTOMER SERVICES.

WAHL (UK) LTD
STERLING HOUSE
CLIPPER CLOSE
RAMSGATE, KENT
CT12 5GG

CUSTOMER SERVICES T: 01227 740066
www.wahl.co.uk

Form No. ZB324
Rev.1 09-18