



**Blitz Trimmer
Instructions**

Blitz Trimmer

Please read all instructions carefully to familiarise yourself with your new Wahl trimmer before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: www.wahl.co.uk

E: customer.services@wahl.co.uk

CONTENTS

IMPORTANT SAFEGUARDS	Page 3
OPERATING INSTRUCTIONS	Page 5
TIPS FOR SUCCESSFUL STYLING	Page 8
CLEANING AND MAINTENANCE	Page 13
WIRING	Page 15
PRODUCT REGISTRATION	Page 15
GUARANTEE	Page 17

Please retain this leaflet for future reference.

READ ALL INSTRUCTIONS BEFORE USING.

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic safety precautions should always be followed, including the following:

1. This appliance can be used by children from aged 14 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
3. Never use your appliance without paying attention! Except when charging always

Blitz Trimmer

unplug this appliance from the electricity outlet immediately after using.

4. Do not operate the appliance with a broken cord, plug or charger, or if the appliance malfunctions, or is dropped or damaged in anyway.
5. Do not wrap the cord around the appliance.
6. Any servicing or repair must be performed by an authorised service representative.
7. Do not use outdoors or in damp areas.
8. The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.
9. To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.
10. Never carry the unit by its power cord.
11. Do not drop or insert any object into any opening.
12. Use this appliance only for its intended purpose.

13.Exhausted batteries/ rechargeable batteries should not be disposed of in the household waste. Dispose of them in a completely discharged state in accordance with local legal regulations. Do not throw into fire where heat could cause them to rupture.

⚠ WARNING: KEEP THE APPLIANCE DRY

TRAVEL PLUG

REMOVE BEFORE USE!

The travel plug is used to prevent the trimmer from accidentally powering on when traveling. When travel plug is engaged, the power button will not function.

OPERATING INSTRUCTIONS

Recharging your Lithium Ion Trimmer

- 1.This trimmer is conveniently designed for household use. It should be allowed to charge 1 hour before first use.
- 2.Remove the trimmer, transformer and accessories from packing material.
- 3.Connect the transformer to the trimmer. **BE SURE THE TRIMMER IS IN THE OFF POSITION WHEN CHARGING.**
- 4.Plug the transformer into any convenient electrical outlet at the correct voltage.
- 5.When the trimmer is low in power, it should be connected to the transformer and plugged into an outlet to assure maximum power is available when it is next used. This transformer is designed to completely charge the battery without over charging.
- 6.The battery will take approximately 60 minutes to charge. The lithium ion trimmer also has a quick charge capability, 1 minute quick charge for over 3 minutes use.

Blitz Trimmer

7. Lithium Ion battery life may be extended with the following procedure:

- Only charge the device when charging is required. A charge is required when the product begins to slow down or has trouble maintaining speed while performing its intended function.
- If the device is fully discharged, apply a charge right away to prevent damage or inability to recharge.
- A partial charge is fine; Li-Ion does not require a full charge.
- Charge the device at moderate temperatures. Do not charge below freezing.
- Do not leave the device connected to the charger, when it is not plugged into an outlet.

NOTE: It is okay to leave the device in its stand for storage if the stand allows for the charger to be disconnected from the stand or product.

- Perform regular maintenance on the device including keeping the blades oiled, clean, and free of debris to prevent taxing the battery and motor.
- When not in use, store the partially charged device in a cool and dry place away from heat sources and direct sunlight (25°C ambient or less recommended)

⚠ WARNING: ONLY USE THE TRANSFORMER SUPPLIED WITH THE TRIMMER.

TROUBLESHOOTING

If your trimmer does not seem to take a charge, check the following before returning it for repair:

1. Check outlet to make sure it is working by plugging in another appliance.
2. Be sure the trimmer is properly connected to the recharging transformer, all the connections are secure and the switch on the trimmer is turned OFF.
3. If your electricity is connected to a master power switch, we suggest the trimmer be disconnected from the charger anytime the master switch is off.

Blitz Trimmer

Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery.

4. If the trimmer does not run and it is completely charged, turn the unit ON and pinch or push the blades manually. Oil may have dried out between the blades, so they may be temporarily stuck together.

- If the LED did not flash before the trimmer stopped running, try resetting by re-charging completely until the LED shuts off.
- Trimming is disabled when charging or if the disabling plug is inserted.
- If the trimmer is fully charged the LED may remain OFF if plugged into the charger.
- If the trimmer unexpectedly stops operating try resetting the device by plugging the trimmer into the charger.
- If the LED flashes following a full charge or when not expected, the trimmer may need to be reset. Re-charge the trimmer and check to see if the LED is still flashing. If it is, let the trimmer run until fully discharged and do a full re charge.

BATTERY REMOVAL AND DISPOSAL

Under normal use, the rechargeable battery in your trimmer will last from three to five years. If a replacement battery should be necessary, do not attempt to replace the battery yourself. (See page 16 for details)

DETACHABLE HEADS:

A detachable head system enables you to quickly change from a shaver to a precision trimmer to trim moustache, goatee, or anywhere. To remove attachment, simply pull top edge of blade away from body unit. To attach, align back tab of attachment head to cavity on the inner edge of trimmer unit and push down on top of blade.




Blitz Trimmer

Should blades become damaged or dull or if you want additional attachment heads for your trimmer, you may purchase them from Wahl. Be sure to ask for the following attachment with part number from our service and repair department (see last page for contact information):

Attachment Head:	Wahl Part Number
-------------------------	-------------------------

Trimmer:	59300-800
Detailer:	59301
T-Blade:	59302
Dual Shaver:	59303
Rotary:	58067-100
Detail Shaver:	59307
Rotary Shaver:	7196-001
Body Shaver:	92020-100

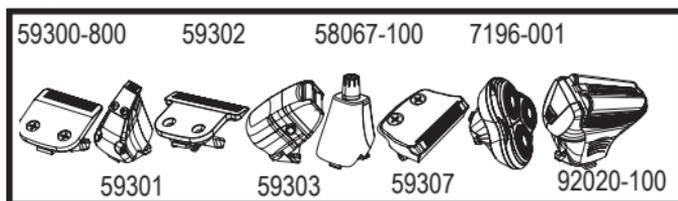

The trimmer you purchased may not have all of these heads, but they will all work with your trimmer if you wish to purchase them.

PRO TIPS

1. Hair cuts best with an electric trimmer/shaver when it is clean and dry. For best results, do not use with wet or damp hair.
2. It can take up to 30 days of regular use to train your hair to a new shaving system. Some irritation may occur during this time. Stick with it. Your hair and skin will adjust, and you will get a great shave.
3. Replace the foil head and cutter bars as needed, depending on how often you shave.
4. Be sure to clean the shaver, cutter bar and foil after every three or four shaves.

SHAVING PROCEDURES FOR FAST, CLOSE SHAVES

Blitz Trimmer

For maximum speed and efficiency, hold the shaver so that both screens are in contact with the skin. When shaving the upper lip or neck, hold shaver so that the uppermost screen is in contact with skin. Shave both with and against the grain of the beard, and stretch the skin taut in the path of the shaver. Guide the dual foil heads gently back and forth, primarily against the grain of the beard.



Do not press screen heads hard against face. Heavy scrubbing action with the shaver could damage the foil and will not result in a closer shave.


Always replace the Foil Guard to protect the delicate dual foil heads when shaver is off. To ensure continued shaving satisfaction, you should replace the foils and cutter bar periodically.

SHAVING HEAVY BEARD GROWTH


Begin shaving in a less dense area of the beard. Move the shaver in a circular motion on a small area of the face (this picks up the hairs that grow in all directions). When you see that this small area is shaved clean, gradually move into a new area while still using the circular motion. Continue this motion, one small section at a time, until entire face is shaved.

Using guide combs:

To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the trimmer blade.

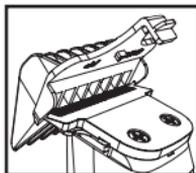

SHORT ROUNDED GUIDE COMBS:

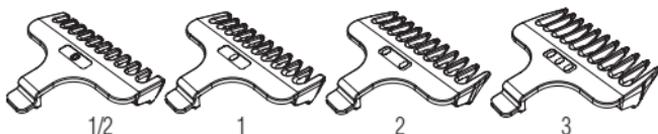


TRIMMING WITH GUIDE COMBS:

These attachments are ideal for blending, tapering and defining beards, as well as for achieving a "close trim" stubble look around the face. To use the attachments, go with the hair direction. To achieve closer looks, go against the hair direction.

Blitz Trimmer

HAIR & LONGER BEARD GUIDE COMBS:

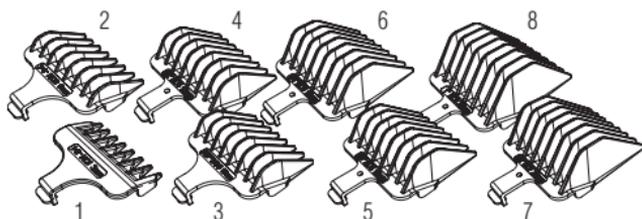

NECKLINES AND SIDEBURNS USING TRIMMER HEAD

Detach shaver head as described earlier. Attach trimmer blade as described earlier. Slowly move trimmer downward on desired areas to neatly trim and shape.



TRIMMING AND EDGING YOUR BEARD

The following are suggested trimming steps and trimmer positions. You may find different procedures work better for you.

1. Comb your beard in the direction that it grows to help reveal stray hairs that may be longer than the others.
2. Attach a guide to trim and taper your beard. Begin with a guide of a long trimming length. Trim toward your chin in smooth, overlapping strokes, following the lay of your beard. If you trim against the way your beard naturally lays, the trimmer will cut the hair much shorter. Change the trimming guides to progressively shorter lengths until you reach the desired length of beard. You may wish to trim closer near the ear and down under the chin, changing to a longer guide toward the front of the face and point of your chin.



3. To cut the outline of your beard, remove the trimming guide. Starting under your chin and working back toward your jawbone and ears, cut the outer perimeter of your beard underneath the jawbone. Continue the line all the way up to the ears and hairline.
4. Accentuate your beard line by using the trimmer in a downward motion.

Start at the line you've created and, working from the chin back toward the ears, trim the area right under your beard line.

5. Define the upper part of your beard using the same technique.

BODY GROOMING

The following are suggested steps and head choices. You may find different procedures work better for you.

1. If starting with full growth hair, first use the T-blade trimmer head with the rounded #1 or #1/2 guide comb to trim hair to a short length.

2. Remove the guide comb, and go back over areas where a shorter cut is desired. Use care in sensitive areas to avoid cuts in loose skin.

3. If a smooth finish is desired, remove the T-blade, and attach the all-body shaver. Go over desired areas taking smooth strokes.

TRIMMING ARM & LEG HAIR

Simply glide the trimmer over your arm or leg until desired hair length is achieved. The first time you trim the hair, start by using a longer guide comb on the trimmer, then use progressively shorter settings if a shorter length is preferred.

TRIMMING CHEST & STOMACH

Glide the trimmer over your torso region, in an upward motion until desired hair length is achieved. For tight, scratch-free trimming, use the #1 or #1/2 guide comb.

FADE CUT USING T-BLADE

1. Start at the temple and cut all the way around the head to establish the ultimate location of the fade line. Always cut against the grain for the shortest cut. Don't force the blade through the hair. Let the trimmer do the work.

2. Next, cut around the head again and up the nape of the neck to the fade line, brushing away the cut hair as you go. Pull the scalp taut with the thumb

Blitz Trimmer

for the closest cut. Turn the trimmer upside down when necessary to keep cutting against the grain. Make sure both sides of the head are even.

3. For the top of the head, cut with the grain using the individual guide comb attachments. The smaller the number of the comb, the shorter the cut. Comb or brush the hair as you cut for an even end result.
4. To complete the fade, blend the hair at the fade line by trimming up and out across the line and against the grain all the way around the head. Then, repeat all around, turning the trimmer upside down and cutting downward. The final objective is to blend the hair so there is no real line, just a perfect fade from bald to very short hair. You can achieve this by using the #1 guide comb attachment. Continue combing and cutting until you achieve the desired effect.
5. To create a part, pick a spot off-center. Pull the scalp tight and with the end of the blade perpendicular to the head, move the trimmer back and forth to cut a line. Comb through it and cut again to make sure the cut is precise.

CUTTING HAIR

The first time you cut the hair, cut only a small amount until you become accustomed to how long each guide comb leaves the hair. Always start by placing the largest guide comb on the trimmer, then use shorter combs if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that neat, well-groomed look.

For uniform cutting, allow the trimmer to cut its way through the hair. Do not force it through at a faster rate.

1. Start by combing the hair so it falls into its natural direction.
2. Place the largest guide comb onto your trimmer and start by trimming the sides from the bottom upwards. Hold the trimmer lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the


Blitz Trimmer

trimmer up and outward through the hair, cutting only a small amount at a time.

Repeat around sides and back of head.

If you desire shorter hair, either change to a shorter guide comb or apply more pressure and less lift away from head with the present attachment.



This entire procedure requires practice, and it is always better to leave too much hair the first few haircuts.

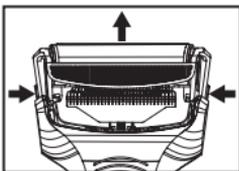

CLEANING AND MAINTENANCE SHAVER HEAD CARE

For maximum performance, we recommend you clean your shaver after every few shaves.


To clean, turn shaver "OFF" and remove the foil head by pushing the shaver head release buttons on the sides of the shaver and lifting the foil head upward. Lightly tap the open side of the foil head on a hard surface to remove the majority of loose stubble particles. Be careful not to tap foil.

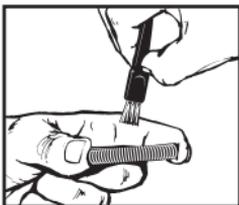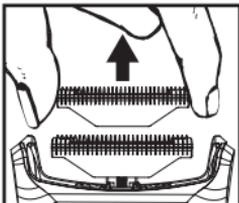

TO REMOVE CUTTER BAR

Turn shaver off. Remove the foil head and, holding the shaver in one hand, gently pull up on cutter bar. Be sure your thumb and first finger are positioned at each end of the cutter bar. Use the cleaning brush provided to remove whiskers between the cutting blades. NOTE: If you do not hold the cutter bar as shown, brushing the blades could result in damage to the assembly.

When the foil head and cutter bars are removed from the shaver, an alternate cleaning method is to rinse them under running

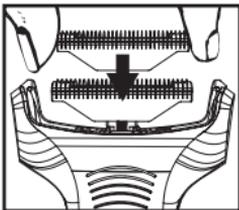

Blitz Trimmer

water. Simply let them air dry.

After cleaning, replace the cutter bars by pressing down gently. Carefully replace the foil head, snapping it into place.

From time to time, depending on the density of your beard, you will need to replace the cutters and foils. If you notice that it is taking you longer to shave, or if your face starts to feel some irritation, or if the foil seems to become warm to the touch, it is probably time to replace the cutters and foils. Replace the cutters and foils only with WAHL parts (92025).

BLADE CARE

Trimmer blades have precision-hardened and ground cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty or abrasive material. Clean with the included brush.

Heads should be removed from the trimmer prior to rinsing in water. After rinsing, allow the heads to air dry completely before reattaching to the trimmer body. The trimmer body should always be kept away from water to maximize the life of the motor, battery, and control components.

OILING BLADES

For best results, put one or two drops of Wahl Clipper Oil on the blades only when necessary, or approximately once a month. Motor bearings are permanently lubricated, do not attempt to oil.

When oiling your trimmer, turn the trimmer "ON," hold the unit with the blades facing DOWN and squeeze one or two drops of oil onto the blades. Wipe off excess oil with soft cloth.

NOTICE—DO NOT OVER OIL!

Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.

BLADE CLEANING/STORAGE

Before storing your trimmer, use the cleaning brush to whisk any loose hairs from the unit and the blades. Store unit in such a manner so that blades are protected from damage.

This appliance should be stored in a manner where it is not subjected to Crushing, Heating above 100°C (212°F), or Incineration.

WIRING

 **WARNING:** IF THE TRANSFORMER IS DAMAGED IT MUST BE REPLACED IN ORDER TO AVOID A HAZARD. THIS PRODUCT MUST ONLY BE USED WITH THE TRANSFORMER SUPPLIED. SHOULD A REPLACEMENT BE REQUIRED CONTACT WAHL CUSTOMER SERVICES.

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers. Please take a minute to register your product online at www.wahl.co.uk.

Blitz Trimmer

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)



At the end of this products life it should not be disposed of with general household waste.

Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.

LITHIUM BATTERY REPLACEMENT, REMOVAL AND DISPOSAL

Lithium-Ion Battery Replacement

For battery replacement the entire, intact clipper or trimmer should be sent to: Wahl (UK) Ltd Customer Services (the address can be found on the reverse of this booklet) or taken to a suitably qualified professional. The battery should only be replaced by the original manufacturers spare, for safety reasons a substitute should not be used.

Do not attempt to remove the battery. Lithium-Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged or exposed to water or high temperatures.

Lithium Battery Disposal

Do not dispose of this product or the Lithium battery in the normal household waste.

The product should be returned to Wahl Customer Services where we offer a take back service or taken to a local collection facility where they will be dealt with safely and sent for the appropriate recycling.

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 5 years from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include blades, cables, shaver heads, foils and cutters etc which are consumable parts.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under law in the United Kingdom.

Connect with us on
Facebook, Twitter, Pinterest

 facebook.com/WahlNation

 [@WahlNationUK](https://twitter.com/WahlNationUK)

 pinterest.com/wahluk

WAHL (UK) LIMITED
HERNE BAY TRADE PARK,
SEA STREET
HERNE BAY
KENT
CT6 8JZ.

CUSTOMER SERVICES **T:** 01227 740066
www.wahl.co.uk

Form No. ZB542 Rev1 02/16