



**HOT BRUSH  
INSTRUCTIONS**

## HOT BRUSH

Please read all instructions carefully to familiarise yourself with your new Wahl Hot Brush before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: [www.wahl.co.uk](http://www.wahl.co.uk)

E: [customer.services@wahl.co.uk](mailto:customer.services@wahl.co.uk)

## CONTENTS

<b>GENERAL USER INFORMATION</b>	Page 3
<b>IMPORTANT SAFEGUARDS</b>	Page 4
<b>OPERATING INSTRUCTIONS</b>	Page 7
<b>STYLING TIPS</b>	Page 8
<b>CARE AND CLEANING</b>	Page 8
<b>DISPOSAL</b>	Page 9
<b>WIRING</b>	Page 10
<b>PRODUCT REGISTRATION</b>	Page 11
<b>GUARANTEE</b>	Page 11

## GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes



**DANGER**

Danger of electric shock which may result in serious physical injury or death.



**DANGER**

Danger of explosion which may result in serious physical injury or death.



**WARNING**

Warning of possible physical injury or a health risk.



**CAUTION**

Information about danger of material damage.



Note with useful information and tips.

- ▶ Action to be taken by owner.
1. Carry out these actions in the sequence described.
- List

## HOT BRUSH

Please retain this leaflet for future reference.

**READ ALL INSTRUCTIONS BEFORE USING.**

### **IMPORTANT SAFEGUARDS**

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

#### **Requirements**

- ▶ Read the instruction manual in full to familiarise yourself with the product before the first use.
- ▶ This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Keep the appliance and its cord out of reach of children less than 8 years.
- ▶ Use this appliance only for its intended purpose.
- ▶ Do not use with a voltage converter.

## Hazards



### **Danger! Electric shock due to damage to appliance**

- ▶ Do not operate the appliance with a broken cord or plug, or if the appliance malfunctions, or is dropped or damaged in anyway.
- ▶ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ▶ Do not let the cord hang over the edge of the work surface or let it touch any hot surfaces.



**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



### **Danger! Electric shock due to penetration of liquid.**

- ▶ To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.

## HOT BRUSH

- ▶ The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.



### **Warning! Injuries due to incorrect handling**

- ▶ Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- ▶ Care should be taken to avoid contact with the skin, the face and neck.



### **Caution! Danger of product damage**

- ▶ Never use your appliance without paying attention!
- ▶ Always unplug the unit when not in use or left unattended.
- ▶ Do not wrap the cord around the appliance.
- ▶ Do not use outdoors or in damp areas.
- ▶ Never carry the unit by its power cord.
- ▶ Allow the appliance to cool before storing away.



**NOTE:** During the first few minutes of the initial use, you may notice smoke and a slight odour. This is normal and will quickly disappear.

## HOT BRUSH



1. Switch
2. Power indicator light
3. Swivel cord
4. Cool touch tip

## OPERATING INSTRUCTIONS

1. Before plugging in check that the voltage on the rating label corresponds to the local mains voltage.
2. Pre-heat your hot brush. We recommend the use of the Wahl heat resistant storage pouch(ZX497) or heat mat(ZX760). These products are not included in your kit and can be bought separately from the Wahl online store ([www.wahlstore.co.uk](http://www.wahlstore.co.uk)).
3. The iron will be ready to use in about 5 minutes once switched on.
4. Section hair into strands of approximately one inch thick and two inches wide.
5. Apply the brush to the hair roots and slide it right to the end of the hair, repeat this process several times before rolling.
6. According to the required curl, roll the section of hair in an appropriate direction.
7. Proceed to the roots keeping the hair tight so that it comes into contact with the heated roller.
8. Maintain the rolled shape for 15-30 seconds depending on the thickness of the hair.

## HOT BRUSH

- Carefully release the hot brush by turning in the reverse direction avoiding any stretching of the hair.
- Allow the hair to cool before final combing and styling.

## STYLING TIPS

- Always wash and condition your hair before styling.
- Partially dry hair before styling.
- For long lasting results, comb a small amount of mousse or styling gel through the hair before drying and styling.
- When sectioning off your hair for styling, you may choose to use hair clips to make sectioning easier.
- Use small sections of hair when styling.
- Start at the back of the head and work forwards to the sides and front.
- Whilst the appliance is heating never leave unattended.
- After use unplug and allow the appliance to cool completely before cleaning or storing away.

## CARE AND CLEANING

- To clean the outside of the hot brush, first ensure the appliance is unplugged and cool then use a slightly damp sponge to clean, then wipe completely dry with a dry cloth.



WARNING: Do not immerse in water.

- No other cleaning is necessary.
- When not in use, store the appliance where it will not become damaged, and ensure it is out of reach from children.

## DISPOSAL



**Handle with care! Environmental damage in the case of incorrect disposal.**

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Adhere to the relevant legal requirements when disposing of the appliance.

### **Information on the disposal of electrical and electronic appliances in the European Community:**



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE).

In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

## HOT BRUSH

### WIRING



**WARNING:** If the supply cord is damaged it must be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.

The wires in the mains lead of this hot brush are coloured in accordance to the following code:

Blue Neutral (N)      Brown Live (L)

This appliance is fitted with a 3 pin BS Approved BS1363 plug which has a 3amp fuse fitted. If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this hot brush may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter 'N' or coloured BLACK or BLUE. The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED or BROWN.

DO NOT connect either wire to the terminal in the plug which is marked with the letter E, has the Earth symbol, or coloured GREEN or GREEN AND YELLOW

## PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Services, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at [www.wahl.co.uk](http://www.wahl.co.uk).

## GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 1 year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

WAHL (UK) LIMITED  
HERNE BAY TRADE PARK  
SEA STREET  
HERNE BAY  
KENT  
CT6 8JZ.

CUSTOMER SERVICES T: 01227 740066  
[www.wahl.co.uk](http://www.wahl.co.uk)

Form No. ZB633 Rev0 02-17