



ROOT STYLER

ROOT STYLER

Please read all instructions carefully to familiarise yourself with your new Wahl Root Styler before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: www.wahl.co.uk

E: customer.services@wahl.co.uk

CONTENTS

| | |
|---------------------------------|---------|
| GENERAL USER INFORMATION | Page 3 |
| IMPORTANT SAFEGUARDS | Page 4 |
| OPERATING INSTRUCTIONS | Page 7 |
| CARE AND CLEANING | Page 9 |
| WIRING | Page 9 |
| DISPOSAL | Page 10 |
| PRODUCT REGISTRATION | Page 11 |
| GUARANTEE | Page 11 |

GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes

**DANGER**

Danger of electric shock which may result in serious physical injury or death.

**DANGER**

Danger of explosion which may result in serious physical injury or death.

**WARNING**

Warning of possible physical injury or a health risk.

**CAUTION**

Information about danger of material damage.



Note with useful information and tips.

- ▶ Action to be taken by owner.
1. Carry out these actions in the sequence described.
- List

ROOT STYLER

Please retain this leaflet for future reference.

READ ALL INSTRUCTIONS BEFORE USING.

IMPORTANT SAFEGUARDS

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

Requirements

- ▶ Read the instruction manual in full to familiarise yourself with the product before the first use.
- ▶ This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Keep the appliance and its cord out of reach of children less than 8 years.
- ▶ Use this appliance only for its intended purpose.
- ▶ Do not use with a voltage converter.

Hazards



Danger! Electric shock due to damage to appliance

- ▶ Do not operate the appliance with a broken cord or plug, or if the appliance malfunctions, or is dropped or damaged in anyway.
- ▶ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ▶ Do not let the cord hang over the edge of the work surface or let it touch any hot surfaces.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



Danger! Electric shock due to penetration of liquid.

- ▶ To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.

ROOT STYLER

- ▶ The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.



Warning! Injuries due to incorrect handling

- ▶ Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- ▶ Care should be taken to avoid contact with the skin, the face and neck.




Caution! Danger of product damage

- ▶ Never use your appliance without paying attention!
- ▶ Always unplug the unit when not in use or left unattended.
- ▶ Do not wrap the cord around the appliance.
- ▶ Do not use outdoors or in damp areas.
- ▶ Never carry the unit by its power cord.
- ▶ Allow the appliance to cool before storing away.



NOTE: During the first few minutes of the initial use, you may notice smoke and a slight odour. This is normal and will quickly disappear.

ROOT STYLER

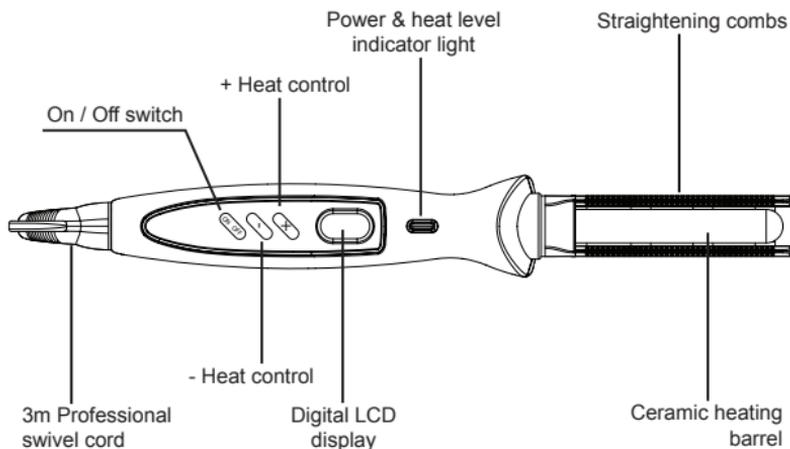

OPERATING INSTRUCTIONS



IMPORTANT: This styling tool is designed for optimum styling results on all hair types. This barrel will get extremely hot very quickly, especially at the higher heat setting (190°C - 220°C), so use extra caution.



NOTE: It is normal for this styling tool to emit a slight odour and/or smoke during its initial use.

OPERATION/HEAT SETTINGS

To turn the styling tool on, press and hold the ON/OFF button for 1 second. The blue light will start blinking and the LCD will indicate will indicate the first heat setting (100°C FINE).



NOTE: The blue light will stop blinking when the tool reaches the selected heat setting.



It is important to always select the proper heat setting for your hair (see below).

ROOT STYLER



FINE

Select the first setting for fine, delicate or light-coloured hair. The LCD will indicate 100°C, the word FINE and 1 bar.



NORMAL

Select the second setting for easy-to-style hair. The LCD will indicate 160°C, the word normal and 2 bars.



THICK

Select the third setting for THICK hair. The LCD will indicate 190°C, the word THICK and 3 bars.



COARSE

Select the fourth setting for very thick or COARSE hair. The LCD will indicate 220°C, the word COARSE and 6 bars.

BASIC STYLING

For best results start with clean dry hair.

1. Set the digital temperature control to the desired temperature and allow for the blue indicator light to stop blinking. This indicates that the styling tool has reached the selected styling temperature.
2. Starting at the nape of the neck, use a comb or the teeth on your Root Control Duo to separate hair into 1" wide by ½" thick sections.
3. Start at the root of each section and place the teeth close to the scalp and grip the hair. Be careful not to touch the scalp with the hot barrel.
4. Maintaining pressure on the hair, slowly slide the tool down each section.
5. Continue to repeat this process working your way up the head one section at a time.
6. For the added lift and volume you can turn the tool around so the teeth point up. Grip the hair at the scalp and pull up as you slide the tool down each section.
7. Use the tool to turn in or flip up the ends of each hair section to achieve the desired style.
8. After completing all sections, use the tool to comb through, smooth, add shine and finish the style.
9. Learning new styling techniques may take some time. Experiment with your particular hair type and length to achieve desired results.

CARE AND CLEANING

MAINTENANCE

Your styling tool is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hairspray. If cleaning becomes necessary, unplug the styling tool from its power source, allow to cool and wipe the exterior with a damp cloth. If the cord becomes twisted, untwisted prior to use.



WARNING: If any malfunction occurs, do not attempt to repair. This styling tool has no user-serviceable parts.

STORAGE

Allow styling tool to cool before storing it away in a safe dry place that is out of reach of children. Never store it while still hot or plugged into an outlet.

Never wrap the cord tightly around the unit. Do not hang the styling tool by the power cord and avoid pulling or straining especially at the point where it enters the unit and at the plug connection.

WIRING



WARNING: If the supply cord is damaged it must be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.

The wires in the mains lead of this Root Styler are coloured in accordance to the following code:

Blue Neutral (N) Brown Live (L)

This appliance is fitted with a 3 pin UK 13amp plug which has a 5amp fuse fitted. If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

ROOT STYLER

As the colours of the wires in the mains lead of this root styler may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter 'N' or coloured BLACK or BLUE. The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED or BROWN.

DO NOT connect either wire to the terminal in the plug which is marked with the letter E, has the Earth symbol, or coloured GREEN or GREEN AND YELLOW

DISPOSAL



Handle with care! Environmental damage in the case of incorrect disposal.

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Adhere to the relevant legal requirements when disposing of the appliance.

Information on the disposal of electrical and electronic appliances in the European Community:



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Services, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at www.wahl.co.uk.

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 1 year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

WAHL (UK) LIMITED
HERNE BAY TRADE PARK
SEA STREET
HERNE BAY
KENT
CT6 8JZ.

CUSTOMER SERVICES T: 01227 740066
www.wahl.co.uk

Form No. ZB697 Rev0 05-17