



P R O F E S S I O N A L

Style Collection Dryer
instructions

Style Collection Dryer

Please read all instructions carefully to familiarise yourself with your new hairdryer before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit


W: www.wahl.co.uk

E: customer.services@wahl.co.uk

CONTENTS

DESCRIPTION OF PARTS	Page 3
GENERAL USER INFORMATION	Page 4
IMPORTANT SAFEGUARDS	Page 5
OPERATING INSTRUCTIONS	Page 9
HOW TO USE	Page 9
CLEANING & MAINTENANCE	Page 11
TROUBLE SHOOTING	Page 11
WIRING INSTRUCTIONS	Page 12
DISPOSAL	Page 13
PRODUCT REGISTRATION	Page 13
GUARANTEE	Page 14

Style Collection Dryer

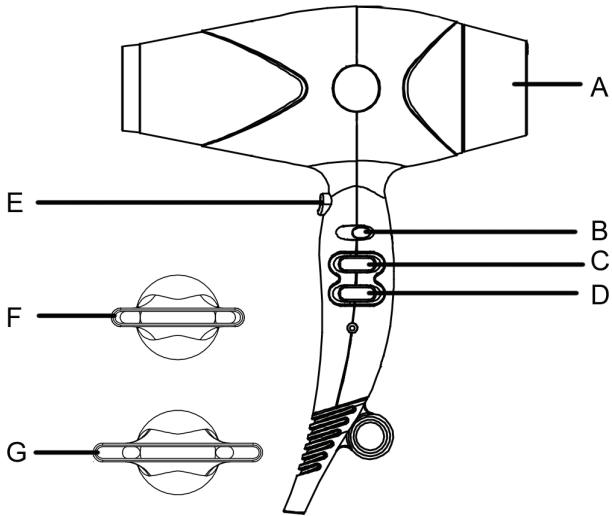

DESCRIPTION OF PARTS

- A – Detachable silencer filter cap
- B – Turbo heat switch
- C – Heat switch
- D – Speed switch
- E – Cool shot button
- F – Narrow slim nozzle
- G – Wide slim nozzle

Style Collection Dryer

GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes



DANGER

Danger of electric shock which may result in serious physical injury or death.



DANGER

Danger of explosion which may result in serious physical injury or death.



WARNING

Warning of possible physical injury or a health risk.



CAUTION

Information about danger of material damage.



Note with useful information and tips.

- ▶ Action to be taken by owner.
1. Carry out these actions in the sequence described.
- List

Please retain this leaflet for future reference.

READ ALL INSTRUCTIONS BEFORE USING.

IMPORTANT SAFEGUARDS

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

Requirements

- ▶ Read the instruction manual in full to familiarise yourself with the product before the first use.
- ▶ This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Keep the appliance and its cord out of reach of children less than 8 years.
- ▶ Use this appliance only for its intended purpose.

Style Collection Dryer

- ▶ Do not use with a voltage converter.

Hazards



Danger! Electric shock due to damage to appliance

- ▶ Do not operate the appliance with a broken cord or plug, or if the appliance malfunctions, or is dropped or damaged in anyway.
- ▶ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ▶ Do not let the cord hang over the edge of the work surface or let it touch any hot surfaces.
- ▶ The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



Danger! Electric shock due to penetration of liquid.

- ▶ To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance

should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.

- ▶ When the hairdryer is used in the bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- ▶ For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice. (NOTE: Mains sockets might not be permitted in average sized bathrooms according to local wiring regulations.)



Warning! Injuries due to incorrect handling

- ▶ Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- ▶ Care should be taken to avoid contact with the skin, the face and neck.



Caution! Danger of product damage

- ▶ Never use your appliance without paying attention!
- ▶ Always unplug the unit when not in use or left unattended.
- ▶ Do not wrap the cord around the appliance.
- ▶ Do not obstruct the inlet or outlet grills.
- ▶ If however, the airflow is inadvertently obstructed during use, the built in thermal safety device will automatically cut out the appliance. The hairdryer will switch on again automatically after cooling down for a few minutes.
- ▶ Do not use outdoors or in damp areas.
- ▶ Never carry the unit by its power cord.
- ▶ Do not drop or insert any object into any opening.
- ▶ Allow the appliance to cool before storing away.









OPERATING INSTRUCTIONS

1. Before plugging the dryer in, check the voltage on the rating label corresponds to the local mains voltage.
2. To start using the dryer, plug in to the mains and turn on using the speed switch on the handle (Part 'D' on page 3).
3. Adjust the speed and heat settings using the switches on the handle (see page 3 for list of parts).
4. This dryer has a turbo heat switch which will increase the temperature of the main heat settings (Part 'B' on page 3). To use, switch this button to the right (symbol shown below in 'Hairdryer settings').
5. To use the cool shot, press and hold the button at the front of the dryer (Part 'E' on page 3). This will cool the hair and help set the style.
6. After use, adjust the speed switch completely to the left to turn the dryer off (symbol shown below in 'Hairdryer settings').

HOW TO USE

Hairdryer settings

This dryer has 3 heat settings, 2 speed settings, a cool shot function, plus a turbo heat switch option to increase the temperature of the main heat settings.

<u>Speed</u>	<u>Turbo heat</u>	<u>Temperature</u>
Off 	Off 	Low 
Low 	On 	Medium 
High 		Hi 

Style Collection Dryer

- i** **NOTE:** During the first few minutes of the initial use you may notice smoke and a slight odour. This is normal and will quickly disappear.

Concentrator attachments

The dryer comes with two air concentrator nozzles (one narrow slim nozzle, and one wide slim nozzle).

The concentrator nozzles can be fitted to the front of the dryer and may be turned to the desired position.



IMPORTANT: Do not use attachments on high heat setting as overheating can cause damage to both the dryer and the concentrator nozzles.

Rear filter

- At the motor end of the dryer there is a detachable filter cover which may be removed for cleaning. (Part 'A' on page 3)
- The filter prevents hair from being sucked into the motor end of your hairdryer.
- To remove the filter cover, simply hold filter cover and twist anti-clockwise until released.
Use a soft brush to remove dust and hair from the filter screen. To refit the filter cover, align in place and twist clockwise to lock into position.
- It is recommended that the filter cover is removed regularly for cleaning, and thereby allowing air to flow freely through the motor and fan unit.

Only use accessories provided with this hairdryer.

CLEANING AND MAINTENANCE

- Always unplug the hairdryer before cleaning.
- Do not immerse in water.
- Use a slightly damp cloth to clean the body of the hairdryer, and dry with a clean cloth.
- Store the appliance in a drawer or hang-up away from dust or moisture.
- The hairdryer is fitted with a removable filter for easy cleaning. To remove the filter cover, simply hold filter cover and twist anti-clockwise until released. Use a soft brush to remove dust and hair from the filter screen. To refit the filter cover, align in place and twist clockwise to lock into position.

TROUBLE SHOOTING

Q. My hairdryer is overheating and cutting out

A. Your hairdryer automatically cuts out if it overheats.

If this happens check and clean the detachable filter cover (see cleaning and maintenance section for details).

If the hairdryer still overheats return it to the place of purchase if under guarantee or send it back to Wahl (UK) for repair.

Style Collection Dryer

WIRING INSTRUCTIONS



WARNING: IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURERS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

The wires in the mains lead of this Hairdryer are coloured in accordance to the following code:

Blue Neutral (N) Brown Live (L)

This appliance is fitted with a 3 pin plug which has a 13amp fuse fitted.

If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this Hairdryer may not correspond with the colour markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked be with the letter 'N' or coloured BLACK OR BLUE.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED OR BROWN.

DO NOT connect either wire to the terminal in the plug which is marked with the letter 'E', has the Earth symbol, or coloured GREEN OR GREEN AND YELLOW

DISPOSAL



Handle with care! Environmental damage in the case of incorrect disposal.

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment. Adhere to the relevant legal requirements when disposing of the appliance.

Information on the disposal of electrical and electronic appliances in the European Community:

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Services, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at:
www.wahl.co.uk

Style Collection Dryer

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 1 year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

Style Collection Dryer

WAHL (UK) LIMITED
HERNE BAY TRADE PARK
SEA STREET
HERNE BAY
KENT
CT6 8JZ

CUSTOMER SERVICES T: 01227 740066
www.wahl.co.uk

Form No. ZB751
Rev0 08-17