



# BLADE REMOVAL AND REPLACEMENT

## Academy trimmer

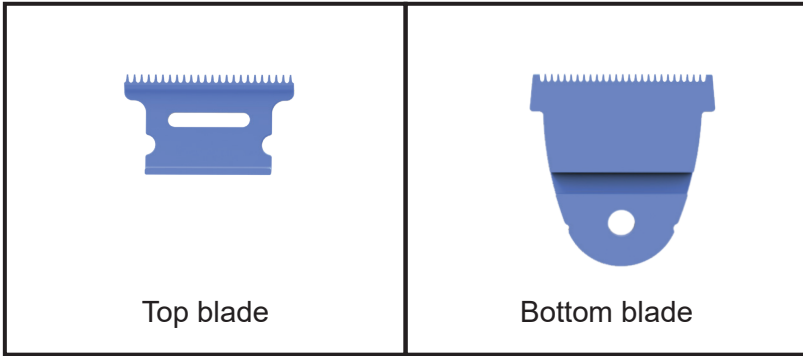

Before you start it is important to know which is the top blade and which is the bottom blade.

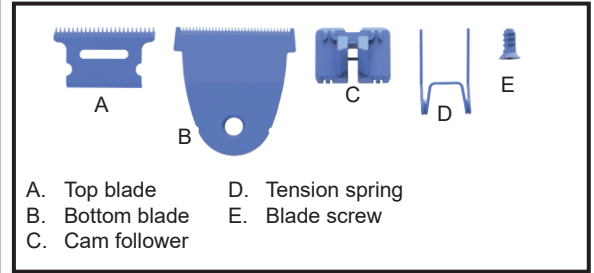

## BLADE REMOVAL AND REPLACEMENT

The blades are held in place by 1 screw. The first step is to remove this screw, the blade is under tension, remove carefully so parts do not spring out.

Bottom blade  
Top blade  
Cam follower

To assemble, clip the cam follower to the top blade, place a few drops of oil on the bottom blade then place the top blade on the bottom blade. The bottom of the cam follower should slide into the groove on the bottom blade.

Fig A  
Fig B

Fig A  
Assembled cam follower and top blade.

Fig B  
Complete assembled blade. Note the bottom of the cam follower inserted in the groove on the bottom blade.

Spring  
Lip  
Screw hole

Insert the tension spring with the tips pointing forward into the lip, just above the screw hole.

Note the position of the spring going into the lip just above the screw hole.

Place the blade assembly on the head of the trimmer, ensure that the spring pushes against the cam follower and the slot in the cam follower aligns with the pin on the motor cam. Hold firmly in place pushing against the spring tension.

Put the screw in the screw hole and tighten.

Make sure blades are aligned correctly before use.