


MAINS CLIPPER BLADE REPLACEMENT AND ALIGNMENT

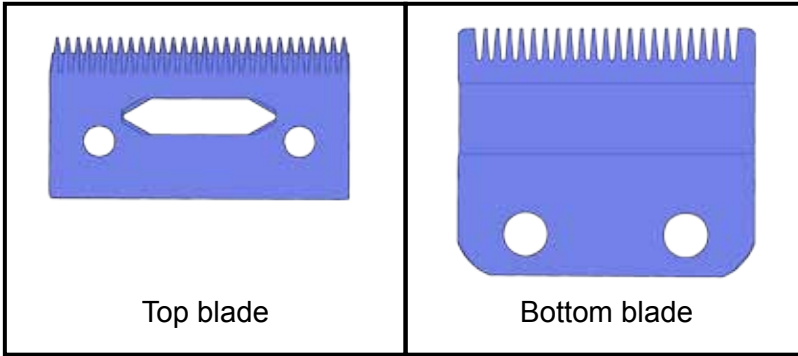

Top blade

Bottom blade

Before you start it is important to know which is the top blade and which is the bottom blade.

BLADE REPLACEMENT

<p>Remove both screws from the blade.</p>	<p>Clean dirt and hair from the clipper using a small brush.</p>	<p>Oil the underside of the bottom blade.</p>	<p>Rest the top blade on the clipper and put the bottom blade on top with the flat side facing towards the top blade. Tighten the screws to hold the blades in place.</p>
---	--	---	---

BLADE ALIGNMENT

<p>Loosen the screws enough so the blades are still held in place, do not remove the screws.</p>	<p>If the clipper has a taper lever, put it in the upmost position (1).</p>	<p>Position the tips of the top blade teeth between 0.8-1.6mm back from the bottom blade (1). This step is important so the blades do not cut too close or allow the moving blade to touch the skin.</p>	<p>The extreme left hand tooth of the top blade (2) must be covering, or be to the left of the first small tooth of the bottom blade. The extreme right hand tooth of the top blade must be touching the big tooth on the bottom blade (3).</p>
--	---	--	---

If the blades fail to cut after alignment, cleaning, oiling and adjustment then there may be a problem with the internal tension in the clipper or the blade could be blunt. It should be returned for service or service exchange (with blade). Contact us for your Wahl product servicing needs or routine Wahl blade sharpening.