



**BEARD STRAIGHTENER
BRUSH**

BEARD STRAIGHTENER BRUSH

Please read all instructions carefully to familiarise yourself with your new Wahl Beard Straightener Brush before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: www.wahl.co.uk


E: customer.services@wahl.co.uk

CONTENTS

PRODUCT FEATURES	Page 3
GENERAL USER INFORMATION	Page 4
IMPORTANT SAFEGUARDS	Page 5
OPERATING INSTRUCTIONS	Page 8
CARE AND CLEANING	Page 9
WIRING	Page 9
DISPOSAL	Page 10
GUARANTEE	Page 11

BEARD STRAIGHTENER BRUSH

PRODUCT FEATURES

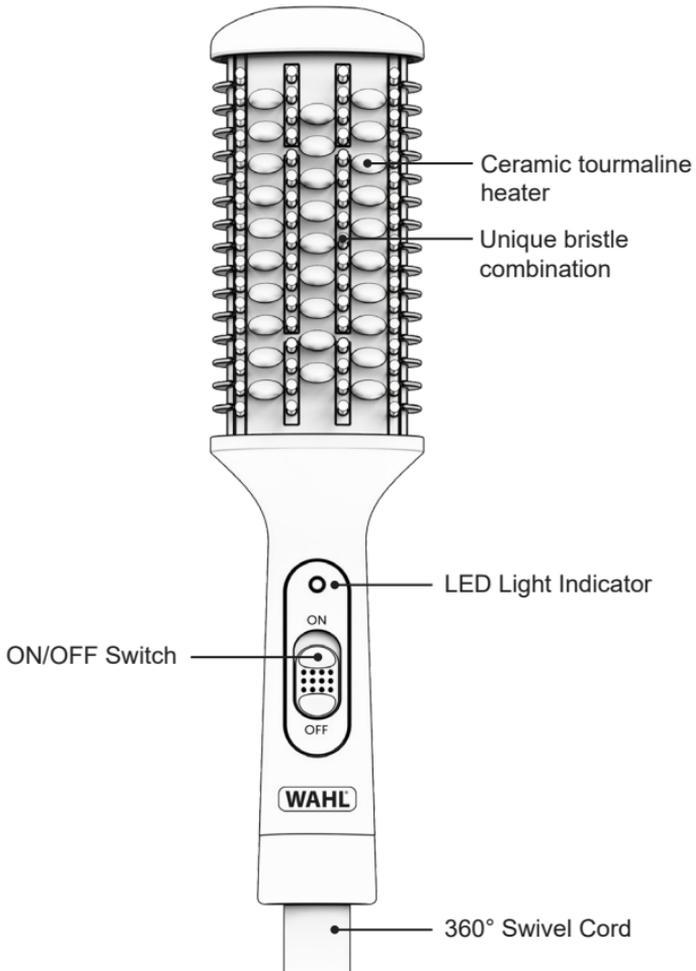

BEARD STRAIGHTENER BRUSH

GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes



DANGER

Danger of electric shock which may result in serious physical injury or death.



DANGER

Danger of explosion which may result in serious physical injury or death.



WARNING

Warning of possible physical injury or a health risk.



CAUTION

Information about danger of material damage.



Note with useful information and tips.

- ▶ Action to be taken by owner.
1. Carry out these actions in the sequence described.
- List

BEARD STRAIGHTENER BRUSH

Please retain this leaflet for future reference.

READ ALL INSTRUCTIONS BEFORE USING.

IMPORTANT SAFEGUARDS

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

Requirements

- ▶ Read the instruction manual in full to familiarise yourself with the product before the first use.
- ▶ This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Keep the appliance and its cord out of reach of children less than 8 years.
- ▶ Use this appliance only for its intended purpose.
- ▶ Do not use with a voltage converter.

Hazards



Danger! Electric shock due to damage to appliance

- ▶ Do not operate the appliance with a broken cord or plug, or if the appliance malfunctions, or is dropped or damaged in anyway.
- ▶ If the supply cord is damaged, it must be replaced by the manufacturer or a suitably qualified professional in order to avoid a hazard.
- ▶ Do not let the cord hang over the edge of the work surface or let it touch any hot surfaces.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



Danger! Electric shock due to penetration of liquid.

- ▶ To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.

BEARD STRAIGHTENER BRUSH

- ▶ The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.



Warning! Injuries due to incorrect handling

- ▶ Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- ▶ The appliance will be hot during use.
- ▶ Care should be taken to avoid contact with the skin, the face and neck.



Caution! Danger of product damage

- ▶ Never use your appliance without paying attention!
- ▶ Always unplug the unit when not in use or left unattended.
- ▶ Do not wrap the cord around the appliance.
- ▶ Do not use outdoors or in damp areas.
- ▶ Never carry the unit by its power cord.
- ▶ Allow the appliance to cool before storing away.



Caution! Risk of fire

- ▶ When finished with the appliance, please do not place it near flammable goods when it is still at a high temperature, otherwise this may cause a fire.

BEARD STRAIGHTENER BRUSH

OPERATING INSTRUCTIONS

1. Ensure the beard or hair is dry and combed or brushed through prior to using the straightening brush.
2. Plug the appliance into a suitable mains socket and switch on, the power indicator light will illuminate.
3. Maximum heat will be reached after heating for 2 minutes.
4. Brush your beard or hair to obtain the desired style.
5. When styling hair, don't hold the brush for more than 5 seconds in the same area to avoid damaging the hair.
6. If used for a long time, the handle near the heating part of the comb may become hot - please be careful.
7. Always hold the brush by the handle.
8. After use unplug the brush and once it is completely cool store in a safe dry place.



Always do a test section before using the brush to ensure the desired result is achieved.

BEARD STRAIGHTENER BRUSH

CARE AND CLEANING

This appliance is intended for household use. Unplug product before cleaning. The product must be cleaned only when cool. Use a soft non-abrasive cloth that is slightly dampened with water to wipe styling working surface. Do not allow water or any other liquid to get into the handle of the straightening brush. Any other servicing should be performed by a qualified service centre. The product should not be stored while hot or plugged in. When not in use, allow straightening brush to cool, then simply put back in the box and store out of reach of children in a safe, dry location. Never wrap the cord around the straightening brush. This could cause the cord to wear prematurely and break.

WIRING



WARNING: If the supply cord is damaged it must be replaced by the manufacturers or a suitably qualified professional in order to avoid a hazard.

The wires in the mains lead of this appliance are coloured in accordance to the following code:

Blue Neutral (N) Brown Live (L)

This appliance is fitted with a 3 pin BS Approved BS1363 plug which has a 3amp fuse fitted. If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this curling tong may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter 'N' or coloured BLACK or BLUE.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED or BROWN.

DO NOT connect either wire to the terminal in the plug which is marked with the letter E, has the Earth symbol, or coloured GREEN or GREEN AND YELLOW

BEARD STRAIGHTENER BRUSH

DISPOSAL



Handle with care! Environmental damage in the case of incorrect disposal.

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Adhere to the relevant legal requirements when disposing of the appliance.

Information on the disposal of electrical and electronic appliances in the European Community:



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

BEARD STRAIGHTENER BRUSH

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 1 year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

WAHL (UK) LIMITED
STERLING HOUSE
CLIPPER CLOSE
RAMSGATE
KENT
CT12 5GG
CUSTOMER SERVICES T: 01227 740066
www.wahl.co.uk

Form No. ZB973 Rev0 02-20