

**WAHL®**

james  
**MARTIN**

electric  
**KNIFE**  
ZX711X / ZX773

Safety first

The blades of this appliance are extremely sharp, take great care.  
Never touch the blades while the appliance is plugged in.  
Always read your instructions before using for the first time.



Please read all instructions carefully to familiarise yourself with your new clipper before using.  
Save these instructions for further reference

For any further assistance or information call Customer Services on

**T:** 01227 740066

or visit

**W:** [www.wahl.co.uk](http://www.wahl.co.uk)


**E:** [customer.services@wahl.co.uk](mailto:customer.services@wahl.co.uk)

## **INDEX**

<b>PRODUCT DESCRIPTION</b>	Page 3
<b>IMPORTANT SAFEGUARDS</b>	Page 4
<b>OPERATING INSTRUCTIONS</b>	Page 8
<b>USING YOUR ELECTRIC KNIFE</b>	Page 8
<b>CLEANING &amp; MAINTENANCE</b>	Page 9
<b>WIRING INSTRUCTIONS</b>	Page 10
<b>PRODUCT REGISTRATION</b>	Page 10
<b>GUARANTEE</b>	Page 11

**PRODUCT DESCRIPTION**

1. Standard Blade
2. Blades Lock Release Buttons
3. Safety Switch
4. On/Off Switch
5. Cord Guard with Suction Pad
6. Frozen Food Blade

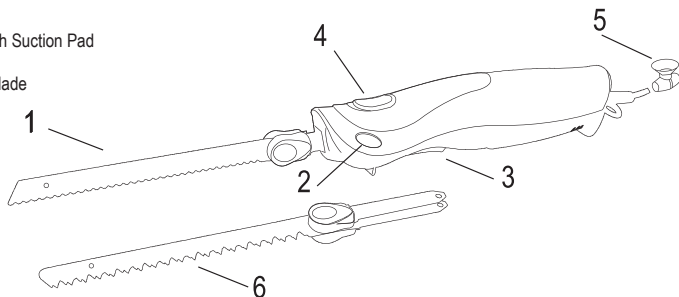

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

Read all instructions carefully before using the Electric Knife.

## **IMPORTANT SAFE GUARDS**

### **TO REDUCE THE RISK OF FIRE AND INJURY**

1. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved by a person responsible for their safety.
2. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

3. Ensure children do not play with this appliance.
4. Never touch or allow contact with moving parts while in motion.  
Keep hands, hair clothing and other utensils away from the moving parts during operation to prevent accident, injury or damage to the appliance.
5. Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
6. Never use your appliance without paying attention!  
Always unplug the unit when not in use or left unattended.

7. Do not operate the appliance with a broken cord or plug, or if the appliance malfunctions, or is dropped or damaged in anyway.
8. Any servicing or repair must be performed by an authorized service representative.
9. Do not let the cord hang over the edge of the work surface or let it touch any hot surfaces.
10. The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.
11. To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately.

Do not put your hands in the water.

12. Never carry the unit by its power cord.
13. Use this appliance only for its intended purpose.
14. The blades of this appliance are sharp, care is needed when handling the blades, especially when removing the blade from its mount and during cleaning, always handle the blades with your hand away from the cutting edge.
15. Do not attempt to disable any of the safety switches.
16. This appliance is intended for household use. Do not use outdoors or in damp areas.

**IMPORTANT** - The electric knife must not be used continuously for more than 15 minutes.

## OPERATING INSTRUCTIONS

### BEFORE FIRST USE

Blades are sharp! Always handle blades with sharp edges away from hand and body.

Wash the stainless steel blades in warm, soapy water, then dry thoroughly.

### ASSEMBLING BLADES

- Hold the blade ends by the safety guards and slip the rivet on the key hole of the other blade.
- Slide blades together lightly ensuring tips are interlocked.

### INSERTING BLADES

- Hold assembled blades by the safety guards and insert the blades into the blade slot pushing until both blades are locked into position - a clear 'click' sound will be heard.

### REMOVING BLADES

- Depress the blade release buttons with one hand, at the same time pulling the blades off with the safety

guards with the other hand.

### USING YOUR ELECTRIC KNIFE

- Interlock the blades together before inserting into the appliance.
- Insert the plug into a power outlet and switch on. Ensure the cord is clear from the blades.

**NOTE:** Always ensure blades are fully secured into position.

- Holding the knife with the handle, depress the safety switch at the bottom and then push the On/Off switch on the top forward to operate the knife.
- The unit will not operate unless both controls are activated at the same time. Releasing either one of the controls will stop the knife.
- When the carving is completed, remove the plug from the power outlet.


### SLICING HINTS

- Always place food to be sliced on a wooden or plastic cutting board. Do not slice food on china, metal or bench tops as scratching may occur.
- Guide blades through food. A sawing action is not



necessary. Do not force blades through food. However with the blades for frozen food, a light sawing action will help the cutting effectively.

- To maintain sharpness of blades, do not cut through bones, fruit pips, stones or any other hard substances or use the standard blade for frozen food.
- For best results when carving meat and poultry, allow cooked meat to stand for 10-15 minutes before slicing. This allows the juices to set and makes carving easier and neater.
- Before carving meat or chicken, remove any skewers. If desired, string may be left around the meat while carving.
- A carving fork is recommended for steadying the meat and assists in carving even slices
- Do not attempt to sharpen blades.

 **WARNING:** THE BLADES OF THIS APPLIANCE ARE VERY SHARP AND EXTREME CARE SHOULD BE TAKEN WHEN HANDLING AND USING THIS APPLIANCE. NEGLIGENCE OR IMPROPER USE COULD RESULT IN PERSONAL INJURY.

## CLEANING AND MAINTENANCE

Ensure the power outlet is switched off and the plug is removed before removing the blades and/or cleaning.

- Depress the Blade Release Buttons and hold the blades by the Safety Guards.
- Ensure the cutting edge of the blades facing downwards. Remove the blades from the housing as previous instruction.
- Unlock the blades by sliding them apart. Always hold blades by the Safety Guards when handling and cleaning.
- Wash the blades in warm soapy water with a soft cloth or sponge. Rinse thoroughly and dry completely.
- Do not use abrasive scouring pads or powders on the blades.
- After cleaning, always store blades in plastic sleeve provided.
- To clean motor housing wipe with a soft damp cloth.

## WIRING



**WARNING:** IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURERS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

**The wires in the mains lead of this knife are coloured in accordance to the following code:**

**Blue Neutral (N)**

**Brown live (L)**

**This appliance is fitted with a 3 pin plug which has a 3amp fuse fitted.**

If the plug supplied is not suitable for your socket or becomes damaged, it should be cut off and disposed of, and a suitable plug fitted as detailed below.

As the colours of the wires in the mains lead of this knife may not correspond with the colour markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured BLUE must be connected to

the terminal in the plug which is marked with the letter 'N' or coloured BLACK or BLUE.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter 'L' or coloured RED or BROWN.

DO NOT connect either wire to the terminal in the plug which is marked with the letter 'E' or has the Earth symbol, or coloured GREEN or YELLOW.

## PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at [www.wahl.co.uk](http://www.wahl.co.uk).

## GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 2 years from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include blades, cables etc., which are consumable parts.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

## WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)

At the end of this products life it should not be disposed of with general household waste. Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.



**WAHL (UK) LIMITED**  
**HERNE BAY TRADE PARK, SEA STREET**  
**HERNE BAY, KENT, CT6 8JZ.**  
**CUSTOMER CARE TEL: 01227 740066**

[www.wahl.co.uk](http://www.wahl.co.uk)

Form No. ZA822

Rev 3 10-14



james  
**MARTIN**