OPERATING MANUAL MULTI AIR STYLER

WAHL®

*The Brand Used By **Professionals**™*

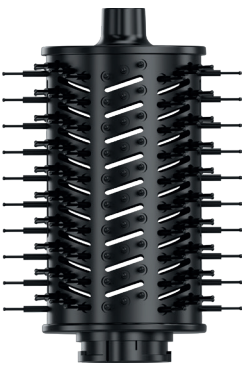


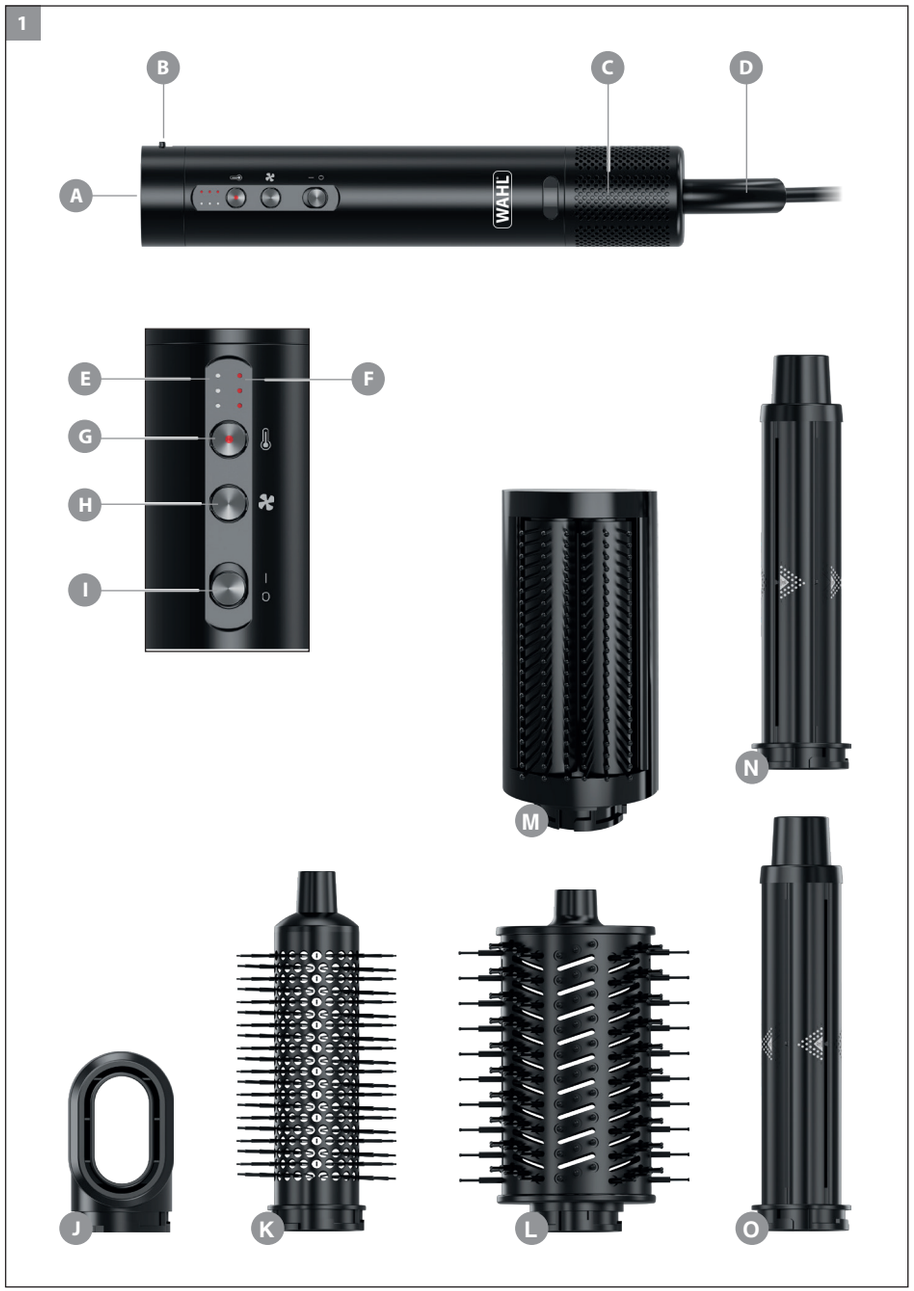


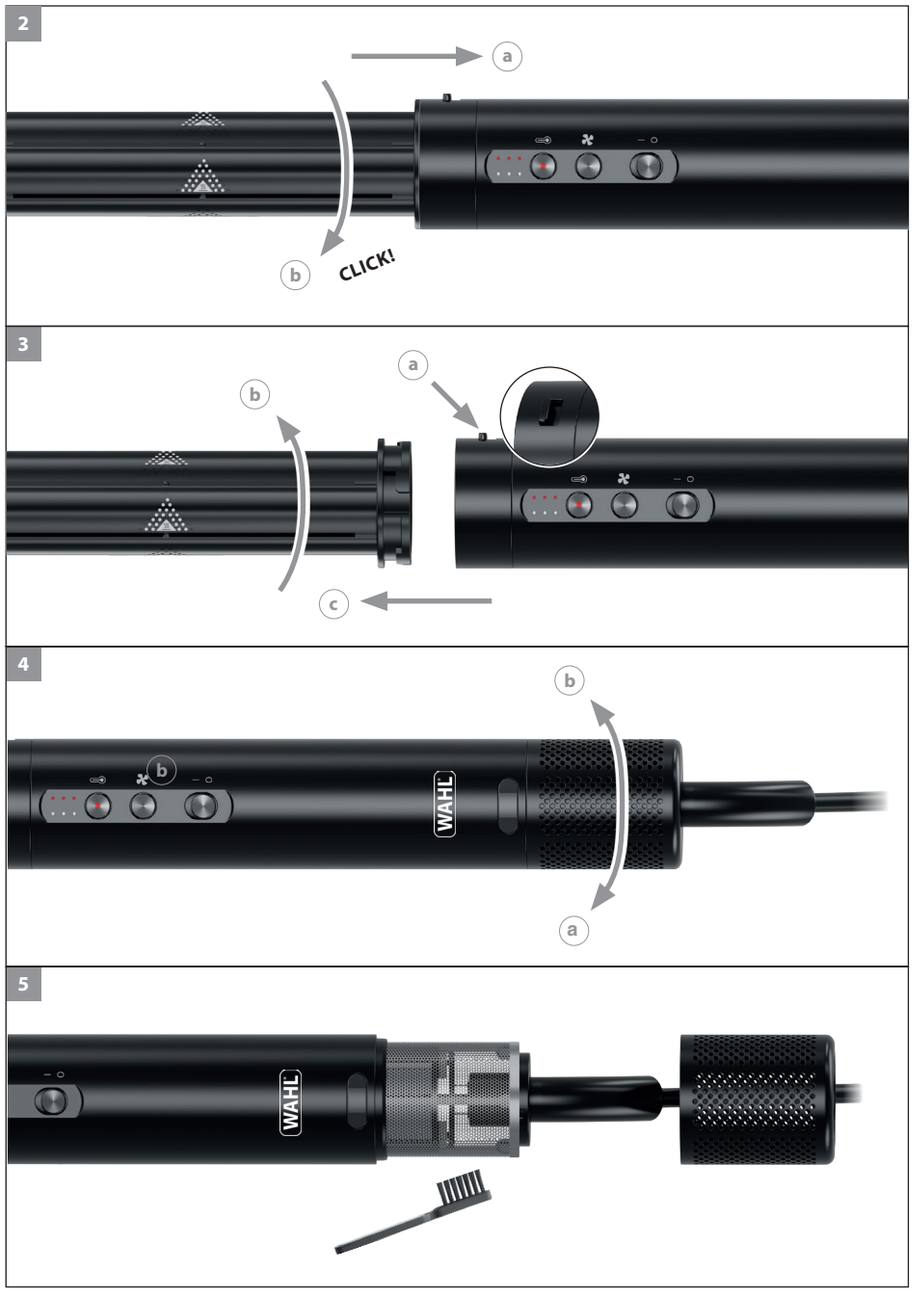









1
B
C
D
A
WAHL
E
F
G
H
I
M
N
J
K
L
O


2
a
b
CLICK!
3
b
a
c
4
b
WAHL
b
a
5
WAHL

Operating manual AeroSet 6 in 1 Multi Air Styler (LD340X / ZY223)

General safety instructions

Read and observe all safety instructions and store them in a safe place!

Intended use

- Only use the multistyler to dry and style hair.
- This appliance is designed for non-commercial use.

User requirements

- Read the operating manual in full and familiarise yourself with it before the first use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Only for European markets:
  This appliance can be used both by children from 8 years of age and persons with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must never be carried out by children, unless they are supervised.
- Keep packaging away from children because it can pose a danger (danger of suffocation!).
- Keep the appliance out of reach of animals and protected against the effects of the weather.

Hazards

Danger! Electric shock due to damage to appliance/ mains cable.

- Do not use the appliance if it is not working correctly, if it is damaged or if it has fallen into water. In order to avoid hazards, repairs may only be performed at an authorised service centre or by specialists properly trained in the handling of electrotechnical appliances, and using original spare parts.
- Never use the appliance if the mains cable is damaged. In order to avoid hazards, damaged mains cables may only be replaced at an authorised service centre or by specialists properly trained in the handling of electrotechnical appliances, and using original spare parts.

Danger! Electric shock due to penetration of liquid.

- Do not use the appliance near bathtubs, showers, washbasins or other water-filled containers. It should also not be used in areas of high humidity.
- If the appliance is being used in a bathroom, disconnect from the mains immediately after use because proximity to water presents a risk, even when the appliance is switched off.
- Always position or store electrical equipment where it cannot fall into water (e.g. washbasin).
- If you have wet hands, do not use the appliance and never connect it to or disconnect it from the mains.
- Never touch electrical equipment that has fallen into water and is connected to the mains, or reach into water to retrieve it. Disconnect from the mains immediately.
- Have the appliance inspected at a service centre before using it again.
- Only use and store the appliance in dry rooms.
- As an additional safety measure, it is recommended that a tested residual current appliance (RCD) with a residual operating current of not more than 30 mA be installed in the circuit. Ask an electrician for advice.

Danger of explosion!

- Never use the product in an environment with a high concentration of aerosol (spray) products or in which oxygen is released.

Danger! Flammable!

- The appliance must never be sprayed with aerosol (spray) products classified as flammable.

Warning! Burning and fire hazards

- Parts of the appliance may become hot during use. This poses a burning hazard!
- Always maintain a sufficient distance from any highly flammable items, such as drapes or curtains.
- Place the appliance on a solid and heat-resistant surface after use.
- Allow the appliance to cool down completely before cleaning or storing it.
- Do not leave the appliance unattended either during or after use.

Caution! Injuries due to incorrect handling.

- Only operate the appliance with the voltage stated on the nameplate.
- Only use accessories recommended by the manufacturer.
- Never insert or allow objects to fall into the openings of the appliance.

← Do not place any items in or around the air inlet and do not cover it.

- Do not carry the appliance by the mains cable and, when disconnecting the appliance from the mains, always pull the plug rather than the cable or the appliance.
- Keep the mains cable and appliance away from hot surfaces.
- Make sure that the mains cable is not twisted or kinked when stored.

General user information

Information about using the operating manual

- Before using the appliance for the first time, you must read and understand the operating manual completely.
- Consider the operating manual as part of the product and store it in a safe and accessible place.
- This operating manual is also available in PDF format from our service centres. The EC declaration of conformity can also be requested in other official EU languages from our service centres.
- Include this operating manual if passing the appliance on to a third party.

Explanation of symbols

The following symbols are used on the appliance:

PROHIBITED
This symbol prohibits the use of the appliance near bathtubs, showers, washbasins and other water-filled containers.

Protection class II symbol.

CE conformity marking.

UKCA conformity marking for the British market.

EAC conformity marking for the Eurasian Economic Union.

WEEE marking prohibiting the disposal of electrical and electronic devices with domestic waste.

The following symbols and signal words are used in our operating manual:

DANGER
Danger of electrical shock which may result in serious physical injury or death.

DANGER
Danger of explosion which may result in serious physical injury or death.

DANGER
Danger due to the use of flammable materials. Danger of fire development which may result in serious physical injury or death.

WARNING
Warning of possible physical injury or a health risk.

CAUTION
Information about danger of material damage.

Note with useful information and tips.

- Action to be taken by owner.

1. Carry out these actions in the sequence described.
2.
3.

Product description

Description of parts (Fig. 1)

A Air outlet
B Release button
C Air inlet aperture with removable cover
D Mains cable
E LED speed setting indicator
F LED temperature setting indicator
G Temperature level button
H Speed settings button
I On/off switch
J Dryer head
K Round brush
L Oval brush
M Flat brush for straightening
N Right curling barrel
O Left curling barrel

Technical data

Drive:	BLDC motor
Operating voltage:	220–240 V AC, 50/60 Hz
Power consumption:	max. 1400 W
Dimensions (Ø x L):	43 x 235 mm, not including mains cable and attachments
Weight:	approx. 300 g, not including mains cable and attachments
Emission sound pressure level:	max. 72 dB(A) @ 100 cm
Vibration:	< 2.5 m/s²
Operating conditions	
Ambient temperature:	0°C – +40°C

The appliance is safety insulated and radio screened. It meets the requirements of EU Electromagnetic Compatibility Directive 2014/30/EU and Machinery Directive 2006/42/EC.

Operation

Preparation

- ▶ Check that the contents are complete.
- ▶ Check all the parts for possible transport damage.

Safety

Caution! Damage due to incorrect power supply.
▶ Only operate the appliance with the voltage stated on the nameplate.

Operation

1. Insert the mains plug into the socket.

The multistyler has 4 temperature settings and 3 speed settings that, thanks to separate buttons, enable a total of 12 temperature-speed settings.

2. Use the on/off switch to switch on the multistyler.
3. Select the desired fan setting by pressing the ✣ button.

   LED fan setting indicator:
   - • Speed setting 1 for gentle air flow
   - •• Speed setting 2 for medium air flow
   - ••• Speed setting 3 for strong air flow
4. Select the desired temperature setting by pressing the 🌡 button. LED temperature setting indicator:
   - – Temperature setting 0 for cold air
   - • Temperature setting 1 for warm air
   - •• Temperature setting 2 for hotter air
   - ••• Temperature setting 3 for hot air
5. Using the on/off switch, switch off the multistyler after use.
6. Allow the multistyler and accessories to cool down.

Operation

Attaching/removing attachments

1. Insert the attachment into the air outlet of the appliance (Fig. 2ⓐ).
2. Turn the attachment in the direction of the arrow and lock it in position (Fig. 2ⓑ).
3. To remove the attachment, press the release button (Fig. 3ⓐ).
4. Turn the attachment in the direction of the arrow (Fig. 3ⓑ) and pull it out of the air outlet of the appliance (Fig. 3ⓒ).

Tips for successful styling

1. Wash and rinse the hair well.
2. Towel dry the hair.
3. Brush or comb the hair.
4. Attach the desired attachment to the multistyler.

Dryer head
Use the dryer head to dry hair or in preparation for styling.

Round brush
Use the round brush to create bounce, volume and soft curls.
To do this, place the round brush under the hair close to the scalp and slowly guide it to the tips of the hair.

Oval brush
- To create volume, place the brush head under the hair close to the hairline and roll it outwards to the tips. For more bounce, hold the appliance at the hairline for several seconds.
- To achieve a smooth finish, place the brush head under the hair close to the hairline and brush downward towards the tips.
- To curl the hair tips inwards, place the brush head under the tips and hold it there for several seconds before turning it inwards.
- To curl the hair tips outwards, place the brush head over the tips and hold it there for several seconds before turning it outwards.

Flat brush
Use the flat brush to get straight hair. Brush damp hair slowly and evenly from the hair root to the tips. The brush guides the air downward towards the hair tips.

Curling barrels
The left and right curling barrels make it possible to style the hair away from the face or towards the face.

▶ Always test an individual section of hair first.

1. Divide the almost dry hair into sections.
2. Hold the curling barrel several centimetres away from the end of the hair section and guide it towards the hair tips. The hair will automatically be drawn by the air flow and wrap around the curling barrel.
3. Move the curling barrel towards the hairline without turning it so the hair can wrap around further.
4. For looser curls, leave the hair wrapped around the curling barrel for about 10 to 15 seconds until the hair is dry.
5. Switch off the multistyler and pull it downwards to release the curl.

Styling tips
- When using round brushes and curling barrels, set the hairstyle by drying it with a cold air setting for 10 to 15 seconds.
- Use the round brush or the oval brush to lift the hair at the hairline before starting to make curls.

Overheat protection

The multistyler features overheating protection. See the chapter on problem solving.

Maintenance

Warning! Injuries and material damage due to incorrect handling.
← Switch off the multistyler before cleaning it or performing any maintenance. Disconnect the multistyler from the power supply.
← Allow the multistyler to cool down completely.

Cleaning and care

Danger! Electric shock due to penetration of liquid.
▶ Never immerse the multistyler in water!
▶ Do not allow any liquid to get inside the appliance.

Caution! Danger from aggressive chemicals.
Aggressive chemicals can damage the multistyler and accessories.
▶ Never use solvents or scouring agents.

Manual cleaning
- ▶ Only wipe the multistyler with a soft, slightly damp cloth.
- ▶ To maintain the performance of the multistyler, regularly clean the air inlet with a soft dry brush.

Proceed as follows:
1. Twist the cover in an anti-clockwise direction (Fig. 4ⓐ) and remove the cover.
1. Clean the cover and air inlet with a soft brush (Fig. 5).
2. Replace the cover and twist it in a clockwise direction until it stop into position (Fig. 4ⓑ).

Self-cleaning function

Caution! Neglecting to clean the appliance can result in damage.
▶ Carry out self-cleaning straight away if you notice any unusual noises, a noticeable reduction in air flow or an increase in the temperature of the multistyler.

- ▶ Use the self-cleaning function regularly to maintain the performance of your multistyler.

Proceed as follows:
1. Switch off the multistyler.
2. Twist the cover in an anti-clockwise direction (Fig. 4ⓐ) and remove the cover.
3. Press the ✣ button and hold it down for about 5 seconds. The motor starts, and air emerges from the multistyler in the reverse direction of flow.
1. After about 10 seconds, the self-cleaning function switches off automatically.
2. Replace the cover and twist it in a clockwise direction until it stop into position (Fig. 4ⓑ).

Problem solving

Multistyler is overheated

The multistyler switches off.
Cause: The overheat protection is active.
← Allow the multistyler to cool down.
← Clean the air inlet.

Multistyler won't work

Cause: Multistyler is overheated. See above. Defective power supply.
▶ Make sure that contact between the mains and the socket is faultless. Remove the mains connector from its receptacle and check the mains cable for possible damage.

In the event that this information does not help you resolve your problem, please contact our service centre. Never attempt to repair the appliance yourself!

Disposal

Caution! Environmental damage in the case of incorrect disposal.
▶ Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Adhere to the relevant legal requirements when disposing of the appliance.
Information on the disposal of electrical and electronic appliances in the European Union:

Within the European Union, national regulations are specified for the disposal of electrical appliances based on EU Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste. The appliance will be accepted free of charge by local collection points or recycling centres. The packaging for this product is made from recyclable materials. Dispose of this in an environmentally friendly manner by recycling it.

Guarantee

This product is guaranteed against defects in material and workmanship for a period of 1 year from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

WAHL®

The Brand Used By ***Professionals***™

For any further assistance or information
call Customer Services on
T: 01227 740066
or visit
W: www.wahl.co.uk
E: customer.services@wahl.co.uk

Wahl GmbH
Villinger Straße 4
D-78112 St. Georgen
Germany

Wahl (UK) Limited
Sterling House, Clipper Close
Ramsgate CT12 5GG
United Kingdom

www.wahl.com

Form No. ZC365
Rev.1 07/26